



Operating instructions
IO-Link master with PROFINET interface
CabinetLine
AL1901

GB

Contents

1	Preliminary note	6
1.1	Legal and copyright information	6
1.2	Symbols used	6
1.3	Warnings	6
1.4	Change history	6
2	Safety instructions	8
2.1	Cyber security	8
2.2	Safety symbol on the device	8
3	Intended use	9
4	Function	10
4.1	IO-Link	10
4.1.1	IO-Link supply	10
4.2	Parameter setting	10
4.3	PROFINET	10
4.4	ifm IoT Core	10
4.5	Visual indication	11
4.6	Digital inputs	11
5	Installation	12
5.1	Install device	12
6	Electrical connection	13
6.1	Overview	13
6.2	General wiring information	13
6.2.1	General notes on wiring	13
6.3	IO-Link ports (Class A)	13
6.3.1	Connecting IO-Link devices (Class A)	14
6.3.2	Connecting IO-Link devices (Class B)	14
6.4	Voltage supply	15
7	Operating and display elements	16
7.1	LEDs	16
7.1.1	Status	16
7.1.2	Ethernet	16
7.1.3	Voltage supply	16
7.1.4	IoT	16
7.1.5	IO-Link ports (class A)	17
8	Set-up	18
9	Settings	19
9.1	Parameter setting software	19
9.1.1	Supported parameter setting software	19
9.1.2	Getting started	19
9.1.2.1	Online parameter setting	20
9.1.2.2	Offline parameter setting	20
9.1.3	IoT interface	20
9.1.3.1	Configuring IP settings	20
9.1.3.2	Configuring access rights	21
9.1.3.3	Configuring the interface to the monitoring software	21
9.1.4	Fieldbus interface	22
9.1.4.1	Configure the PROFINET interface	22
9.1.5	IO-Link ports	23
9.1.5.1	Setting data transmission to the monitoring software	23
9.1.5.2	Setting the operating mode Pin 4 (US)	23
9.1.5.3	Setting the device validation and data storage	24
9.1.5.4	Setting the cycle time	25
9.1.6	Device information	26
9.1.6.1	Reading identification information	26
9.1.7	Device control	26
9.1.7.1	Resetting the device	26

9.1.7.2	Restarting the device	26
9.1.8	Updating the firmware	26
9.1.9	Setting the parameters of IO-Link devices	27
9.2	ifm IoT Core REST API	29
9.2.1	ifm IoT Core: General information	29
9.2.1.1	Accessing the ifm IoT Core	29
9.2.2	Getting started	29
9.2.3	General functions	29
9.2.3.1	Example: Reading properties of an element	29
9.2.3.2	Example: Outputting the subtree	31
9.2.3.3	Example: Changing a parameter value	33
9.2.3.4	Example: Read multiple elements sequentially	34
9.2.3.5	Example: Browsing device description	35
9.2.4	IoT interface	35
9.2.5	Fieldbus interface	35
9.2.5.1	Fieldbus: Configure the PROFINET interface	35
9.2.6	IoT: Configuring access rights	36
9.2.7	IoT: Configuring IP settings	36
9.2.8	IoT: Configuring security mode	37
9.2.8.1	Example: Activating security mode	37
9.2.8.2	Example: Request with authentication	38
9.2.8.3	Example: Resetting the password	39
9.2.9	IoT: Configuring the interface to the monitoring software	39
9.2.10	Ports: Setting the operating mode Pin 4 (US)	39
9.2.11	Ports: Configuring device validation and data storage	40
9.2.11.1	Example: Cloning the data memory of an IO-Link port	41
9.2.12	Ports: Setting data transmission to the monitoring software	43
9.2.13	Ports: Reading / writing process data	43
9.2.13.1	Example: Reading an IO-Link process value (operating mode "IO-Link")	44
9.2.13.2	Example: Reading an IO-Link process value (operating mode "IO-Link")	44
9.2.13.3	Example: Reading the digital input value (operating mode "DI")	45
9.2.13.4	Example: Writing the digital output value (operating mode "DO")	45
9.2.14	Ports: Reading port events	46
9.2.15	Timer: Configuring the timers	46
9.2.15.1	Set the counting interval	47
9.2.16	IO-Link devices: Accessing parameters	47
9.2.16.1	Example: Reading a parameter value of an IO-Link device	48
9.2.16.2	Example: Writing a parameter value of an IO-Link device	48
9.2.17	IO-Link devices: Reading and writing device information	49
9.2.18	IO-Link devices: Reading IO-Link events	49
9.2.19	Gateway: Set the application tag	50
9.2.20	Gateway: Update firmware	50
9.2.21	Gateway: Reading status and diagnostic information	50
9.2.22	Gateway: Reading device information	51
9.2.23	Gateway: Resetting, rebooting and localising the device	51
9.2.24	Notifications	51
9.2.24.1	Event-controlled notifications	51
9.2.24.2	Time-controlled notifications	52
9.2.24.3	Example: Subscribing to notifications	52
9.2.24.4	Example: Changing a notification	53
9.2.24.5	Example: Subscribing to a notification in CSV format	54
9.2.24.6	Example: Unsubscribing from a notification	55
9.2.24.7	Example: checking a notification	55
9.3	IoT Core Visualizer	56
9.3.1	Starting the IoT-Core Visualizer	56
9.3.2	Managing notifications	57
9.3.2.1	Creating a new notification	57
9.3.2.2	Deleting a notification	57
9.3.3	Searching for elements of the IoT Core	58
9.3.4	Configuring the IO-Link master	59
9.3.5	Accessing process data	60
9.3.6	Update firmware	61

9.4	PROFINET	62
9.4.1	Note: Startup package	62
9.4.2	Install the GSD file	62
9.4.3	Integrating the device into a project.	62
9.4.3.1	Use S2 redundancy.	62
9.4.3.2	Use Configuration-in-Run	63
9.4.4	Configuring the device	63
9.4.4.1	Selecting the device profile	63
9.4.4.2	Configuring the IO-Link master	64
9.4.4.3	Setting the port function	64
9.4.4.4	Parameter setting of the ports	65
9.4.4.5	Loading the configuration to the device	65
9.4.5	Accessing IO-Link device	66
9.4.6	Use I&M data records	66
10	Maintenance, repair and disposal	68
10.1	Cleaning the housing surface	68
10.2	Update firmware	68
11	Appendix	69
11.1	ifm IoT Core	69
11.1.1	Profiles	69
11.1.2	Types	69
11.1.3	Services	70
11.1.3.1	Service: factoryreset	70
11.1.3.2	Service: getssubscriberlist	70
11.1.3.3	Service: getssubscriptioninfo	70
11.1.3.4	Service: getblobdata	71
11.1.3.5	Service: getdata	71
11.1.3.6	Service: getdatamulti	71
11.1.3.7	Service: getelementinfo	71
11.1.3.8	Service: getidentity	72
11.1.3.9	Service: gettree	72
11.1.3.10	Service: install	73
11.1.3.11	Service: iolreadacyclic	73
11.1.3.12	Service: iolwriteacyclic	73
11.1.3.13	Service: querytree	74
11.1.3.14	Service: reboot	74
11.1.3.15	Service: reset	74
11.1.3.16	Service: setblock	74
11.1.3.17	Service: setdata	75
11.1.3.18		75
11.1.3.19	Service: signal	75
11.1.3.20	Service: start	75
11.1.3.21	Service: start_stream_set	75
11.1.3.22	Service: stop	75
11.1.3.23	Service: stream_set	76
11.1.3.24	Service: validation_useconnecteddevice	76
11.2	PROFINET	77
11.2.1	Modules	77
11.2.1.1	IOLM Proxy Module	77
11.2.2	Submodules	78
11.2.2.1	IOLD Proxy Submodule: IO Mode	78
11.2.2.2	IOLD Proxy Submodule: Standard Mode	81
11.2.3	Parameters	83
11.2.3.1	IOLM Proxy Module	83
11.2.3.2	IOLD Proxy Submodule	84
11.2.4	Cyclic data	92
11.2.4.1	IOLM Proxy: Standard Mode	92
11.2.4.2	IOLM Proxy: IO Mode	93
11.2.4.3	IOLD Proxy: IO-Link n I / m O + PQI	94
11.2.4.4	IOLD Proxy: IO-Link n I + PQI	95
11.2.4.5	IOLD Proxy: IO-Link m O + PQI	96

11.2.4.6	IOLD Proxy: Digital Input	97
11.2.4.7	IOLD Proxy: Digital Output	98
11.2.5	Acyclical data	99
11.2.5.1	I&M data	99

1 Preliminary note

You will find instructions, technical data, approvals and further information using the QR code on the unit / packaging or at documentation.ifm.com.

1.1 Legal and copyright information

© All rights reserved by ifm electronic gmbh. No part of these instructions may be reproduced and used without the consent of ifm electronic gmbh.

All product names, pictures, companies or other brands used are the property of the respective rights owners.

1.2 Symbols used

- ✓ Requirement
- Instructions
- ▷ Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note
Non-compliance may result in malfunction or interference.
-  Information
Supplementary note

1.3 Warnings

Warnings indicate the possibility of personal injury and damage to property. This enables safe product handling. Warnings are graded as follows:

	WARNING Warning of serious personal injury ▷ If the warning is not observed, fatal and serious injuries are possible.
	CAUTION Warning of minor to moderate personal injury ▷ If the warning is not observed, minor to moderate injuries are possible.
	ATTENTION Warning of damage to property ▷ If the warning is not observed, damage to property is possible.

1.4 Change history

Issue	Subject	Date
00	New creation of the document	11 / 2023

Issue	Subject	Date
01	• Changed: Description and example MQTT command channel, MQTT support • Added: Note regarding UL applications, General notes on wiring (→ 13)	07 / 2024

2 Safety instructions

- The unit described is a subcomponent for integration into a system.
 - The system architect is responsible for the safety of the system.
 - The system architect undertakes to perform a risk assessment and to create documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the architect of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (→ Intended use).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the product must be carried out by qualified personnel authorised by the machine operator.
- Protect units and cables against damage.

2.1 Cyber security

ATTENTION

Device operation in an unprotected network environment.

- ▷ Unauthorised read or write access to data is possible.
- ▷ Unauthorised manipulation of the device function is possible.
- ▶ Restrict access to authorised users (e.g. password-protected access).
- ▶ Choose a safe method to connect with the device (e. g. VPN).
- ▶ Use encrypted data transmission (e. g. https / TLS).

2.2 Safety symbol on the device



Safety symbol on the device:

- ▶ Adhere to the operating instructions for the safe operation of the device.

3 Intended use

The device may only be used for the following purposes:

- IO-Link master for configuration, management and operation of IO-Link devices
- Gateway between IO-Link devices and a higher-level PROFINET control system

The device is designed as a control cabinet module for use in plant construction.

4 Function

4.1 IO-Link

The device offers the following IO-Link functions:

- IO-Link master (IO-Link revision 1.0 and 1.1)

4.1.1 IO-Link supply

The device offers supplies for 8 IO-Link devices (sensors, actuators).

Ports X01...X08 are class A ports.

The device ensures fire protection for connected IO-Link devices by providing an energy-limited circuit at the ports (according to IEC61010-1 and class 2 to UL1310).

4.2 Parameter setting

The device can be configured with the following options:

- Parameter setting software
 - ifm moneo OS + ifm moneo|configure
 - ifm moneo|configure free
- ifm IoT Core
 - ifm IoT Core Visualizer
- PROFINET
 - Projection software

4.3 PROFINET

Supported PROFINET functions:

- Device profile: PROFINET RT device (Conformance Class C)
- 2-port switch for access to the PROFINET interface; integrated switch complies with RT and IRT according to PROFINET V2.3
- Supported protocols: SNMP, LLDP, MRP, DCP, RTA, RTC Class 1 (not synchronised)
- I&M0 - 4 read / write
- Device description: GSDML file
- System redundancy S2
- Configuration in Run (CiR)

4.4 ifm IoT Core

- Mapping of the data, events and services of the device to an object model (ifm IoT Core)
- Integration of the device in IIoT applications
- Access to the ifm IoT Core:
 - Browser-based interface (IoT Core Visualizer)

4.5 Visual indication

The device displays the following indications:

- Status and error indication of the gateway and the system
- Status and activity indication of the Ethernet connection
- Status display of the voltage supply
- Status, error and short circuit/overload indication of the sensor ports

4.6 Digital inputs

The ports X01...X08 each have an additional digital input (type 2 according to EN 61131-2). The digital inputs are on pin 2.

The digital inputs are supplied via US. They refer to the potential of US (pin 3).

5 Installation

5.1 Install device



- ▶ Disconnect the power of the machine before installation.
- ▶ Only install the device on a grounded DIN rail.
- ▶ Integrate the device into a control cabinet (minimum protection: IP 20). The control cabinet should be installed in accordance with local and national rules and regulations.
- ▶ Install the device vertically on a 35 mm DIN rail.
- ▶ Leave enough space between the device and the top or bottom of the control cabinet as well as to adjacent devices to enable air circulation and to avoid inadmissible heating.

6 Electrical connection

6.1 Overview

6.2 General wiring information

The unit must be connected by a qualified electrician.

- ▶ Observe the national and international regulations for the installation of electrical equipment.

The unit is only suitable for operation using SELV/PELV voltages.

- ▶ Take information about IO-Link configuration into consideration!

This device contains components that may be damaged or destroyed by electrostatic discharge (ESD).

- ▶ Please observe the required precautions against electrostatic discharge!

By means of basic insulation according to EN61010-1, the circuits are isolated from each other and from device surfaces that could be touched (secondary circuit with max. 30 V DC, supplied from mains circuit up to 300 V overvoltage category II).

By means of basic insulation according to EN61010-1, the communication interfaces are separated from each other and from device surfaces that could be touched (secondary circuit with V DC maximum, supplied from mains circuit up to 300 V overvoltage category II). They are designed for network environment 0 according to IEC TR62102).

6.2.1 General notes on wiring

For UL applications:



CAUTION

Short circuit between the sensor inputs of the IO-Link ports

- ▷ Fire Hazard / Danger of electric shock
- ▶ Do not interconnect terminations.

- ▶ To connect the IO-Link master and the IO-Link devices, only use cables ranging from AWG 26 to 12 with a minimum temperature range of 75 °C.

6.3 IO-Link ports (Class A)

IO-Link devices (sensors, actuators) are connected to the device via the IO-Link ports.

The IO-Link ports X01...X08 meet the requirements of the IO-Link specifications 1.0 to 1.1.2.



CAUTION

Supply of energy to the IO-Link ports

 
- ▷ Risk of fire
- ▶ Prevent supply and feedback of energy to the IO-Link ports.
- ▶ Before set-up check the correct connection of the supply cables.

6.3.1 Connecting IO-Link devices (Class A)

Wiring information:

- The connected IO-Link devices must be supplied exclusively via the IO-Link master.
- The ports X01...X08 have an additional digital input (type 2, according to IEC 61131-2). The connected electronics must be electrically suited for this.

Wiring:



- 1: Sensor supply (US) L+
- 2: Digital input (DI)
- 3: Sensor supply (US) L-
- 4: C/Q IO-Link

- ▶ Connect the IO-Link devices to ports X01...X08. Maximum cable length per port: 20 m.
- ▶ For the connection, only use cables with the minimum protection rating IP 20.

6.3.2 Connecting IO-Link devices (Class B)

Wiring information:

- The connection of IO-Link devices (Class B) requires the supply with an additional auxiliary voltage UA. Max. current intensity for UA: 4 A
- When connecting an IO-Link device (Class B), the additional digital input (terminal 2) is not available.




CAUTION

Non-compliance with the electrical separation of the circuits


- ▷ Risk of fire
- ▶ Ensure that the external supply UA is electrically separated from the power circuit of the device by basic insulation (according to IEC 61010-1, secondary current circuit with max. 30 V DC, derived from mains circuit up to 300 V of overvoltage category II).
- ▶ Ensure that the IO-Link device and the connection technology used support the electrical separation.

Wiring diagram:

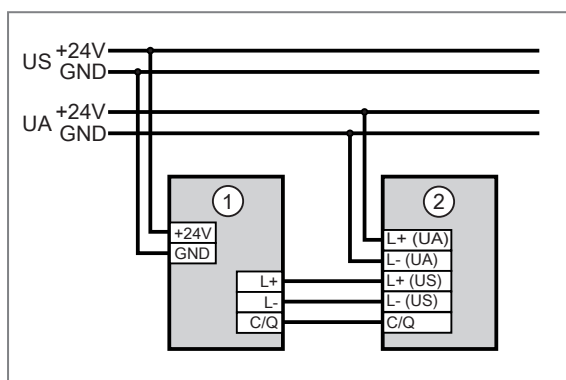

- 1: IO-Link master
- 2: IO-Link device

 Wiring:




- 1: Sensor supply (US) L+
- 2: not used
- 3: Sensor supply (US) L-
- 4: C/Q IO-Link

- ▶ Connect the IO-Link devices to ports X01...X08. Maximum cable length per port: 20 m.
- ▶ Connect the IO-Link devices to UA with 24 V DC (20...30 V SELV/PELV).
- ▶ For the connection, only use cables with the minimum protection rating IP 20.

6.4 Voltage supply

 The device is connected to the voltage supply via the power port.



- 1: GND (US)
- 2: GND (US)
- 3: + 24 V DC
- 4: + 24 V DC

4 3 2 1

- ▶ Disconnect power.
- ▶ Connect the device via port X31 to 24 V DC (20...30 V SELV/PELV).
- ▶ For the connection, only use cables with the minimum protection rating IP 20.



Recommended max. cable length: 25 m

- ▶ In case of cables that are longer than 25 m, take the voltage drop and the necessary minimum supply voltage of 20 V into consideration.

7 Operating and display elements

7.1 LEDs

7.1.1 Status

LED	Description	Colour	State	Description
RDY	Gateway status	green	Off	Not active or reboots
			flashes (5 Hz)	Error
			flashes (200 ms on, 800 ms off)	Firmware update running
			On	OK
BF	PROFINET connection status (bus failure)	Red	Off	PROFINET: error-free
			Flashes (1 Hz)	PROFINET: no connection to the controller
			On	PROFINET: bus error
SF	System-Status (System Failure)	Red	Off	System: error-free
			On	System: Error in the gateway or at least one IO-Link port reports warning / alarm (temperature, overcurrent, undercurrent, overvoltage, undervoltage, short circuit)

7.1.2 Ethernet

LED	Description	Colour	State	Description
LNK	Status of the connection	Green	Off	No Ethernet connection
			On	Ethernet connection established
ACT	Status of the transmission	Yellow	Off	No data transmission
			Flashes	Data transmission

7.1.3 Voltage supply

LED	Description	Colour	State	Description
PWR	Status of the voltage supply	Green	Off	no supply voltage is applied or the applied supply voltage is too low
			On	Supply voltage US is connected

7.1.4 IoT

LED	Description	Colour	State	Description
LNK	Status of the connection	Green	Off	No Ethernet connection
			On	Ethernet connection established
IoT	Device identification	Green	Flashes	Device identification active
ACT	Status of the data transmission	Yellow	Off	No data transmission
			Flashes	Data transmission

7.1.5 IO-Link ports (class A)

LED	Description	Colour	State	Description
	Status of the IO-Link port (pin 4)	Yellow	Off	Port mode DI / DO: Pin 4 (C/Q) = OFF
			On	Port mode DI / DO: Pin 4 (C/Q) = ON
		Green	Flashes (1 Hz)	Port mode IO-Link: No IO-Link device found
			Flashes (5 Hz)	Port mode IO-Link: "PREOPERATE" state
			On	Port mode IO-Link: "OPERATE" state
		Red	Flashes (1.2 Hz)	IO-Link communication error
			On	Port configuration error or short circuit / overload at US
DI	Status of the digital input (pin 2)	Yellow	Off	Digital input: Pin 2 = OFF
			Flashes (5 Hz)	Digital input: Pin 2 = ON

8 Set-up

- ▶ Install the unit correctly.
- ▶ Establish a correct electrical connection with the device.
- ▷ Once connected to the supply voltage, the unit will start.
- ▷ The LEDs show status and error conditions.
- ▷ The unit is ready for operation.
- ▷ The device can be configured.

9 Settings

9.1 Parameter setting software

9.1.1 Supported parameter setting software

For parameterising the IO-Link master and the connected IO-Link devices a parameter setting software is required.

Supported parameter setting software

- ifm moneo OS (art no. QMS001) + module licence ifm moneo|configure (art. no. QMP020)
- ifm moneo|configure free



► For a correct installation: observe the installation instruction for ifm moneo.

► Install the desired parameter setting software.


► Activate the licences required for operation.

► The installed parameter setting software can be used for parameter setting of the device.

9.1.2 Getting started

Requirements:

- ✓ The laptop / PC is connected directly or via a suitable network coupling element (e.g. switch) to an IoT port (X23) of the device.

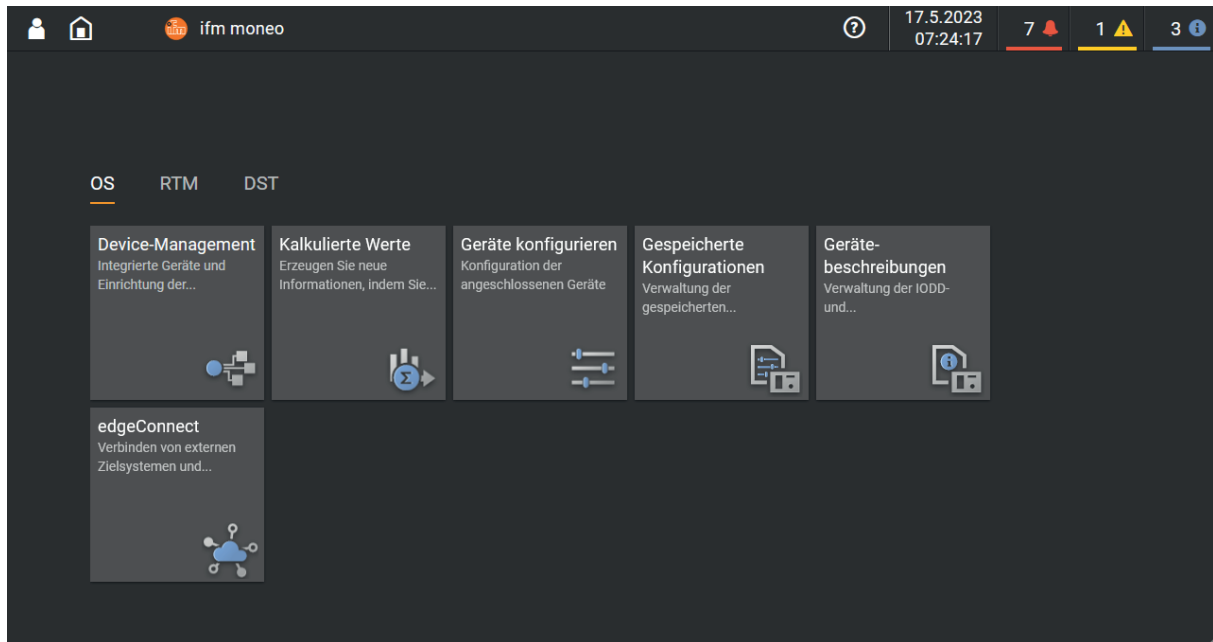

► View of [connected devices] appears.

► Scan the network for devices.

► ifm moneo detects the IO-Link master.

► Optional: Adapt the IP settings of the IO-Link master.

9.1.2.1 Online parameter setting

The parameters of the IO-Link master and the connected sensors and actuators can be set before installation and set-up or during operation.



If you change parameters during operation, this will influence the function of the plant.

► Ensure that there will be no malfunctions in your plant.

During the parameter setting process, the IO-Link master and the connected IO-Link devices stay in operating mode. They continue to perform their functions with the existing parameters until the parameter setting has been completed.

9.1.2.2 Offline parameter setting

The device supports offline parameter setting. The user creates a configuration for the IO-Link master and the connected IO-Link devices without being connected to the device. The configuration created can be stored as a file (*.lrp) and loaded to the device and activated at a later point.

9.1.3 IoT interface

The [IoT] menu provides access to the parameters of the IoT interface.

9.1.3.1 Configuring IP settings

For communication with the IT network, the IP parameters of the IoT interface must be configured.

Available parameters:

Parameter	Description	Value range	Access
[DHCP]	Enable / disable the DHCP client	[Static IP]: DHCP client disabled; IP parameters are set by the user [DHCP]: DHCP client enabled; IP parameters are set by the network's DHCP server.	rw ¹
[IP address]	IP address of the IoT interface	e.g. 192.168.1.100 • 169.254.x.x(default)	rw ^{1 2}
[Subnet mask]	Subnet mask of the Ethernet network	e.g. 255.255.255.0 • 255.255.0.0 (Default)	rw ^{1 2}
[Default gateway IP address]	IP address of the network gateway	e.g. 192.169.1.1 • 0.0.0.0 (Default)	rw ^{1 2}
[MAC address]	MAC address of the IoT interface	e.g. 00:02:01:0E:66:C1	ro ³

¹ Read and write

² can only be changed if DHCP is disabled

³ Read only

To configure the IoT interface:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- Select [IoT] menu.
 - ▷ The menu page shows the current settings.
- Set IP parameters.
- Write the changed values to the device.
- ▷ IP settings of the IoT interface are configured.

9.1.3.2 Configuring access rights

The device can be integrated in parallel into a fieldbus environment and into an IT network structure for IIoT applications ("Y-path"). To avoid competing access to parameters and process data, the rights of the instances must be set.

Available parameters:

Parameter	Description	Value range	Access
[Access rights]	Access rights to parameters, process data and alarms / events	• [Fieldbus + IoT]: – Fieldbus and ifm IoT Core have read and write access rights to parameters and process data – Fieldbus and ifm IoT Core have read access rights to events / alarms • [Fieldbus + IoT (read only)]: – Fieldbus has read and write access rights to parameters and process data – Fieldbus has read access rights to events / alarms – ifm IoT Core has read access rights to parameters, process data and events / alarms • [IoT only]: – ifm IoT Core has read and write access rights to parameters and process data – ifm IoT Core has read access rights to events / alarms – Fieldbus has no access rights	rw ¹

¹ Read and write

When setting the parameters of the access rights in the parameter setting software, observe the following notes:

- If the access rights in the fieldbus projection software and ifm moneo|configure are set to the [Fieldbus + IoT] value, the parameter values set on the fieldbus side always apply.
- For exclusive access to the device via ifm moneo|configure, set the access rights to the [IoT only] value and set the access rights to [Keep settings] in the fieldbus projection software.
- If the access rights in have been set to the [Fieldbus + IoT (read only)] value, the access rights in ifm moneo|configure can no longer be changed. To regain write access with ifm moneo|configure, set the access rights in the fieldbus projection software to the [Fieldbus + IoT] value.

To configure the access rights:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ▶ Select the [IoT] menu.
 - ▷ The menu page shows the current settings.
- ▶ Set the access rights.
- ▶ Write the changed values to the device.
- ▶ Restart the device.
 - ▷ The changed access rights are active.

9.1.3.3 Configuring the interface to the monitoring software

To enable transmission of the process data of the IO-Link master to the monitoring software (e.g. ifm moneo suite), the interface must be configured accordingly.

Available parameters:

Name	Description	Value range	Access
[IP address LR Agent or SMARTOBSERVER]	IP address of the monitoring software	e.g. 255.255.255.255 (default)	rw ¹
[Port LR Agent or SMARTOBSERVER]	Port number of the monitoring software	• 0: 0 ... • 35100: 35100 (default) ... • 65535: 65535	rw ¹
[Interval LR Agent or SMARTOBSERVER]	Interval for data transmission to the monitoring software (value in milliseconds)	• [Disabled]: No transmission (default) • 500: 500 ms ... • 2147483647: 2147483647 ms	rw ¹
[Application tag]	Source identifier of the device in the monitoring software	e.g., factory 2 plant 1	rw ¹

¹ Read and write

To set the interface to the monitoring software:



After changing the parameters [Port LR Agent or SMARTOBSERVER] or [Application Tag], it may take 120 seconds before the device establishes a new TCP connection.

To prevent the delay:

- ▶ When the parameter has been changed, restart the IO-Link master.

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select the [IoT] menu.
 - ▷ The menu page shows the current settings.
- ▶ Set the parameters of the interface.
- ▶ Write the changed values to the device.
- ▷ Interface to the monitoring software has been set.

9.1.4 Fieldbus interface

The [Fieldbus] menu provides access to the parameters of the PROFINET interface.

9.1.4.1 Configure the PROFINET interface

For communication with the PROFINET network, the IP parameters of the PROFINET interface must be configured.

Available parameters:

Parameter	Description	Value range	Access
[IP address]	IP address of the Ethernet interface:	e.g. 192.168.82.100 • 0.0.0.0 (default)	rw ¹
[Subnet mask]	Subnet mask of the fieldbus network	e.g. 255.255.0.0 • 0.0.0.0 (default)	rw ¹
[Default gateway IP address]	IP address of the network gateway	e.g. 192.168.1.1 • 0.0.0.0 (default)	rw ¹
[Hostname]	PROFINET name of the device	e.g. iol12.plant1 • alxx0x (default)	rw ¹

Parameter	Description	Value range	Access
[MAC address]	MAC address of the device's Ethernet interface	e.g. 00:02:01:0f:c8:8f	ro ²
[Fieldbus firmware]	Version of the fieldbus firmware	e.g. 5.3.0.700 (PROFINET IO Device)	ro ²

¹ Read and write

² Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select the [Fieldbus] menu.
 - ▷ The menu page shows the current settings.
- ▶ Set the parameters of the PROFINET interface.
- ▶ Save the changes on the device.
- ▷ PROFINET interface is configured.

9.1.5 IO-Link ports

The [Port x](x:1...8) menus provide access to the parameters of the IO-Link ports X01...X08.

9.1.5.1 Setting data transmission to the monitoring software

Available parameters:

Name	Description	Value range	Access
[Transmission to LR Agent or SMARTOBSERVER]	Enable / Disable the transmission of process data of the port to the monitoring software	• [Disabled]: Process data is not transmitted • [Enabled]: Process data is transmitted	rw ¹

¹ Read and write

To set the data transmission:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ✓ Interface to the monitoring software has been configured.
- ▶ Select the [Port x] (x = 1...8) menu.
 - ▷ The menu page shows the current settings.
- ▶ Set the parameters.
- ▶ Write the changed values to the device.
- ▷ Data transmission to the monitoring software has been set.

9.1.5.2 Setting the operating mode Pin 4 (US)

Available parameters:

Parameter	Description	Value range	Access
[Mode Pin4 US]	Operating mode of Pin 4 (C/Q) of the port	• [Disabled]: Port deactivated • [DI]: Digital input • [DO]: Digital output • [IO-Link]: IO-Link process data	rw ¹

¹ Read and write

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select the [Port x] (x = 1...8) menu.
 - ▷ The menu page shows the current settings.
- ▶ Set the operating mode.
- ▶ Save the changes on the device.
- ▷ Operating mode of pin 4 (US) of the port has been set.

9.1.5.3 Setting the device validation and data storage

The device supports the functions device validation and backup / restore of parameter data of the connected IO-Link devices.

The following options are available:

Option	Validation of the connected IO-Link device	Backup of parameter values	Restore of parameter values
[No check and clear]	No	No	No
[Type compatible V1.0 device]	Yes, test compatibility with IO-Link standard V1.0	No	No
[Type compatible V1.1 device]	Yes, test compatibility with IO-Link standard V1.1	No	No
[Type compatible V1.1 device with Backup + Restore]	Yes, test compatibility with IO-Link standard V1.1 and identity of design (vendor ID, device ID)	Yes, automatic backup of parameter values; Changes to the current parameter values will be stored	Yes, restore of parameter values when connecting an identical IO-Link device with factory settings
[Type compatible V1.1 device with Restore]	Yes, test compatibility with IO-Link standard V1.1 and identity of design (vendor ID, device ID)	No, there is no automatic backup; Changes to the parameter values are not stored	Yes, restore of parameter values when connecting an identical IO-Link device with factory settings



Device validation and backup / restore of parameter values are only available if the “IO-Link” operating mode of the port has been activated.

For options [Type compatible V1.1 device with Backup + Restore] and [Type compatible V1.1 device with Restore]: If the parameters [Vendor ID] or [Device ID] are changed in online mode, the data memory is deleted and the parameter values of the connected IO-Link device are backed-up again in the IO-Link master.

Available parameters:

Parameter	Description	Value range	Access
Validation / Data Storage	Validation of the connected IO-Link devices and automatic restore of parameter sets of the IO-Link device	• No check and clear • Type compatible V1.0 device • Type compatible V1.1 device • Type compatible V1.1 device with Backup + Restore • Type compatible V1.1 device with Restore	rw ^{1 2}

Parameter	Description	Value range	Access
Vendor ID	Vendor ID of the IO-Link device to be validated against	e.g., 310: ifm electronic gmbh	rw ^{1 2}
Device ID	Device ID of the IO-Link device to be validated against	e.g., 1129: TCC501 (ifm temperature sensor)	rw ^{1 2}

¹ Read and write

² Parameter only available if operating mode pin 4 (US) = IO-Link and IO-Link device is connected to the port

To configure the device validation and the backup / restore of parameter values:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ✓ Operating mode of pin 4 of the port is "IO-Link".
- ▶ Select the [Port x] > [IO-Link] menu (x = 1...8).
 - ▷ The menu page shows the current settings.
- ▶ Set the parameters for device validation and backup / restore of parameter values.
- ▶ Optional: Enter the vendor ID and device ID.
- ▶ Save the changes on the device.
- ▷ Device validation and backup / restore of parameter values have been configured.

9.1.5.4 Setting the cycle time

In the IO-Link operating mode, the cycle time of the port can also be set.

Available parameters:

Parameter	Description	Value range	Access
[Cycle time actual]	Current cycle time between the IO-Link master and the IO-Link device (value in μ s)	• 0: best possible cycle time ... • 132800: 132800 μs	ro ^{1 2}
[Cycle time preset]	Cycle time between the IO-Link master and the IO-Link device (value in μ s)	• 0: best possible cycle time • 1: 1 μs ... • 132800: 132800 μs	rw ^{3 2}
[Bit rate]	Transmission rate between the IO-Link master and the IO-Link device	• COM1: 4.8 kbaud • COM2: 38.4 kbaud • COM3: 230.4kbaud	ro ^{1 2}

¹ Read only

² Parameter only available if operating mode pin 4 (US) = IO-Link and IO-Link device is connected to the port

³ Read and write

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ✓ Operating mode of pin 4 of the port is "IO-Link".
- ▶ Select the [Port x] > [IO-Link] menu (x = 1...8).
- ▶ Set the cycle time.
- ▶ Write the changed values to the device.
- ▷ Cycle time of the IO-Link port is set.

9.1.6 Device information

The [Info] menu provides access to the identification information of the device.

9.1.6.1 Reading identification information

Available information:

To read the device information:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select [Info] menu.
- ▷ The menu page shows the device information.

9.1.7 Device control

The [Firmware] menu provides access to functions for controlling the device.

9.1.7.1 Resetting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [Factory reset].
- ▷ The device is reset to factory settings.
- ▷ All parameters are set to their default values.
- ▷ The device is read again.

9.1.7.2 Restarting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [Reboot].
- ▷ The device is restarted.
- ▷ All set parameter values will be retained.

9.1.8 Updating the firmware

To update the firmware of the device:

Requirements:

- ✓ New firmware has been downloaded. documentation.ifm.com

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ✓ The detailed view of the device is active.
- ▶ In the header: Click on .
- ▷ A dialogue window appears.
- ▶ Click on [Import firmware file].
- ▷ The file explorer appears.
- ▶ Select the firmware file (.bin) and click on [Open].
- ▷ The new firmware file is selected.
- ▶ Click on [OK].
- ▷ The firmware of the device is updated.
- ▷ The status of the update process is displayed.
- ▷ The firmware of the device has been updated.

9.1.9 Setting the parameters of IO-Link devices

The device supports access to connected IO-Link devices (sensors, actuators).



Information about the parameters of the IO-Link device:

- Operating instructions IO-Link device
- IODD description of the IO-Link device

Requirements:

- ✓ ifm moneo|configure has been started.
- ✓ Operating mode pin 4 (US) of the port with the IO-Link device is „IO-Link“.
- ✓ IoT has read and write access rights for the IO-Link master.
- ✓ The IO-Link device is properly connected to the IO-Link port of the device.
- ✓ The IODD library of ifm moeno|configure contains the IODD of the IO-Link device.
- ▶ Scan the network for devices.
 - ▷ ifm moneo|configure detects the IO-Link master.
- ▶ Establish connection to the IO-Link master.
 - ▷ ifm moneo|configure detects the connected IO-Link device.
- ▶ In the row of the IO-Link device: Click on .
- ▷ The detailed view of the IO-Link device appears.
- ▷ The detailed view shows the current parameter values of the IO-Link device.

ifm moneo 7.3.2023 12:00:04 8 1 10

< ZURÜCK Verbunden: AL1060 (undefined) / Port 1 / winkelmesser (MVQ101)

Identifikation Parameter Diagnose

Anwendungsspezifisches Kennzeichen: winkelmesser

Anlagenkennzeichen: ***

Ortskennzeichen: ***

Produktname: MVQ101 Seriennummer: MVQ101001336

Familie: MV Hardware-/Firmware-Revision: AA / 1.0.1

Hersteller: ifm electronic gmbh Beschreibung: Ventilsensor, -180.0...179.9 °, SVS

Hersteller-ID: 0x136 | 310 d | Bytes 1d 54d

Geräte-ID: 0x253 | 595 d | Bytes 2d 83d

PRODUKTSEITE

Quelle	Parametername	Wert	Derzeitiger Gerätewert	Minimum	Maximum	Beschreibung
Identifikation						
Anwendungsspezifisches Kennzeichen	winkelmesser	winkelmesser	winkelmesser	0	32	Möglichkeit ein Gerät mit benutzer- oder anwendungsspezifischen Informationen zu

ZUM GERÄT SCHREIBEN PARAMETERSATZ SPEICHERN VERWERFEN

Fig. 1: Example: Detailed view of the MVQ101 sensor

- Configure the IO-Link device.
- Store the changed configuration on the IO-Link device.
- ▷ The parameters of the IO-Link device have been set.

9.2 ifm IoT Core REST API

9.2.1 ifm IoT Core: General information

The device has the ifm IoT Core. The ifm IoT Core represents the functionality of the device. The functionality consists of a set of data, services and events. The elements of the ifm IoT Core are arranged in a JSON object in a hierarchical tree structure. The ifm IoT Core makes these elements available to the outside world via standard interfaces (e.g. HTTP) . This allows the user and other devices to access data (parameters, process data), events and functions (services) of the device.

9.2.1.1 Accessing the ifm IoT Core

Any element of the ifm IoT Core is accessed via its address (e.g. `root/port1/pin2`). The address is composed of the path leading to the element (`root/port1`) and the identifier of the element (`pin2`).

The user can access the ifm IoT Core via HTTP requests. The following methods are supported.

9.2.2 Getting started

To read the device description:

- Send the following POST request to the ifm IoT Core:

```
{ "code": "request", "cid": -1, "adr": "gettree" }
```
- ▷ The ifm IoT Core returns the device description as a structured JSON object.
- Identify all substructures and the data points contained therein in the tree structure of the JSON object.
- Identify the applicable services for the access to substructures and the data points contained therein.

9.2.3 General functions

The device has the type “device” (→ [Types](#) [69](#)). The following services can be applied to the root element of the device tree:

Service	Description
<code>../gettree</code>	Provide the complete tree or subtree of the device description (JSON)
<code>../getidentity</code>	Read identification information of the unit
<code>../getdatamulti</code>	Read multiple elements sequentially
<code>../getelementinfo</code>	Read detailed information of an element
<code>../getsubscriberlist</code>	Provide a list of all active notification subscriptions
<code>../querytree</code>	Search device description for specific elements

The following services can be applied to elements of the type `data` depending on the configured access rights:

Service	Description
<code>../getdata</code>	Read the value of the element
<code>../setdata</code>	Write the value of the element

9.2.3.1 Example: Reading properties of an element

Task: Determine the data type and value range of the `accessrights` parameter.

Solution: Read the properties of the element `iotsetup/accessrights` of the `getelementinfo` service. The fields `type` (data type) and `valuation` (range of values) contain the required information.

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "getelementinfo",
  "data": {"adr": "iotsetup/accessrights"}
}
```

Response:

```
{
  "cid": 4711,
  "data": {
    "identifier": "accessrights",
    "type": "data",
    "profiles": ["parameter"],
    "format": {
      "type": "enum",
      "namespace": "json",
      "encoding": "integer",
      "valuation": {
        "valuelist": {
          "0": "Fieldbus + IoT",
          "1": "Fieldbus + IoT (read-only)",
          "3": "IoT only"
        }
      }
    }
  },
  "code": 200
}
```

The accessrights parameter has the data type ENUM with the valid values "Fieldbus + IoT", "Fieldbus + IoT (read only)" and "IoT only".

9.2.3.2 Example: Outputting the subtree

Task: Output all direct sub-elements of the node firmware.

Solution: Use the service gettree to output the required subtree (root node: `firmware`, sub-levels to display: `1`)

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "gettree",
  "data": {
    "adr": "firmware",
    "level": 1
  }
}
```

Response:

```
{
  "cid":4711,
  "data":{
    "identifier":"firmware",
    "type":"structure",
    "profiles":["software","software/uploadablesoftware"],
    "subs":[{
      "identifier":"version",
      "type":"data",
      "profiles":["parameter"],
      "format":{
        "type":"string",
        "namespace":"json",
        "encoding":"UTF-8"
      }
    }],
    {
      "identifier":"type",
      "type":"data",
      "format":{
        "type":"string",
        "namespace":"json",
        "encoding":"UTF-8"
      }
    },
    {
      "identifier":"install",
      "type":"service"
    },
    {
      "identifier":"factoryreset",
      "type":"service"
    },
    {
      "identifier":"signal",
      "type":"service"
    },
    {
      "identifier":"container",
      "type":"data",
      "format":{
        "type":"binary",
        "namespace":"json",
        "encoding":"base64"
      }
    },
    {
      "identifier":"reboot",
      "type":"service"
    }
  ],
  "code":200
}
```

9.2.3.3 Example: Changing a parameter value

Task: The Application Tag parameter of the device is to be written with the value "Do not use". The new value is only supposed to be valid until the next reboot of the device.

Solution: Write the new value of the `/devicetag/applicationtag` element with the `setdata` service. To keep the new value only until the next restart of the unit, pass on the duration option with the uptime value.

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/devicetag/applicationtag/setdata",
  "data": {
    "duration": "uptime",
    "newvalue": "Do not use"
  }
}
```

Response:

```
{
  "cid": 4711,
  "code": 200,
}
```

9.2.3.4 Example: Read multiple elements sequentially

Task: The following current values of the device are to be read consecutively: temperature, serial number

Solution: Read the current parameter values using the service `getdatamulti` (data point temperature: `/processdatamaster/temperature`; data point serial number: `/deviceinfo/serialnumber`)

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/getdatamulti",
  "data": { "datatosend": [
    "/processdatamaster/temperature",
    "/deviceinfo/serialnumber"
  ] }
}
```

Response:

```
{
  "cid": 4711,
  "data": {
    "processdatamaster/temperature": {
      "code": 200,
      "data": 44
    },
    "deviceinfo/serialnumber": {
      "code": 200,
      "data": "000174210147"
    }
  },
  "code": 200
}
```

9.2.3.5 Example: Browsing device description

Task: All elements with the "timer" profile are to be listed.

Solution: Use the `querytree` service to search the device description with parameter "timer" (profile).

Request:

```
{
  "cid":4711,
  "code":"request",
  "adr":"querytree",
  "data":{
    "profile":"timer"
  }
}
```

Response:

```
{
  "cid":4711,
  "data":{
    "adrList":[
      "device/timer[1]",
      "device/timer[2]"
    ]
  },
  "code": 200
}
```

9.2.4 IoT interface

The device is connected to the IT network via the IoT interface.

9.2.5 Fieldbus interface

9.2.5.1 Fieldbus: Configure the PROFINET interface

The PROFINET interface is used to connect the device to the PROFINET network.

Substructure: fieldbussetup

Available data points:

Name	Description	Value range	Access
../network/ipaddress	IP address of the Ethernet interface:	e.g. 192.200.0.100 • 0.0.0.0 (default)	rw--- FE- HLENDE R LINK --- ¹
../network/subnetmask	Subnet mask of the network segment	e.g. 255.255.192.0 • 0.0.0.0 (default)	rw--- FE- HLENDE R LINK --- ¹
../network/ipdefaultgateway	IP address of the network gateway	e.g. 192.200.63.1 • 0.0.0.0 (default)	rw--- FE- HLENDE R LINK --- ¹
../network/macaddress	MAC address of the Ethernet interface	e.g. 00:02:01:0E:10:7C	ro ²

Name	Description	Value range	Access
../hostname	PROFINET name of the device	e.g., alxx0x	rw--- FE- HLENDE R LINK ---
../fieldbusfirmware	Firmware of the fieldbus	e.g. 5.3.0.700 (PROFINET IO Device)	ro ²
../connectionstatus	Status of the fieldbus connection	0: Not connected 1: Connected	ro ²

¹ Read and write; parameter can only be changed if no active connection to fieldbus controller

² Read only

Applicable services:

Name	Description
../network/setblock	Write all values of the substructure blockwise



► Change the parameters in the substructure network only block by block with the service setblock!

9.2.6 IoT: Configuring access rights

The device can be integrated in parallel into a fieldbus environment and into an IT network structure for IIoT applications ("Y-path").



Changes to the [Gateway: Resetting, rebooting and localising the device \(→ 51\)](#) data point will only take effect after the device has been restarted.

Substructure: iotsetup

Available data points:

When parameterising the access rights with the ifm IoT Core, observe the following notes:

- If the access rights in the fieldbus projection software and the parameter setting software are set to the [Fieldbus + IoT] value, the parameter values set on the fieldbus side always apply.
- For exclusive access to the device via the parameter setting software, set the access rights to the [IoT only] value and set the access rights to [Keep settings] in the fieldbus projection software.
- If the access rights in the ifm IoT Core are set to the value [Fieldbus + IoT (read only)], the access rights can no longer be changed via the ifm IoT Core. To regain write access with the parameter setting software, set the access rights in the fieldbus projection software to the [Fieldbus + IoT] value.

9.2.7 IoT: Configuring IP settings

Substructure: iotsetup/network

Available data points:

Parameter	Description	Value range	Access
../dhcp	Activate / deactivate DHCP mode	- static ip: DHCP client disabled; IP parameters are set by the user - dhcp: DHCP client enabled; IP parameters are set by the network's DHCP server.	rw ¹
../ipaddress	IP address of the IoT interface	e.g. 192.168.1.100 169.254.x.x (default)	rw ¹
../subnetmask	Subnet mask of the network segment	e.g. 255.255.255.0 255.255.0.0 (default)	rw ¹

Parameter	Description	Value range	Access
../ipdefaultgateway	IP address of the network gateway	e.g. 192.169.1.1 • 0.0.0.0 (default)	rw ¹

¹ Read and write

Applicable services:

Name	Description
../setblock	write all data points of the substructure blockwise



Write the data points of the substructure only with the `setblock` service!

9.2.8 IoT: Configuring security mode

The unit provides a security mode. The security mode makes it possible to protect access to IO-Link masters and connected IO-Link devices from the IT network. When security mode is activated, the following restrictions apply:

- Access only by authentication (password protection)
- Access only via encrypted connection (TLS - Transport Layer Security)



The security mode only protects access and data transmission via the IoT interface.

- ▷ The user name `administrator` cannot be changed.
- ▷ The set password cannot be read with `getdata`.

The current status of the security mode can be read with the `getidentity` service (→ [Service: getidentity](#) □ 72).

For the authentication, the user must additionally provide the POST requests with a valid user name and password in the field "auth". The user name and the password are shown as Base64-coded character strings.

The following requests can be done if the security mode is enabled, also without authentication:

- `getidentity`
- `deviceinfo/vendor/getdata`
- `deviceinfo/productcode/getdata`

Substructure: `iotsetup`

Available data points:

Name	Description	Value range	Access
../security/securitymode	Enabling / disabling security mode	• disabled: Security mode deactivated • enabled: Security mode activated	rw ¹
../security/password	Password for authentication (Base64 coded)		wo ²

¹ Read and write

² write only



Valid character set for the Base64 coding / decoding of the password: UTF-8

Online tool for coding / decoding: www.base64encode.org

9.2.8.1 Example: Activating security mode

Task: The security mode of the IoT interface is to be activated. The valid password is to be set to "password" (BASE64-coded: cGFzc3dvcmQ=).

Solution: Activating the security mode with data point `iotsetup/security/securitymode`. Writing the password to the data point `iotsetup/security/password`.

Activating security mode

Request:

```
{
  "code": "request",
  "cid": 1,
  "adr": "/iotsetup/security/securitymode/setdata",
  "data": {"newvalue": 1}
}
```

Response:

```
{
  "cid": -1,
  "code": 200
}
```

Setting the password

Request:

```
{
  "code": "request",
  "cid": 2,
  "adr": "/iotsetup/security/password/setdata",
  "data": {"newvalue": "cGFzc3dvcmQ="}
}
```

Response:

```
{
  "cid": 2,
  "code": 200
}
```

9.2.8.2 Example: Request with authentication

Task: The temperature of the IO-Link master is to be read. The security function is enabled (current password: password).

Solution: Read the data point `processdatamaster/temperature`. The request must be sent using https. The user name and the password are transferred as a Base64-coded character string ("administrator" = "YWRtaW5pc3RyYXRvcg==", "password" = "cGFzc3dvcmQ=")

Request:

```
{
  "code": "request",
  "cid": 1,
  "adr": "processdatamaster/temperature/getdata",
  "auth": {
    "user": "YWRtaW5pc3RyYXRvcg==",
    "passwd": "cGFzc3dvcmQ="
  }
}
```

Response:

```
{
  "cid":1,
  "data":{"value":37},
  "code":200
}
```

9.2.8.3 Example: Resetting the password

Task: The existing password is to be reset.

Solution: To reset a password, disable the security mode. To disable it, enter the user name and the password (the fields "user" and "passwd").

Request:

```
{
  "code":"request",
  "cid":-1,
  "adr":"iotsetup/security/securitymode/setdata",
  "data":{"newvalue":0},
  "auth":{"
    "user":"YWRtaW5pc3RyYXRvcg==",
    "passwd":"SW9UNG1mbQ=="
  }}
}
```

Response:

```
{
  "cid":-1,
  "code":200
}
```

9.2.9 IoT: Configuring the interface to the monitoring software

To enable transmission of the process data of the IO-Link master to the monitoring software (e.g. ifm moneo suite), the interface must be configured accordingly.

Substructure: iotsetup

Available data points:

Name	Description	Value range	Access
../smobip	IP address of the monitoring software	e.g. 255.255.255.255 (default)	rw ¹
../smobport	Port number of the monitoring software	0: 0 ... 35100: 35100 (default) ... 65535: 65535	rw ¹
../smobinterval	Interval for data transmission to the monitoring software (value in milliseconds)	0: Off – no transmission (default) 500: 500 ms ... 2147483647: 2147483647 ms	rw ¹

¹ Read and write

9.2.10 Ports: Setting the operating mode Pin 4 (US)

Pin 4 of ports X01...X08 supports the following operating modes:

- Disabled: No data transmission at pin 4 (C/Q) of the port
- Digital input: Binary input signal at pin 4 (C/Q) of the port
- Digital output Binary output signal at pin 4 (C/Q) of the port
- IO-Link: IO-Link data transmission via pin 4 (C/Q) of the port

The set operating mode must match the operating mode of the device connected to the port (sensor, actuator, IO-Link device).

Substructure: iolinkmaster/port[x] (x: 1...8)

Available data points:

Name	Description	Value range	Access
.../mode	Operating mode of pin 4 (US) of the port	• 0: Disabled - port deactivated • 1: DI - digital input • 2: DO - digital output • 3: IO-Link - IO-Link data	rw ^{1 2}
../mastercycletime_actual	Current cycle time of the data transfer between port and IO-Link device (value in µs)	• 0: best possible cycle time • 1: 1 µs ... • 132800: 132800 µs	ro ³
../comspeed	Current transfer rate between port and IO-Link device	• 0: COM1 - 4.8 kBaud • 1: COM2 - 38.4 kBaud • 2: COM3 - 230.4 kBaud	ro ³
../mastercycletime_preset	Cycle time of the data transfer between port and IO-Link device (value in µs); only in IO-Link operating mode	• 0: Automatically set the best possible cycle time • 1: 1 µs ... • 132800: 132800 µs	rw ^{1 2}

¹ Read and write

² Read and write; parameter can only be changed if no active connection to fieldbus controller

³ Read only

9.2.11 Ports: Configuring device validation and data storage

The device supports the functions device validation and backup / restore of parameter data of the connected IO-Link devices.

The following options are available:

Option	Validation of the connected IO-Link device	Backup of parameter values	Restore of parameter values
[No check and clear]	No	No	No
[Type compatible V1.0 device]	Yes, test compatibility with IO-Link standard V1.0	No	No
[Type compatible V1.1 device]	Yes, test compatibility with IO-Link standard V1.1	No	No
[Type compatible V1.1 device with Backup + Restore]	Yes, test compatibility with IO-Link standard V1.1 and identity of design (vendor ID, device ID)	Yes, automatic backup of parameter values; Changes to the current parameter values will be stored	Yes, restore of parameter values when connecting an identical IO-Link device with factory settings
[Type compatible V1.1 device with Restore]	Yes, test compatibility with IO-Link standard V1.1 and identity of design (vendor ID, device ID)	No, there is no automatic backup; Changes to the parameter values are not stored	Yes, restore of parameter values when connecting an identical IO-Link device with factory settings



Device validation and backup / restore of parameter values are only available if the “IO-Link” operating mode of the port has been activated.

For options [Type compatible V1.1 device with Backup + Restore] and [Type compatible V1.1 device with Restore]: If the parameters [Vendor ID] or [Device ID] are changed in online mode, the data memory is deleted and the parameter values of the connected IO-Link device are backed-up again in the IO-Link master.

Substructure: iolinkmaster/port[x] (x: 1...8)

Available data points:

Name	Description	Value range	Access
../validation_datastorage_age_mode	Behaviour of the port when connecting a new IO-Link device	0: No check and clear 1: Type compatible V1.0 device 2: Type compatible V1.1 device 3: Type compatible V1.1 device with Backup + Restore 4: Type compatible V1.1 device with Restore	rw ^{1 2}
../validation_vendorid	IO-Link ID of the manufacturer that is to be validated	0...65535	rw ^{1 2}
../validation_deviceid	IO-Link ID of the device to be validated	0...16777215	rw ^{1 2}
../datastorage	Structure for port data storage	-	rw ^{1 2}
../datastorage/maxsize	Maximum size of the data storage content (in bytes)	e.g. 2066: 2066 bytes	ro ³
../datastorage/chunksize	Size of a data segment (in bytes)	e.g. 256: 256 bytes	ro ³
../datastorage/size	Size of the data storage content (in bytes)	e.g. 1024: 2 bytes	ro ³

¹ Read and write

² Read and write; parameter can only be changed if no active connection to fieldbus controller

³ Read only

Applicable services:

Name	Description
../validation_useconnecteddevice	Validate the IO-Link device
../datastorage/getblobdata	Reading the content of the data storage area
../datastorage/stream_set	Transfer an individual data segment
../datastorage/start_stream_set	Start sequential transmission of several data segments

9.2.11.1 Example: Cloning the data memory of an IO-Link port

Task: The data memory of port 2 of IO-Link master 1 is to be cloned to IO-Link master 2.

Solution: The cloning consists of 2 steps. In the first step, the data memory of the port is read by IO-Link master 1. In the second step, the read data is stored in the data memory of the port of IO-Link master 2.

Read data memory

► Read segment size of the data storage (h = number of bytes)

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/chunksize/getdata"
}
```

Example: h = 256

- Read total size of the data storage (g = number of bytes)

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/size/getdata"
}
```

Example: g = 550

- Calculate the number of reading steps n: n = first integer value for which applies: $g < n \cdot h$

Example: n = 3, da $550 < 3 \cdot 256$

- Read the data storage segment by segment ("pos" indicates the byte offset at which the read process starts with the length "length").

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/getblobdata",
  "data": {"pos": 0, "length": h}
}
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/getblobdata",
  "data": {"pos": h, "length": h}
}
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/getblobdata",
  "data": {"pos": 2*h, "length": h}
}
...
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[2]/datastorage/getblobdata",
  "data": {"pos": n*h, "length": h}
}
```

Example:

1st read command: pos = 0, length = 256

2nd read command: pos = 256, length = 256

3rd read command: pos = 512, length = 256

Each segment is returned as a BASE64-encoded string.

- Connect segments (concatenate).

Restore data memory

- Determine the size of the backed-up data storage content (n = number of bytes).

Example: n = 550

- Read segment size (s = number of bytes)

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[1]/datastorage/chunksize/getdata"
}
```

Example: s = 256

► Start writing the data storage string segment by segment ("size" = size of the read data storage)

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[1]/datastorage/start_stream_set",
  "data": {"size": n}
}
```

Example: size = 550

► Transmit data storage string segment by segment ("value" = string value with length s)

```
{
  "code": "request",
  "cid": -1,
  "adr": "/iolinkmaster/port[1]/datastorage/stream_set",
  "data": {"value": "aWZtfgIAAABBTDF4NXhfY25faXRfdDIuMi43Nw..."
}
```

9.2.12 Ports: Setting data transmission to the monitoring software

Substructure: iolinkmaster/port[x] (x: 1...8)

Available data points:

Name	Description	Value range	Access
../senddatatosmob	Enable / Disable the transmission of process data of the port to the monitoring software	0: Disabled – process data will not be transmitted 1: Enabled – process data will be transmitted	rw ¹

¹ Read and write

9.2.13 Ports: Reading / writing process data

Substructure: iolinkmaster/port[x] (x: 1...8)

Available data points:

Name	Description	Value range	Access
../pin2in	Digital input (pin 2)	0: OFF 1: ON	ro ¹
../iolinkdevice/pdin	Input data (pin 4)	"DI" operating mode: 0x00: OFF 0x01: ON "IO-Link" operating mode: - Process value in hexadecimal representation	ro ¹

Name	Description	Value range	Access
../iolinkdevice/pdout	Output data (pin 4)	"DO" operating mode: • 0x00: OFF • 0x01: ON "IO-Link" operating mode: • Process value in hexadecimal representation	rw ^{2 3}

¹ Read only

² Read and write

³ Read and write; parameter can only be changed if no active connection to fieldbus controller

9.2.13.1 Example: Reading an IO-Link process value (operating mode "IO-Link")

Task: Read the current measured value of the ifm temperature sensor TN2531 at port 2.

Solution: Read the value of the pdin data point.

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/iolinkmaster/port[2]/iolinkdevice/pdin/getdata"
}
```

Response:

```
{
  "cid": 4711,
  "data": {"value": "03C9"},
  "code": 200
}
```

The return value is displayed in hexadecimal format. The return value is given in hexadecimal format. Besides the temperature value the return value comprises additional information (→ IO Device Description (IODD) of the sensor). The temperature value is shown in bits 2 to 15.

0x03C9 = 0b1111001001

Temperature value: 0b11110010 = 242

This means that The current temperature value is 24.2 °C.

9.2.13.2 Example: Reading an IO-Link process value (operating mode "IO-Link")

Task: The buzzer of the DV2500 at port 2 is to be switched on. The DV2500 operates in On/Off mode.

Solution: Write the value of the pdout data point. The IODD of the DV2500 shows the structure of the process value (e.g. LED activity). The buzzer is switched via bit 40 of the process value (OFF = 0, ON = 1).

Course:

1. Read the current process value [Example: Reading an IO-Link process value \(operating mode "IO-Link"\)](#) (→ □ 44).
2. Set bit 40 of the read value to 1.
3. Write the new process value.

Example:

Read process value:

0x0000 0000 004D = 0b0000 0000 0000 0000 0000 0000 0000 0000 0100 1101

New process value:

0b0000 0001 0000 0000 0000 0000 0000 0000 0000 0100 1101 = 0x0100 0000 004D

Request:

```
{
  "code": "request",
  "cid": 10,
  "adr": "iolinkmaster/port[2]/iolinkdevice/pdout/setdata",
  "data": {"newvalue": "01000000004D"}
}
```

Response:

```
{
  "cid": 10,
  "code": 200
}
```

9.2.13.3 Example: Reading the digital input value (operating mode "DI")

Task: The digital input value of the IO-Link device at port 2 (pin 4) is to be read. The operating mode of the IO-Link port is "Digital Input (DI)".

Solution: Read the process value of the pdin data point. The process value is returned as a hexadecimal value with a length of 1 byte (OFF = "00", ON = "01").

Request:

```
{
  "code": "request",
  "cid": 10,
  "adr": "iolinkmaster/port[2]/iolinkdevice/pdin/getdata"
}
```

Response:

```
{
  "cid": 10,
  "data": {
    "value": "00"
  },
  "code": 200
}
```

9.2.13.4 Example: Writing the digital output value (operating mode "DO")

Task: The digital output value of the IO-Link device at port 2 (pin 4) is to be set. The operating mode of the IO-Link port is "Digital Output (DO)".

Solution: Write the process value of the pdout data point. The value has to be written as a hexadecimal value with a length of 1 byte (OFF = "00", ON = "01").

Request:

```
{
  "code": "request",
  "cid": 10,
  "adr": "iolinkmaster/port[2]/iolinkdevice/pdout/setdata",
  "data": {
    "newvalue": "01"
  }
}
```

Response:

```
{
  "cid": 10,
  "code": 200
}
```

9.2.14 Ports: Reading port events

A port event contains information about events on the IO-Link port (e.g. IO-Link device connected or disconnected, change of the operating mode of the port).

Substructure: iolinkmaster/port[x] (x: 1...8)

Available data points:

Name	Description	Value range	Access
../portevent	Port event Structure: 0xYYZZ00 0xYY: Device Status - Status of the IO-Link devices 0xZZ: Connection Status - Status of the connection	Device status: 0x00: No IO-Link device connected 0x40: Wrong IO-Link device connected 0x80: IO-Link device connected and in PREOPERATE state 0xFF: IO-Link device connected and in OPERATE state Connection Status: 0x00: Port deactivated 0x01: Port activated, but no device connected 0x02: Port activated and in "IO-Link" operating mode 0x03: Port activated and in "DI" operating mode 0x04: Port activated and in "DO" operating mode 0x1B: Repetitions detected 0x1E: Short circuit detected at pin 4 0x42: Wrong revision of the IO-Link device 0x43: Wrong vendor ID (V1.1 Revision) 0x44: Wrong device ID (V1.1 Revision) 0x45: Wrong vendor ID (V1.0 Revision) 0x46: Wrong device ID (V1.0 Revision) 0x48: Wrong cycle time	ro ¹

¹ Read only

9.2.15 Timer: Configuring the timers

The unit has 2 timers. The timers can be used for time-triggered transmission of notifications.

The timers are active by default.

Substructure: timer[1] | timer[2]

Available data points:

Name	Description	Value range	Access
../counter	Counter reading	• 0...4294967295	rw ¹
../interval	Counting interval (value in ms)	• 1000: 1000 ms ... • 86400000: 86400000 ms	rw ¹
../interval/unit	Unit of the counting interval	• ms: milliseconds	ro ²

¹ Read and write

² Read only

9.2.15.1 Set the counting interval

Task: The counting interval of timer 2 is to be set to 2.5 s.

Solution: Using the `setdata` service to write the new value 2500 to the data point `/timer[2]/interval` (2500 ms = 2.5 s).

Request:

```
{
  "code": "request",
  "cid": 1,
  "adr": "/timer[2]/interval/setdata",
  "data": {
    "newvalue": 2500
  }
}
```

Response:

```
{
  "cid": 1,
  "code": 200
}
```

9.2.16 IO-Link devices: Accessing parameters

The ifm IoT Core supports access to the parameters of connected IO-Link devices via the IT network using ISDU (Index Service Data Unit). Each parameter can be addressed via its ISDU index and ISDU subindex (→ IODD of the IO-Link device). If access to the IO-Link device is faulty, the ISDU error code will also be output in the response (→ IODD of the IO-Link device).

Substructure: `iolinkmaster/port[x]/iolinkdevice` (x: 1...8)

Applicable services:

Name	Description
../iolreadacyclic	Read a parameter of an IO-Link device (acyclic)
../iolwriteacyclic	Write a parameter of an IO-Link device (acyclic)

When using the validation level "Type compatible V1.1 Device with Backup + Restore":

After changing a parameter via ISDU write access, the user must end the parameter setting process with the "ParamDownloadStore" system command and activate the data storage mechanism on the IO-Link device.

- Set the SystemCommand object (ISDU index: 0x0002) to the value 0x05 (command "ParamDownloadStore") via acyclic ISDU write access.
- ▷ The parameter setting process is finished.

- ▷ The data storage mechanism on IO-Link device will be activated.
- ▷ The IO-Link device synchronises changed parameter values with data storage of the IO-Link master.

9.2.16.1 Example: Reading a parameter value of an IO-Link device

Task: Reading the serial number of the ifm temperature sensor TN2531 at port 2.

Solution: Read the serial number with the `iolreadacyclic` service from the IO-Link device (index: 21, subindex: 0)

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/iolinkmaster/port[2]/iolinkdevice/iolreadacyclic",
  "data": {
    "index": 21,
    "subindex": 0
  }
}
```

Response:

```
{
  "cid": 4711,
  "data": {"value": "4730323134323830373130"},
  "code": 200
}
```

The returned value is displayed in hexadecimal format. Converting the HEX value to a STRING value results in: G0214280710.

9.2.16.2 Example: Writing a parameter value of an IO-Link device

Task: Setting the output configuration OUT1 of the ifm temperature sensor TN2531 at port 2 to the value "Hnc / hysteresis function, normally closed".

Solution: Set the parameter [ou1] of the sensor with the service `iolwriteacyclic` to the value 4. The parameter can be accessed via IO-Link Index 580, Subindex 0 (→ IO-Link description of the sensor).

Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/iolinkmaster/port[2]/iolinkdevice/iolwriteacyclic",
  "data": {
    "index": 580,
    "subindex": 0,
    "value": "34"
  }
}
```

The value must be passed in hexadecimal format. Converting the STRING value to a HEX value results in: 34.

Response:

```
{
  "cid":4711,
  "code":200
}
```

9.2.17 IO-Link devices: Reading and writing device information

Substructure: iolinkmaster/port[x]/iolinkdevice (x: 1...8)

Available data points:

Name	Description	Value range	Access
../status	Status of the connected IO-Link device	0: State not connected - State not connected 1: State preoperate - State PREOPERATE 2: State operate - State OPERATE 3: State communication error - State communication error	ro ¹
../vendorid	IO-Link ID of the manufacturer	e.g. 310: ifm electronic	ro ¹
../deviceid	IO-Link ID of the IO-Link device	e.g. 712: ifm pressure sensor, PV7003	ro ¹
../productname	Product name of the IO-Link device	e.g. PV7003	ro ¹
../serial	Serial number of the IO-Link device	e.g. 000008500706	ro ¹
../applicationspecifictag	Application specific identification (application tag)	e.g. sensor1_machine3	rw ²

¹ Read only

² Read and write

9.2.18 IO-Link devices: Reading IO-Link events

The device supports IO-Link events. IO-Link events are event and error messages. IO-Link events can be generated in the IO-Link master and in the connected IO-Link devices. IO-Link events generated in the IO-Link devices are forwarded to the IO-Link master and stored there.

An IO-Link event message has the following structure:

Byte 0...1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
Event Code	Source	Validity	Type	Mode	Instance

Legend

- | | | | |
|------------|---|--------|---|
| • Instance | IO-Link Event Qualifier: Trigger | 1 byte | <ul style="list-style-type: none"> 0x00: unknown 0x01: PL (Physical Layer) 0x02: DL (Data Layer) 0x03: AL (Application Layer) 0x04: APPL (Application) |
| • Mode | IO-Link Event Qualifier: Event trigger | 1 byte | <ul style="list-style-type: none"> 0x40: One-time event or warning (single shot) 0xC0: Error disappeared 0x80: Error appeared |
| • Type | IO-Link Event Qualifier: Event category | 1 byte | <ul style="list-style-type: none"> 0x10: Notification 0x20: Warning 0x30: Error |
| • Validity | Validity of the process data | 1 byte | <ul style="list-style-type: none"> 0x00: Valid 0x40: Invalid |
| • Source | IO-Link Event Qualifier: Event source | 1 byte | <ul style="list-style-type: none"> 0x00: IO-Link device 0xFF: IO-Link master |

- Event Code IO-Link event code (bytes are swapped!) 2 bytes → IO-Link specification

Substructure: iolinkmaster/port[x]/iolinkdevice (x: 1...8)

Available data points:

Name	Description	Value range	Access
../iolinkevent	IO-Link event	See note	ro ^{1 2}

¹ Read only

² Parameter only available if operating mode pin 4 (US) = IO-Link and IO-Link device is connected to the port

9.2.19 Gateway: Set the application tag

Substructure: devicetag

Available data points:

Name	Description	Value range	Access
../applicationtag	Bezeichnung des Geräts (Application Tag)	e.g. "factory 2 plant 1"	rw ¹

¹ Read and write



32 bytes are available on the device for storing the applicationtag parameter. If the memory range is exceeded, the device will abort the write process (diagnostic code 400).

- When writing the applicationtag parameter, note the different memory requirements of the individual UTF-8 characters (characters 0-127: 1 byte per character; characters >127: more than 1 byte per character).

9.2.20 Gateway: Update firmware

Substructure: firmware

Available data points:

Name	Description	Value range	Access
../version	Firmware version	AL1x0x_cn_pn_v3.1.95	ro ¹
../type	Software type	firmware	ro ¹
../container	Structure for firmware (BLOB)	-	wo
../container/maxsize	Container size (in bytes)	e.g. 4194304	ro ¹
../container/chunksize	Size of a data segment (in bytes)	e.g. 4096	ro ¹
../container/size	Size of firmware file in container (in bytes)	e.g. 634523	ro ¹

¹ Read only

Applicable services:

Name	Description
../install	Install firmware
../container/stream_set	Transfer an individual data segment
../container/start_stream_set	Start sequential transmission of several data segments



ifm recommends using the IoT Core Visualizer ([→ IoT Core Visualizer](#)  56) to update the firmware.

9.2.21 Gateway: Reading status and diagnostic information

Substructure: processdatamaster

Available data points:

9.2.22 Gateway: Reading device information

Substructure: deviceinfo

Available data points:

Additional information about the can be read with the service getidentity (→ [Service: getidentity](#) □ 72).

9.2.23 Gateway: Resetting, rebooting and localising the device

Substructure: firmware

Applicable services:

Name	Description
../factoryreset	Reset device to factory settings
../reboot	Restart the device.
../signal	Trigger the flashing of the status LEDs

9.2.24 Notifications

The ifm IoT-Core offers the possibility to send notifications. A notification can contain the current values of individual or multiple process data.

Notifications can be triggered either time-controlled or event-controlled.

Notifications can be transmitted using the following protocols:

- HTTP (Hypertext Transfer Protocol)
- MQTT (Message Queuing Telemetry Transport)
- TCP (Transmission Control Protocol)
- WS (WebSocket)

Notifications can be transmitted in the following formats:

- JSON
- CSV

The activity duration of a notification can be set:

- once: Notification is only active once and is then deleted
- uptime: Notification is active until the next restart of the unit and is then deleted
- lifetime: Notification is permanently active

Notifications are set up with the subscribe service.

Active notifications can be changed with the subscribe service.

All active notifications can be displayed with the getsubscriberlist service (→ [Service: getsubscriberlist](#) □ 70).

Information about an active notification can be displayed with the getsubscriptioninfo service (→ [Service: getsubscriptioninfo](#) □ 70).

Active notifications can be unsubscribed using the unsubscribe service.

9.2.24.1 Event-controlled notifications

All elements of the ifm IoT Core with a sub-element of the type `event` can be used as triggers for event-triggered notifications.

Name	Description
../datachanged	Node for displaying value changes of the parent data node
../eventcollection	Node for displaying value changes of multiple data nodes of the IoT Core
../treechanged	Node for displaying structural changes in the IoT Core

Applicable services:

Name	Description
../subscribe	Subscribe to notifications
../unsubscribe	Unsubscribe from notifications
../getsubscriptioninfo	Display information about notifications

9.2.24.2 Time-controlled notifications

The ifm IoT Core offers 2 timers that can be used as triggers for time-triggered notifications.

Name	Description
../timer[1]/counter/datachanged	Counter of timer 1
../timer[2]/counter/datachanged	Counter of timer 2

The interval time of the timers can be set. Each counting pulse triggers a notification.

Applicable services:

Name	Description
../subscribe	Subscribe to notifications
../unsubscribe	Unsubscribe from notifications
../getsubscriptioninfo	Display information about notifications

9.2.24.3 Example: Subscribing to notifications

Task: Every 0.5 seconds, the current values of the following parameters are to be sent regularly to a network server with the IP address 192.168.0.4/temp.

- Cyclic IO-Link input data of the IO-Link device at IO-Link port 2
- Operating temperature of the IO-Link master.



The following options are additionally available:

via WebSockets (ws://): Example: Using WebSockets

via MQTT (mqtt://): Example: Configuring the MQTT command channel

Solution:

► Subscribe to the required data using the subscribe service.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "data": {
    "callback": "http://192.168.0.4:80/temp",
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"
    ]
  }
}
```

► Set the timer to 500 ms.

- Request:

```
{
  "code": "request",
  "cid": 4712,
  "adr": "/timer[1]/interval/setdata",
  "data": {
    "newvalue": 500
  }
}
```

- Response:

```
{
  "cid": 4712,
  "code": 200
}
```

- Notification (Format: JSON)

```
{
  "code": "event",
  "cid": 4711,
  "adr": "",
  "data": {
    "eventno": "6317",
    "srcurl": "/timer[1]/counter/datachanged",
    "payload": {
      "/timer[1]/counter": {"code": 200, "data": 1},
      "/processdatamaster/temperature": {"code": 200, "data": 39},
      "/iolinkmaster/port[2]/iolinkdevice/pdin": {"code": 200, "data": "03B0"}
    }
  }
}
```

9.2.24.4 Example: Changing a notification

Task: The existing subscription is to be changed (→ [Example: Subscribing to notifications](#) 52). Instead of the temperature of the IO-Link master, the operating voltage applied is to be transmitted.

Solution: Overwrite the existing subscription. For this purpose, the parameter values for "cid" and "callback" in the request must be the same as those of the existing subscription.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "data": {
    "callback": "http://192.168.0.4:80/temp",
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/voltage"
    ]
  }
}
```

9.2.24.5 Example: Subscribing to a notification in CSV format

Task: Every 2 seconds, the current values of the following parameters are to be sent to a network server with the IP address 192.168.0.4

- Cyclic IO-Link input data of the IO-Link device at port 2
- Operating temperature of the IO-Link master.

The data should be transmitted in CSV format (comma separator).

Solution:

- Use the subscribe service to subscribe to the required data and set the output format to "csv0".



Data in CSV format can only be sent via TCP connection.

- Request:

```
{
  "code": "request",
  "cid": 1,
  "adr": "/timer[1]/counter/datachanged/subscribe",
  "callback": "tcp://192.168.50.59:1883/topic",
  "codec": "csv0",
  "data": {
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"
    ]
  }
}
```

- Set the interval of the timer to 2 seconds:

- Request:

```
{
  "code": "request",
  "cid": 4712,
  "adr": "/timer[1]/interval/setdata",
  "data": {"newvalue": 2000}
}
```

The cyclically sent notification has the following structure:

```
/timer[1]/counter/datachanged,6317,200,1,200,39,200,03B0
```

9.2.24.6 Example: Unsubscribing from a notification

Task: The existing subscription [Example: Subscribing to notifications](#) (→ [□ 52](#)) is to be deleted.

Solution: Use the unsubscribe service to delete the subscription. For this purpose, the value of the parameter "callback" in the request must be equal to the value of the existing subscription.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/unsubscribe",
  "data": {
    "callback": "http://192.168.0.4:80/temp"
  }
}
```

9.2.24.7 Example: checking a notification

Task: Display information about the existing subscription [Example: Subscribing to notifications](#) (→ [□ 52](#)).

Solution: Use the service getsubscriptioninfo and the parameter values cid, "adr" and "callback" of the existing subscription to retrieve the information.

- Request:

```
{
  "code": "request",
  "cid": 4711,
  "adr": "/timer[1]/counter/datachanged/getsubscriptioninfo",
  "data": {
    "callback": "http://192.168.0.4:80/temp"
  }
}
```

- Response:

```
{
  "code": "request",
  "cid": 4711,
  "data": {
    "callback": "http://192.168.0.4:80/temp",
    "datatosend": [
      "/iolinkmaster/port[2]/iolinkdevice/productname",
      "/iolinkmaster/port[2]/iolinkdevice/pdin",
      "/processdatamaster/temperature"
    ]
  }
}
```

9.3 IoT Core Visualizer

The IoT Core Visualizer provides a graphical user interface to access the functions of the ifm IoT Core.

9.3.1 Starting the IoT-Core Visualizer

To start the IoT-Core Visualizer:

Requirements:

- ✓ The IoT interface is configured.
- Start the web browser.
- Go to the following URL: `http://<ip-address>/web/subscribe` (e. g. `http://192.168.82.100/web/subscribe`)
- ▷ The web browser displays the start page of the IoT-Core Visualizer.

The navigation menu gives access to the following functions:

- [Notification]: [Managing notifications \(→ □ 57\)](#)
- [Elements]: [Searching for elements of the IoT Core \(→ □ 58\)](#)
- [Parameter]: [Configuring the IO-Link master \(→ □ 59\)](#)
- [Processdata]: [Accessing process data \(→ □ 60\)](#)
- [Update]: [Update firmware \(→ □ 61\)](#)

9.3.2 Managing notifications

The [Notification] menu page gives access to the following functions:

- Creating notifications
- Showing active notifications
- Deleting notifications (single, all)

Requirements:

- ✓ IoT Core Visualizer has been started.
- ▶ Select the [Notification] menu.
- ▷ Menu page for managing notifications appears.
- ▷ Table shows all active notifications.

9.3.2.1 Creating a new notification

A wizard is used to register new notifications.

Requirements:

- ✓ The [Notification] menu page is open.
- ▶ Click on + on the right side of the table.
 - ▷ The wizard for creating notifications appears.
- ▶ Use the wizard to enter the required notification parameters step by step.
- ▷ The wizard generates a notification.
- ▷ The created notification is displayed in the table.



- ▶ For cyclical notifications via timer[1] or timer[2], set the interval time of the corresponding timer.

9.3.2.2 Deleting a notification

To delete an active IODD:

Requirements:

- ✓ The [Notification] menu page is open
- ✓ At least one notification is active.
- ▶ Click on the x symbol in the [Unsubscribe] column.
- ▷ The selected notification will be deleted (unsubscribe).

9.3.3 Searching for elements of the IoT Core

The [Elements] menu page allows you to search the IoT Core tree for elements with specific properties and output the results.

The following properties can be searched for:

- [identifier]: Name of the element
- [profile]: Profile of the element
- [type]: Type of the element

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Elements] menu is active.
- ▶ Select the search criteria for the required element in the selection lists [identifier], [profile] and [type].
- ▶ Click on [Search for...].
- ▷ IoT Core Visualizer searches the device description for elements with selected search criteria.
- ▷ The result list shows all the elements found.

9.3.4 Configuring the IO-Link master

The [Parameter] menu page allows to configure the IO-Link master.

Available options:

- Reading and writing individual parameters
- Backup and restore the current configuration of the machine.

Requirements:

- ✓ IoT Core Visualizer has been started.
- ▶ Select the [Parameter] menu.
- ▷ The menu page shows the available parameters of the IO-Link master.
- ▷ Current parameter values are displayed.
- ▶ Optional: Click on  next to an element to manually update the process value.

To change a parameter:

- ▶ Navigate to the desired parameter in the device description.
- ▶ Changing the parameter value
- ▶ Click on  to save the change on the IO-Link master.
- ▷ The changed parameter value is active.
- ▶ Optional: Repeat the procedure to change further parameter values.

9.3.5 Accessing process data

The [Processdata] menu page makes it possible to read and write the process data of the IO-Link master and the connected IO-Link devices

Requirements:

- ✓ IoT Core Visualizer has been started.
- ▶ Select the [Processdata] menu.
- ▷ Menu page shows the substructures of the device description that contain process data and events.
- ▷ The current process values are displayed.
- ▶ Optional: Activate the [Polling] option and change the update interval.
- ▷ The process values will be updated with the set interval.
- ▶ Optional: Click on  next to an element to manually update the process value.

To change the value of a process data:

- ▶ Navigate to the required process data in the device description.
- ▶ Change the process value.
- ▶ Click on  to save the change on the IO-Link master.
- ▷ Changes are saved on the IO-Link master.
- ▷ The changed process value is active.
- ▶ Optional: Repeat the procedure to change further process values.

9.3.6 Update firmware

The [Update] menu page allows you to update the firmware of the device:

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ New firmware has been downloaded. documentation.ifm.com
- ▶ Select the [Update] menu.
 - ▷ Menu page shows information about the current firmware version.
- ▶ Click on [Load software file] and select the new firmware file (*.bin).
- ▶ Click on [Update] to start the update process.
 - ▷ The firmware of the device is updated.
 - ▷ The progress of the update process is displayed.
 - ▷ After successful update: The device reboots automatically.

9.4 PROFINET

9.4.1 Note: Startup package

ifm electronic provides Startup Packages for the integration of the device in PROFINET environments with controllers from different manufacturers.

The Startup Packages can be downloaded from the ifm website: documentation.ifm.com

9.4.2 Install the GSD file

To map the device in a PROFINET projection software, ifm provides an GSD file. The device description file contains identification information, supported parameters and process data. The user can download the GSD file via documentation.ifm.com.

To add the device to the hardware catalogue of the PROFINET projection software:

- ▶ Download the GSD file of the device.
- ▶ Launch the PROFINET projection software.
- ▶ Install the GSD file.
- ▷ The device is added to the hardware catalogue of the PROFINET projection software.
- ▷ The PROFINET projection software can access the device functions and data.

9.4.3 Integrating the device into a project

Using the installed device description in the hardware catalogue, the device can be added to a PROFINET project.

Requirements:

- ▶ Create a new project or open an existing one.
- ▶ Open the Device & networks view.
- ▶ Add the necessary components to the network (e.g. PROFINET controller).
- ▶ Select the device in the hardware catalogue and add it to the network using drag & drop.
- ▶ Establish a logical PROFINET IO connection between the device and the PROFINET controller.
- ▶ Set the IP configuration of the device's PROFINET interface.
- ▷ The device has been integrated into the project.

9.4.3.1 Use S2 redundancy

The device supports the S2 redundancy. S2 redundancy provides a solution to build a redundant system for implementation of fail-safe systems. The following constraints apply:

- Both Application Relations (SR-AR) use the same configuration (submodule settings, connection parameters).
- Only one AR can act as a primary SR-AR.
- Diagnostic messages and alarms are only reported to the primary SR-AR.
- Data records can be read via any SR-AR.
- Data records can only be written via the following SR-AR:
 - primary SR-AR
 - SR-AR that first accesses the device while establishing the connection

9.4.3.2 Use Configuration-in-Run

The device supports the Configuration-in-Run (CiR) function. CiR enables the user to load changes and extensions of the hardware configuration in the PROFINET configuration software to the PLC without needing to put the PLC into the “stop” state first.

9.4.4 Configuring the device

The device is configured via slot 0.

BILD

The configuration of the device comprises the following settings:

- General device information
- Identification and maintenance
- PROFINET interface (subslot X1)

To configure the device:

Requirements:

- ✓ The project is open.
- ✓ Device is integrated in PROFINET project.
- ▶ Call the [Device overview] view.
 - ▷ The [Device overview] tab displays the device structure.
- ▶ Click on slot 0 under [Module].
 - ▷ The [Properties] view appears.
 - ▷ The [General] tab displays the available parameters of the head-end of the device.
- ▶ Set the parameters.
- ▷ The device is configured.

9.4.4.1 Selecting the device profile

The device can be operated with different profiles. The selected device profile affects the following properties:

- Type and scope of the IO-Link master process data
- Available submodules for IO-Link ports

The device profile is set via the IOLM proxy modules and IOLM proxy submodules.

Available IOLM proxy modules:

The device profile is selected via slot 1 of the device.

To select the device profile:

Requirements:

- ✓ The project is open.
- ✓ Device is integrated in PROFINET project.
- ▶ Open the [Device view].
 - ▷ The IOLM proxy [8 Ports] is active in the factory settings.
- ▶ Optional: delete IOLM proxy module [4 Ports] from slot 1.
- ▶ Optional: delete IOLM proxy module [8 Ports] from slot 1.
 - ▷ Slot 1 is empty.
- ▶ Open the hardware catalogue.

- ▶ Drag and drop the required IOLM proxy module from the [Module] folder to slot 1 of the device.
- ▶ Save the project.
- ▷ The module profile is set.

9.4.4.2 Configuring the IO-Link master

The selected device profile determines the following properties of the IO-Link master:

- Diagnostic messages of the IO-Link master
- Access rights on the IO-Link master

Available parameters:

To configure the IO-Link master:

Requirements:

- ✓ Device profile is set.
- ✓ The [Device view] is open.
- ▶ Click on the slot of the IO-Link master proxy.
- ▶ Select the [Properties] tab.
 - ▷ A detailed view of the IOLM proxy module appears.
- ▶ Select [General] > [Module parameters].
 - ▷ The view shows the available parameters.
- ▶ Save the project.
- ▷ The IO-Link master has been configured.

9.4.4.3 Setting the port function

The function of the ports is set via the IOLD proxy modules (submodules).

The IOLD proxy modules define the following properties of the port:

- Operating mode (pin 4)
- Type and scope of the process data
- Adjustable parameters

Each port can be addressed via a separate slot. A specific IOLD proxy module must be assigned to each slot.

Available slots:

The selected device profile determines which IOLD proxy modules are available for configuration.

Available IOLD proxy modules:

To configure the ports of the device:

Requirements:

- ✓ Device profile is set.
- ✓ Hardware catalogue is open.
- ✓ The [Device view] is open.
- ▶ In the hardware catalogue: drag and drop the required IOLD proxy module from the [Submodules] folder to the slot of the port.
 - ▷ The IOLD proxy module will be loaded with the factory settings.
 - ▷ IEC addresses for process data of the port will be generated.
- ▶ Link the IEC addresses of the process data with the variables.

- ▶ Repeat the process for further ports.
- ▶ Save the project.
- ▷ The port function has been set.
- ▷ The linked variables can be used to access the process data from the application.

9.4.4.4 Parameter setting of the ports

The parameter setting of the ports determines the following properties:

- Activate / deactivate the diagnostic messages and alarms
- Configuration mode (IO-Link)
- Device validation / data storage function (IO-Link)
- Cycle time for data transmission (IO-Link)
- Fail-safe mode and fail-safe values of the outputs (DO, IO-Link)
- AL200S - PROFIsafe configuration

The selected IOLD proxy module (submodule) determines which parameters are available.

Available parameters:

- [Parameters: Deactivated \(→ 84\)](#)
- [Parameters: Digital Input \(→ 85\)](#)
- [Parameters: Digital Output \(→ 85\)](#)
- [Parameters: IO-Link - Input \(→ 85\)](#)
- [Parameters: IO-Link - Output \(→ 87\)](#)
- [Parameters: IO-Link - Input / Output \(→ 89\)](#)
- [Parameter: AL200S – Safety/O PROFIsafe 2.4 \(→ 91\)](#)
- [Parameter: AL200S – Safety/O PROFIsafe 2.6.1 \(→ 91\)](#)

To configure the ports of the device:

Requirements:

- ✓ Device profile is set.
- ✓ The port function has been set.
- ✓ The [Device view] is open.
- ▶ Click on the slot of the port.
- ▶ Select the [Properties] tab.
 - ▷ A detailed view of the IOLD proxy module appears.
- ▶ Select [General] > [Module parameters].
 - ▷ The view shows the available parameters.
- ▶ Set the parameters.
- ▶ Save the project.
- ▷ The ports of the device are configured.

9.4.4.5 Loading the configuration to the device

After configuring the IO-Link master and the port, the configuration must be transmitted to the device. The configuration is transmitted via the PROFINET controller.

Requirements:

- ✓ The device is integrated into the project.

- ✓ The IO-Link master has been configured.
- ✓ The port function has been set.
- ✓ The parameters of the ports are set.
- ✓ The project is open.
- ▶ Select the PROFINET Controller device.
- ▶ Select the [Network view].
- ▶ Select [Online] > [Loading to device].
 - ▷ A dialogue window appears.
- ▶ If required: select the correct interface.
- ▶ Click on [Load].
 - ▷ The configuration is transferred to the device.
 - ▷ The error indication in the project tree shows the status of the configuration.

9.4.5 Accessing IO-Link device

The device supports the acyclic access to the parameters, diagnostic and status information of the connected IO-Link devices. The data is addressed using the index and subindex.



Available data of the IO-Link device: → IO Device Description (IODD) of the IO-Link device

The acyclic access is possible with the following options:

Symbol (function block)	Description	Notes
IO_LINK_DEVICE	Acyclic access to data objects of an IO-Link device (Description: → User documentation "IO-Link library" Siemens)	• CAP: – Access point of the IO_LINK_DEVICE function – ifm electronic: 0xB400 • PORT: – Number of the port to which the IO-Link device is connected • IOL_INDEX and IOL_SUBINDEX: – Index and subindex of the data object – Value range depending on the device (→ IODD of the IO-Link Device)
IOL_CALL	Acyclic access to the data objects of an IO-Link device	→ IO_LINK_DEVICE

9.4.6 Use I&M data records


The unit supports the I&M data records I&M0 to I&M3 (→ [I&M data](#) 99).

- The data record I&M0 contains ID information. The I&M0 data record is available for each module / submodule of the device.
- In the data records I&M1...I&M3, the user can store application and device-specific information.

I&M data records can be accessed acyclically. Access to the I&M data records takes place index-based.

Note: Read data record

- ▶ Read the data record with the function block RDREC.

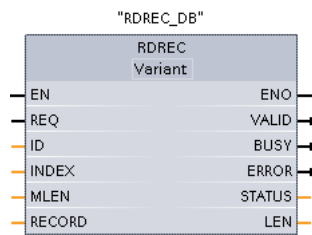


Specific parameters:

- Input ID: HW_ID of the subslot (project-specific); properties of the subslot
- Input INDEX: index of the data record

Note: Write data record

- Write the data record with the function block WRREC.
- Observe read and write permissions!

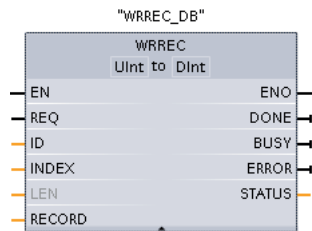

Specific parameters:

- Input ID: HW-ID of the slot (project-specific); properties of the slot
- Input INDEX: index of the data record

10 Maintenance, repair and disposal

The operation of the unit is maintenance-free.

- ▶ Dispose of the device in an environmentally friendly way in accordance with the applicable national regulations when it is no longer used.

10.1 Cleaning the housing surface

Clean the surface of the device when necessary.

- ▶ Disconnect the device.
- ▶ Clean the device from dirt using a soft, chemically untreated and dry cloth.
- ▶ In case of severe soiling, use a cloth moistened with water.
- ▶ Do not use any caustic cleaning agents for this!

10.2 Update firmware

The firmware of the device can be updated using the following methods:

- ifm IoT Core Visualizer: [Update firmware \(→ 61\)](#)
- ifm moneo: [Updating the firmware \(→ 26\)](#)

11 Appendix

11.1 ifm IoT Core

11.1.1 Profiles

Profile	Description
blob	Binary Large Object
deviceinfo	Identification information of a device
devicetag	Device-specific identification
iolinkdevice_full	IO-Link device
iolinkmaster	IO-Link master
network	Network
parameter	Parameter
processdata	Process data
service	Service
software	Software
software/uploadable-software	upgradeable software
timer	Counter

11.1.2 Types

Type	Description
data	Data point
device	Root element representing a device
event	Event that can be triggered by the firmware and sends notifications
service	Service that can be addressed from the network
structure	Structural element (e.g. a folder in the file system)

11.1.3 Services

11.1.3.1 Service: factoryreset

Name: factoryreset

Description: The service sets the parameters of the device to the factory settings.

Request ("data" field): none

Response ("data" field): none

11.1.3.2 Service: getsubscriberlist

Name: getsubscriberlist

Description: The service provides a list of all active subscriptions.

Request ("data" field): none

Response ("data" field):

Parameter	Mandatory field	Data type	Description
adr	Mandatory	STRING	Notification trigger
datatosend	Mandatory	ARRAY OF STRINGS	List with URLs of the data elements; URLs are comma separated
cid	Mandatory	STRING	ID of the active notification
callbackurl	Mandatory	STRING	Destination address for the notifications
duration	Mandatory	STRING	Activity duration

11.1.3.3 Service: getsubscriptioninfo

Name: getsubscriptioninfo

Description: The service provides information about an active notification (subscribe). The following parameters of the active notification are to be used for the query:

- cid (e.g. 4711)
- adr (e.g. timer[1]/counter/datachanged)
- callback (e.g. http://192.168.82.121:8080/topic)

Request ("data" field):

Parameter	Mandatory field	Data type	Description
callback	mandatory	STRING	Destination address of the notifications; complete URL (e.g. http://ipaddress:port/path)

Return ("data" field):

Parameter	Mandatory field	Data type	Description
subscription	mandatory	BOOL	Status of the transferred parameters of the notification • FALSE: Parameter incorrect • TRUE: Parameter correct; Notification found
datatosend	mandatory	STRING	List with URLs of the data elements; URLs are comma separated
cid	mandatory	STRING	ID of the active notification
callbackurl	mandatory	STRING	Destination address of the notifications

11.1.3.4 Service: getblobdataName: `getblobdata`

Description: The service reads a Binary Large Object (blob).

Request ("data" field):

Parameter	Mandatory field	Data type	Description
Pos	Mandatory	NUMBER	Byte position
length	Mandatory	NUMBER	Size of the object (number of bytes)

Response ("data" field):

Parameter	Mandatory field	Data type	Description
data	Mandatory	STRING	Data to be decoded (BASE64-encoded)
crc	Optional	HEX STRING	CRC of the data after decoding
md5	Optional	HEX STRING	MD5 checksum of the data after decoding

11.1.3.5 Service: getdataName: `getdata`

Description: The service reads the value of a data point and provides it.

Request ("data" field): none

Response ("data" field):

Parameter	Mandatory field	Data type	Description
value	Mandatory	STRING	Value of the data point

11.1.3.6 Service: getdatamultiName: `getdatamulti`

Description: The service sequentially reads the values of multiple data points and outputs them. The value and a diagnostic code are output for each data point.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
datatosend	Mandatory	ARRAY OF STRINGS	List of data points to be requested; data points must support the getdata service ("datatosend":["url1", "url2",..., "urlx"])

Response ("data" field):

Parameter	Mandatory field	Data type	Description
url	Mandatory	STRING	Data point that was queried
code	Mandatory	INT	Diagnostic code of the request
data	Mandatory	STRING	Value of the data point

11.1.3.7 Service: getelementinfoName: `getelementinfo`

Description: The service reads the properties of an element of the IoT tree.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
adr	mandatory	STRING	URL of the element whose properties are to be changed

Return ("data" field):

Parameter	Mandatory field	Data type	Description
identifier	mandatory	STRING	Identifier of the element
type	mandatory	STRING	Type of the element
format	optional	JSON object	Format of the data or of the service content
uid	optional	STRING	
profiles	optional	JSON-ARRAY	Element profiles
hash	optional	STRING	

11.1.3.8 Service: getidentity

Name: `getidentity`

Description: The service reads device information and outputs it.

Request (field „data“): keine

Response (field „data“):

Parameter	Mandatory field	Data type	Description
iot		device	Device description as JSON object
iot.name	mandatory	STRING	Type of the element
iot.uid	optional	STRING	
iot.version	mandatory	STRING	
iot.catalogue	optional	ARRAY OF OBJECTS	
iot.deviceclass	optional	ARRAY OF STRING	Device class
iot.serverlist	optional	ARRAY OF OBJECTS	
device	optional		Article number
device.serialnumber	optional		Serial number
device.hwrevision	optional		Hardware version
device.swrevision	optional		Software version
device.custom	optional		

11.1.3.9 Service: gettree

Name: `gettree`

Description: The service reads the device description of the unit and outputs it as a JSON object. The output can be limited to a subtree of the device description.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
adr	Optional	STRING	Root element of the subtree

Parameter	Mandatory field	Data type	Description
level	Optional	STRING	Max. level up to which the subtree is output • no entry: all levels will be displayed • 0: do not display sub-elements ("subs") • 1: display sub-elements • 2: display sub-elements up to the 2nd level • 3: display sub-elements up to the 3rd level • ... • 20: display sub-elements up to the 20th level

Response ("data" field):

Parameter	Mandatory field	Data type	Description
identifier	Mandatory	STRING	Identifier of the root element
type	Mandatory	STRING	Type of the element
format	Optional	JSON object	Format of the data content
uid	Optional	STRING	
profiles	Optional	JSON array	
subs	Mandatory	JSON array	Sub-elements
hash	Optional	STRING	

11.1.3.10 Service: install

Name: `install`

Description: The service installs the firmware stored in a memory area of the unit.

Request ("data" field): none

Return ("data" field): none

11.1.3.11 Service: iolreadacyclic

Service: `iolreadacyclic`

Description: The service acyclically reads the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
index	mandatory	NUMBER	IO-Link index of the parameter
subindex	mandatory	NUMBER	IO-Link subindex of the parameter

Return ("data" field):

Parameter	Mandatory field	Data type	Description
value	mandatory	STRING	Parameter value (value in hexadecimal format)

11.1.3.12 Service: iolwriteacyclic

Name: `iolwriteacyclic`

Description: The service acyclically writes the parameter value of an IO-Link device. It is accessed via IO-Link index and subindex.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
index	mandatory	NUMBER	IO-Link index of the parameter
subindex	mandatory	NUMBER	IO-Link subindex of the parameter
value	mandatory	STRING	Parameter value (value in hexadecimal format)

Return ("data" field): none

11.1.3.13 Service: querytree

Name: `querytree`

Description: The service searches a device tree for the criteria `profile`, `type` and `identifier` and outputs a list with the URLs of the elements found. At least one of the search criteria must be specified. The service can only be executed on the root node of the unit.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
profile	Optional	STRING	Profile of the requested element
type	Optional	STRING	Type of the requested element
identifier	Optional	STRING	Name of the requested element

Response ("data" field): none

Parameter	Mandatory field	Data type	Description
urlList	Mandatory	ARRAY	Array with URLs of the found elements; URLs are separated by commas

11.1.3.14 Service: reboot

Name: `reboot`

Description: The service reboots the device.

Request ("data" field): none

Response ("data" field): none

11.1.3.15 Service: reset

Name: `reset`

Description: The service resets a connection to the initialisation state.

Request ("data" field): none

Response ("data" field): none

11.1.3.16 Service: setblock

Name: `setblock`

Description: The service simultaneously sets the values of multiple data points of a structure.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
datatset	Mandatory	ARRAY OF OBJECTS	List of data points and their new values; Data points must support the <code>setdata</code> service

Parameter	Mandatory field	Data type	Description
consistent	Optional	BOOL	Response within a certain time

Response ("data" field): none

11.1.3.17 Service: setdata

Name: `setdata`

Description: The service sets the value of a data point.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
newvalue	Mandatory	STRING	New value of the data point
duration	Optional	STRING	Duration of value storage - lifetime: value is saved with IoT Core; value remains valid even after restart of the device - uptime: value is saved until the next restart of the device

Response ("data" field): none

11.1.3.18

11.1.3.19 Service: signal

Name: `signal`

Description: The service triggers the flashing of the status LEDs of the unit.

Request ("data" field): none

Response ("data" field): none

11.1.3.20 Service: start

Name: `start`

Description: The service starts a function (e.g. connection, timer).

Request ("data" field): none

Response ("data" field): none

11.1.3.21 Service: start_stream_set

Name: `start_stream_set`

Description: The service starts the sequential transmission of several data fragments.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
size	Mandatory	STRING	Overall length of the data to be transmitted (number of bytes)

Response ("data" field): none

11.1.3.22 Service: stop

Name: `stop`

Description: The service stops a function (e.g. connection, timer).

Request ("data" field): none

Response ("data" field): none

11.1.3.23 Service: stream_set

Name: stream_set

Description: The service transfers a data segment.

Request ("data" field):

Parameter	Mandatory field	Data type	Description
value	Mandatory	BIN (BASE64)	Segment of the binary data (BASE64-encoded)

Response ("data" field): none

11.1.3.24 Service: validation_useconnecteddevice

Name: validation_useconnecteddevice

Description: The service checks whether the device ID and the vendor ID of the connected IO-Link device match the data points ../validation_vendorid and ../validation_deviceid .

Request ("data" field): none

Return ("data" field): none

11.2 PROFINET

11.2.1 Modules

11.2.1.1 IOLM Proxy Module

Modules	IOLM Proxy	Description
8 Ports	IO-Link Master Proxy	IO-Link Master – Standard-Modus
8 Ports – IO Mode	IO-Link Master Proxy	IO-Link Master – I/O-Modus

11.2.2 Submodules

11.2.2.1 IOLD Proxy Submodule: IO Mode

Digital Input / Output

Submodule	Port Mode	Description
Digital Input without PD	DI	Digital input without process data
Digital Output without PD	DO	Digital output without process data

IO-Link Deactivated

Submodule	Port Mode	Description
Deactivated	Deactivated	Port deactivated

IO-Link Input

Submodule	Port Mode	Description
IO-Link 1 I Byte without PQI	IO-Link	1 byte input data without PQI
IO-Link 2 I Byte without PQI	IO-Link	2 bytes input data without PQI
IO-Link 4 I Byte without PQI	IO-Link	4 bytes input data without PQI
IO-Link 6 I Byte without PQI	IO-Link	6 bytes input data without PQI
IO-Link 8 I Byte without PQI	IO-Link	8 bytes input data without PQI
IO-Link 10 I Byte without PQI	IO-Link	10 bytes input data without PQI
IO-Link 12 I Byte without PQI	IO-Link	12 bytes input data without PQI
IO-Link 14 I Byte without PQI	IO-Link	14 bytes input data without PQI
IO-Link 16 I Byte without PQI	IO-Link	16 bytes input data without PQI
IO-Link 18 I Byte without PQI	IO-Link	18 bytes input data without PQI
IO-Link 24 I Byte without PQI	IO-Link	24 bytes input data without PQI
IO-Link 32 I Byte without PQI	IO-Link	32 bytes input data without PQI

IO-Link Output

Submodule	Port Mode	Description
IO-Link 1 O Byte without PQI	IO-Link	1 byte output data without PQI
IO-Link 2 O Byte without PQI	IO-Link	2 bytes output data without PQI
IO-Link 4 O Byte without PQI	IO-Link	4 bytes output data without PQI
IO-Link 6 O Byte without PQI	IO-Link	6 bytes output data without PQI
IO-Link 8 O Byte without PQI	IO-Link	8 bytes output data without PQI
IO-Link 10 O Byte without PQI	IO-Link	10 bytes output data without PQI
IO-Link 12 O Byte without PQI	IO-Link	12 bytes output data without PQI
IO-Link 14 O Byte without PQI	IO-Link	14 bytes output data without PQI
IO-Link 16 O Byte without PQI	IO-Link	16 bytes output data without PQI
IO-Link 18 O Byte without PQI	IO-Link	18 bytes output data without PQI
IO-Link 24 O Byte without PQI	IO-Link	24 bytes output data without PQI
IO-Link 32 O Byte without PQI	IO-Link	32 bytes output data without PQI

IO-Link Input + Output

Submodule	Port Mode	Description
IO-Link 1 I / 2 O Byte without PQI	IO-Link	1 byte input data and 2 bytes output data without PQI
IO-Link 2 I / 2 O Byte without PQI	IO-Link	2 bytes input data and 2 bytes output data without PQI
IO-Link 4 I / 2 O Byte without PQI	IO-Link	4 bytes input data and 2 bytes output data without PQI
IO-Link 6 I / 2 O Byte without PQI	IO-Link	6 bytes input data and 2 bytes output data without PQI
IO-Link 8 I / 2 O Byte without PQI	IO-Link	8 bytes input data and 2 bytes output data without PQI
IO-Link 10 I / 2 O Byte without PQI	IO-Link	10 bytes input data and 2 bytes output data without PQI
IO-Link 12 I / 2 O Byte without PQI	IO-Link	12 bytes input data and 2 bytes output data without PQI
IO-Link 14 I / 2 O Byte without PQI	IO-Link	14 bytes input data and 2 bytes output data without PQI
IO-Link 16 I / 2 O Byte without PQI	IO-Link	16 bytes input data and 2 bytes output data without PQI
IO-Link 18 I / 2 O Byte without PQI	IO-Link	18 bytes input data and 2 bytes output data without PQI
IO-Link 24 I / 2 O Byte without PQI	IO-Link	24 bytes input data and 2 bytes output data without PQI
IO-Link 32 I / 2 O Byte without PQI	IO-Link	32 bytes input data and 2 bytes output data without PQI
IO-Link 1 I / 15 O Byte without PQI	IO-Link	1 byte input data and 15 bytes output data without PQI

IO-Link Input + PQI

Submodule	Port Mode	Description
IO-Link 1 I Byte + PQI	IO-Link	1 byte input data with PQI
IO-Link 2 I Byte + PQI	IO-Link	2 bytes input data with PQI
IO-Link 4 I Byte + PQI	IO-Link	4 bytes input data with PQI
IO-Link 6 I Byte + PQI	IO-Link	6 bytes input data with PQI
IO-Link 8 I Byte + PQI	IO-Link	8 bytes input data with PQI
IO-Link 10 I Byte + PQI	IO-Link	10 bytes input data with PQI
IO-Link 12 I Byte + PQI	IO-Link	12 bytes input data with PQI
IO-Link 14 I Byte + PQI	IO-Link	14 bytes input data with PQI
IO-Link 16 I Byte + PQI	IO-Link	16 bytes input data with PQI
IO-Link 18 I Byte + PQI	IO-Link	18 bytes input data with PQI
IO-Link 24 I Byte + PQI	IO-Link	24 bytes input data with PQI
IO-Link 32 I Byte + PQI	IO-Link	32 bytes input data with PQI

IO-Link Output + PQI

Submodule	Port Mode	Description
IO-Link 1 O Byte + PQI	IO-Link	1 byte output data with PQI
IO-Link 2 O Byte + PQI	IO-Link	2 bytes output data with PQI
IO-Link 4 O Byte + PQI	IO-Link	4 bytes output data with PQI
IO-Link 6 O Byte + PQI	IO-Link	6 bytes output data with PQI
IO-Link 8 O Byte + PQI	IO-Link	8 bytes output data with PQI
IO-Link 10 O Byte + PQI	IO-Link	10 bytes output data with PQI
IO-Link 12 O Byte + PQI	IO-Link	12 bytes output data with PQI
IO-Link 14 O Byte + PQI	IO-Link	14 bytes output data with PQI
IO-Link 16 O Byte + PQI	IO-Link	16 bytes output data with PQI
IO-Link 18 O Byte + PQI	IO-Link	18 bytes output data with PQI
IO-Link 24 O Byte + PQI	IO-Link	24 bytes output data with PQI
IO-Link 32 O Byte + PQI	IO-Link	32 bytes output data with PQI

IO-Link Input + Output + PQI

Submodule	Port Mode	Description
IO-Link 1 I / 1 O Byte + PQI	IO-Link	1 byte input data and 1 byte output data with PQI
IO-Link 2 I / 1 O Byte + PQI	IO-Link	2 bytes input data and 1 byte output data with PQI
IO-Link 4 I / 1 O Byte + PQI	IO-Link	4 bytes input data and 1 byte output data with PQI
IO-Link 6 I / 1 O Byte + PQI	IO-Link	6 bytes input data and 1 byte output data with PQI
IO-Link 8 I / 1 O Byte + PQI	IO-Link	8 bytes input data and 1 byte output data with PQI
IO-Link 10 I / 1 O Byte + PQI	IO-Link	10 bytes input data and 1 byte output data with PQI
IO-Link 12 I / 1 O Byte + PQI	IO-Link	12 bytes input data and 1 byte output data with PQI
IO-Link 14 I / 1 O Byte + PQI	IO-Link	14 bytes input data and 1 byte output data with PQI
IO-Link 16 I / 1 O Byte + PQI	IO-Link	16 bytes input data and 1 byte output data with PQI
IO-Link 18 I / 1 O Byte + PQI	IO-Link	18 bytes input data and 1 byte output data with PQI
IO-Link 24 I / 1 O Byte + PQI	IO-Link	24 bytes input data and 1 byte output data with PQI
IO-Link 32 I / 1 O Byte + PQI	IO-Link	32 bytes input data and 1 byte output data with PQI
IO-Link 1 I / 2 O Byte + PQI	IO-Link	1 byte input data and 2 bytes output data with PQI
IO-Link 2 I / 2 O Byte + PQI	IO-Link	2 bytes input data and 2 bytes output data with PQI
IO-Link 4 I / 2 O Byte + PQI	IO-Link	4 bytes input data and 2 bytes output data with PQI
IO-Link 6 I / 2 O Byte + PQI	IO-Link	6 bytes input data and 2 bytes output data with PQI
IO-Link 8 I / 2 O Byte + PQI	IO-Link	8 bytes input data and 2 bytes output data with PQI
IO-Link 10 I / 2 O Byte + PQI	IO-Link	10 bytes input data and 2 bytes output data with PQI
IO-Link 12 I / 2 O Byte + PQI	IO-Link	12 bytes input data and 2 bytes output data with PQI
IO-Link 14 I / 2 O Byte + PQI	IO-Link	14 bytes input data and 2 bytes output data with PQI
IO-Link 16 I / 2 O Byte + PQI	IO-Link	16 bytes input data and 2 bytes output data with PQI
IO-Link 18 I / 2 O Byte + PQI	IO-Link	18 bytes input data and 2 bytes output data with PQI
IO-Link 24 I / 2 O Byte + PQI	IO-Link	24 bytes input data and 2 bytes output data with PQI
IO-Link 32 I / 2 O Byte + PQI	IO-Link	32 bytes input data and 2 bytes output data with PQI
IO-Link 1 I / 15 O Byte + PQI	IO-Link	1 byte input data and 15 bytes output data with PQI

IO-Link ProfiSafe Devices

Submodule	Port Mode	Description
AL200S – SafetyI/O PROFIsafe 2.4	IO-Link	AL200S - Safety input data / output data (PROFIsafe version 2.4)
AL200S – SafetyI/O PROFIsafe 2.6.1	IO-Link	AL200S - Safety input data / output data (PROFIsafe version 2.6.1)

11.2.2.2 IOLD Proxy Submodule: Standard Mode

Digital Input / Output

Submodule	Port Mode	Description
Digital Input	DI	Digital input
Digital Output	DO	Digital output

IO-Link Deactivated

Submodule	Port Mode	Description
Deactivated	Deactivated	Port deactivated

IO-Link Input + Output + PQI

Submodule	Port Mode	Description
IO-Link 1 I / 1 O Byte + PQI	IO-Link	1 byte input data and 1 byte output data with PQI
IO-Link 2 I / 1 O Byte + PQI	IO-Link	2 bytes input data and 1 byte output data with PQI
IO-Link 4 I / 1 O Byte + PQI	IO-Link	4 bytes input data and 1 byte output data with PQI
IO-Link 6 I / 1 O Byte + PQI	IO-Link	6 bytes input data and 1 byte output data with PQI
IO-Link 8 I / 1 O Byte + PQI	IO-Link	8 bytes input data and 1 byte output data with PQI
IO-Link 10 I / 1 O Byte + PQI	IO-Link	10 bytes input data and 1 byte output data with PQI
IO-Link 12 I / 1 O Byte + PQI	IO-Link	12 bytes input data and 1 byte output data with PQI
IO-Link 14 I / 1 O Byte + PQI	IO-Link	14 bytes input data and 1 byte output data with PQI
IO-Link 16 I / 1 O Byte + PQI	IO-Link	16 bytes input data and 1 byte output data with PQI
IO-Link 18 I / 1 O Byte + PQI	IO-Link	18 bytes input data and 1 byte output data with PQI
IO-Link 24 I / 1 O Byte + PQI	IO-Link	24 bytes input data and 1 byte output data with PQI
IO-Link 32 I / 1 O Byte + PQI	IO-Link	32 bytes input data and 1 byte output data with PQI
IO-Link 1 I / 2 O Byte + PQI	IO-Link	1 byte input data and 2 bytes output data with PQI
IO-Link 2 I / 2 O Byte + PQI	IO-Link	2 bytes input data and 2 bytes output data with PQI
IO-Link 4 I / 2 O Byte + PQI	IO-Link	4 bytes input data and 2 bytes output data with PQI
IO-Link 6 I / 2 O Byte + PQI	IO-Link	6 bytes input data and 2 bytes output data with PQI
IO-Link 8 I / 2 O Byte + PQI	IO-Link	8 bytes input data and 2 bytes output data with PQI
IO-Link 10 I / 2 O Byte + PQI	IO-Link	10 bytes input data and 2 bytes output data with PQI
IO-Link 12 I / 2 O Byte + PQI	IO-Link	12 bytes input data and 2 bytes output data with PQI
IO-Link 14 I / 2 O Byte + PQI	IO-Link	14 bytes input data and 2 bytes output data with PQI
IO-Link 16 I / 2 O Byte + PQI	IO-Link	16 bytes input data and 2 bytes output data with PQI
IO-Link 18 I / 2 O Byte + PQI	IO-Link	18 bytes input data and 2 bytes output data with PQI
IO-Link 24 I / 2 O Byte + PQI	IO-Link	24 bytes input data and 2 bytes output data with PQI
IO-Link 32 I / 2 O Byte + PQI	IO-Link	32 bytes input data and 2 bytes output data with PQI
IO-Link 1 I / 15 O Byte + PQI	IO-Link	1 byte input data and 15 bytes output data with PQI

IO-Link Input + PQI

Submodule	Port Mode	Description
IO-Link 1 I Byte + PQI	IO-Link	1 byte input data with PQI
IO-Link 2 I Byte + PQI	IO-Link	2 bytes input data with PQI
IO-Link 4 I Byte + PQI	IO-Link	4 bytes input data with PQI
IO-Link 6 I Byte + PQI	IO-Link	6 bytes input data with PQI

Submodule	Port Mode	Description
IO-Link 8 I Byte + PQI	IO-Link	8 bytes input data with PQI
IO-Link 10 I Byte + PQI	IO-Link	10 bytes input data with PQI
IO-Link 12 I Byte + PQI	IO-Link	12 bytes input data with PQI
IO-Link 14 I Byte + PQI	IO-Link	14 bytes input data with PQI
IO-Link 16 I Byte + PQI	IO-Link	16 bytes input data with PQI
IO-Link 18 I Byte + PQI	IO-Link	18 bytes input data with PQI
IO-Link 24 I Byte + PQI	IO-Link	24 bytes input data with PQI
IO-Link 32 I Byte + PQI	IO-Link	32 bytes input data with PQI

IO-Link Output + PQI

Submodule	Port Mode	Description
IO-Link 1 O Byte + PQI	IO-Link	1 byte output data with PQI
IO-Link 2 O Byte + PQI	IO-Link	2 bytes output data with PQI
IO-Link 4 O Byte + PQI	IO-Link	4 bytes output data with PQI
IO-Link 6 O Byte + PQI	IO-Link	6 bytes output data with PQI
IO-Link 8 O Byte + PQI	IO-Link	8 bytes output data with PQI
IO-Link 10 O Byte + PQI	IO-Link	10 bytes output data with PQI
IO-Link 12 O Byte + PQI	IO-Link	12 bytes output data with PQI
IO-Link 14 O Byte + PQI	IO-Link	14 bytes output data with PQI
IO-Link 16 O Byte + PQI	IO-Link	16 bytes output data with PQI
IO-Link 18 O Byte + PQI	IO-Link	18 bytes output data with PQI
IO-Link 24 O Byte + PQI	IO-Link	24 bytes output data with PQI
IO-Link 32 O Byte + PQI	IO-Link	32 bytes output data with PQI

IO-Link ProfiSafe Devices

Submodule	Port Mode	Description
AL200S – SafetyI/O PROFIsafe 2.4	IO-Link	AL200S - Safety input data / output data (PROFIsafe version 2.4)
AL200S – SafetyI/O PROFIsafe 2.6.1	IO-Link	AL200S - Safety input data / output data (PROFIsafe version 2.6.1)

11.2.3 Parameters

11.2.3.1 IOLM Proxy Module

11.2.3.2 IOLD Proxy Submodule

Parameters: Deactivated

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	• Disabled: deactivated • Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	• Disabled: deactivated • Enabled: activated (default)

Parameters: Digital Input

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	- Disabled: deactivated - Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	- Disabled: deactivated - Enabled: activated (default)

Parameters: Digital Output

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	- Disabled: deactivated - Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	- Disabled: deactivated - Enabled: activated (default)
Fail safe mode	Behaviour in case the PROFINET connection is interrupted	- Fail Safe Reset Value: Fail-safe Mode activated – reset outputs to default values - Fail Safe Old Value: Fail-safe Mode activated – outputs maintain the most recent process value - Fail Safe Set Value: Fail-safe Mode activated – set outputs to HIGH level

Parameters: IO-Link - Input

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	- Disabled: deactivated - Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	- Disabled: deactivated - Enabled: activated (default)
Port Configuration without Tool	Enable configuration of the IO-Link ports via IODD and the parameterization tool	- Disabled: deactivated - Enabled: activated (default)
Enable Pull/Plug	Enable / disable pull/plug alarms	- Disabled: deactivated - Enabled: activated (default)
Port Mode	Configuration mode of the ports during start-up	- Apply port configuration: Use values projected in PROFINET - Autostart: Use the set values of the IO-Link device

Parameter	Description	Value range
Validation / Data Storage	Supported IO-Link standard and behaviour of the port when connecting new IO-Link devices to the IO-Link port	- no Device check and clear: - No device validation - No data storage (default) - type compatible Device (V1.0): - IO-Link device is compatible with the V1.0 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1): - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1) with Backup + Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master saves the parameter values of the connected IO-Link device; The changes of the parameter values are saved as well - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device. - type compatible Device (V1.1) with Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master stores the parameter values of the connected IO-Link device once if the data memory of the device is empty. - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.
Port cycle time	Cycle time of the data transmission on the IO-Link port	- Device automatically sets the fastest possible cycle time (default) 2.0 ms: 2 milliseconds 4.0 ms: 4 milliseconds 8.0 ms: 8 milliseconds 16.0 ms: 16 milliseconds 32.0 ms: 32 milliseconds 64.0 ms: 64 milliseconds 128.0 ms: 128 milliseconds
Vendor ID	ID of the manufacturer that is to be validated	0 (default)...65535
Device ID	ID of the IO-Link device that is to be validated	0 (default)...16777215

Parameters: IO-Link - Output

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	- Disabled: deactivated - Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	- Disabled: deactivated - Enabled: activated (default)
Port Configuration without Tool	Enable configuration of the IO-Link ports via IODD and the parameterization tool	- Disabled: deactivated - Enabled: activated (default)
Enable Pull/Plug	Enable / disable pull/plug alarms	- Disabled: deactivated - Enabled: activated (default)
Port Mode	Configuration mode of the ports during start-up	- Apply port configuration: Use values projected in PROFINET - Autostart: Use the set values of the IO-Link device
Validation / Data Storage	Supported IO-Link standard and behaviour of the port when connecting new IO-Link devices to the IO-Link port	- no Device check and clear: - No device validation - No data storage (default) - type compatible Device (V1.0): - IO-Link device is compatible with the V1.0 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1): - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1) with Backup + Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master saves the parameter values of the connected IO-Link device; The changes of the parameter values are saved as well - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device. - type compatible Device (V1.1) with Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master stores the parameter values of the connected IO-Link device once if the data memory of the device is empty. - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.

Parameter	Description	Value range
Port cycle time	Cycle time of the data transmission on the IO-Link port	• Device automatically sets the fastest possible cycle time (default) • 2.0 ms: 2 milliseconds • 4.0 ms: 4 milliseconds • 8.0 ms: 8 milliseconds • 16.0 ms: 16 milliseconds • 32.0 ms: 32 milliseconds • 64.0 ms: 64 milliseconds • 128.0 ms: 128 milliseconds
Vendor ID	ID of the manufacturer that is to be validated	0 (default)...65535
Device ID	ID of the IO-Link device that is to be validated	0 (default)...16777215
Fail safe mode	Behaviour of outputs of the port in case the PROFINET connection is interrupted (only valid for operating modes "DO" and "IO-Link")	• No Fail Safe: Fail-safe mode deactivated • Fail Safe Reset Value: Fail-safe mode activated – reset outputs to default values • Fail Safe Old Value: Fail-safe mode activated – outputs maintain the most recent process value • Fail Safe Set Value: Fail-safe mode activated – set outputs to HIGH level • Failsafe with Pattern: Fail-safe mode activated – set outputs to user-defined values
Pattern Value	Process data values in case of the PROFINET connection is interrupted (as hexadecimal value) Pattern depends on the size of the selected PROFINET module	Per byte (outputs): • 0x00 (default) • ... • 0xFF

Parameters: IO-Link - Input / Output

Parameter	Description	Value range
Enable Port Diagnosis	Enable / disable diagnostic messages of the port	- Disabled: deactivated - Enabled: activated (default)
Enable Process Alarm	Enable / disable process alarms	- Disabled: deactivated - Enabled: activated (default)
Port Configuration without Tool	Enable configuration of the IO-Link ports via IODD and the parameterization tool	- Disabled: deactivated - Enabled: activated (default)
Enable Pull/Plug	Enable / disable pull/plug alarms	- Disabled: deactivated - Enabled: activated (default)
Port Mode	Configuration mode of the ports during start-up	- Apply port configuration: Use values projected in PROFINET - Autostart: Use the set values of the IO-Link device
Validation / Data Storage	Supported IO-Link standard and behaviour of the port when connecting new IO-Link devices to the IO-Link port	- no Device check and clear: - No device validation - No data storage (default) - type compatible Device (V1.0): - IO-Link device is compatible with the V1.0 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1): - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - No data storage - type compatible Device (V1.1) with Backup + Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master saves the parameter values of the connected IO-Link device; The changes of the parameter values are saved as well - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device. - type compatible Device (V1.1) with Restore: - IO-Link device is compatible with the V1.1 IO-Link standard - Verification whether it is an IO-Link device of the same type (validation via vendor ID and device ID) - The IO-Link master stores the parameter values of the connected IO-Link device once if the data memory of the device is empty. - When connecting an IO-Link device with factory settings, the parameter values stored in the IO-Link master are restored automatically on the IO-Link device.

Parameter	Description	Value range
Port cycle time	Cycle time of the data transmission on the IO-Link port	• Device automatically sets the fastest possible cycle time (default) • 2.0 ms: 2 milliseconds • 4.0 ms: 4 milliseconds • 8.0 ms: 8 milliseconds • 16.0 ms: 16 milliseconds • 32.0 ms: 32 milliseconds • 64.0 ms: 64 milliseconds • 128.0 ms: 128 milliseconds
Vendor ID	ID of the manufacturer that is to be validated	0 (default)...65535
Device ID	ID of the IO-Link device that is to be validated	0 (default)...16777215
Fail safe mode	Behaviour of outputs of the port in case the PROFINET connection is interrupted (only valid for operating modes "DO" and "IO-Link")	• No Fail Safe: Fail-safe mode deactivated • Fail Safe Reset Value: Fail-safe mode activated – reset outputs to default values • Fail Safe Old Value: Fail-safe mode activated – outputs maintain the most recent process value • Fail Safe Set Value: Fail-safe mode activated – set outputs to HIGH level • Failsafe with Pattern: Fail-safe mode activated – set outputs to user-defined values
Pattern Value	Process data values in case of the PROFINET connection is interrupted (as hexadecimal value) Pattern depends on the size of the selected PROFINET module	Per byte (outputs): • 0x00 (default) • ... • 0xFF

Parameter: AL200S – SafetyI/O PROFIsafe 2.4

Details on parameters and configuration of a PROFIsafe connection: → Startup Package – PROFIsafe

The Startup Package can be downloaded from the ifm website: <https://documentation.ifm.com/>

Parameter: AL200S – SafetyI/O PROFIsafe 2.6.1

Details on parameters and configuration of a PROFIsafe connection: → Startup Package – PROFIsafe

The Startup Package can be downloaded from the ifm website: <https://documentation.ifm.com/>

11.2.4.2 IOLM Proxy: IO Mode

Input data: 2 bytes

Byte	Content							
	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	Port X08: DI (Pin 2)	Port X07: DI (Pin 2)	Port X06: DI (Pin 2)	Port X05: DI (Pin 2)	Port X04: DI (Pin 2)	Port X03: DI (Pin 2)	Port X02: DI (Pin 2)	Port X01: DI (Pin 2)
n+1	Port X08: DI (Pin 4)	Port X07: DI (Pin 4)	Port X06: DI (Pin 4)	Port X05: DI (Pin 4)	Port X04: DI (Pin 4)	Port X03: DI (Pin 4)	Port X02: DI (Pin 4)	Port X01: DI (Pin 4)

Legend:

- | | | | |
|--------------|---|-------|---|
| • DI (Pin 2) | Switching status of the digital input of the port (pin 2) | 1 BIT | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • DI (Pin 4) | Switching status of the digital input of the port (pin 4) | 1 BIT | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

Output data: 1 byte

Byte	Content							
	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
n	Port X08: DO (Pin 4)	Port X07: DO (Pin 4)	Port X06: DO (Pin 4)	Port X05: DO (Pin 4)	Port X04: DO (Pin 4)	Port X03: DO (Pin 4)	Port X02: DO (Pin 4)	Port X01: DO (Pin 4)

Legend:

- | | | | |
|--------------|--|-------|---|
| • DO (Pin 4) | Switching status of the digital output of the port (pin 4) | 1 BIT | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
|--------------|--|-------|---|

11.2.4.3 IOLD Proxy: IO-Link n I / m O + PQI

Input data: n+1 bytes

Byte	Contents
0	IO-Link Input Data (n bytes)
n	Port Qualifier Information (→ Mapping: Port Qualifier Information (PQI) 94)

Legend:

- IO-Link Input Data IO-Link input data (pin 4) n BYTE Per byte:
 - 0x00...0xFF

Output data: m Bytes

Byte	Contents
0	IO-Link Output Data (m Bytes)

Legend:

- IO-Link Output Data IO-Link output data (pin 4) m BYTE Per byte:
 - 0x00...0xFF

Mapping: Port Qualifier Information (PQI)

Byte	Bit							
	7	6	5	4	3	2	1	0
n	PQ	DevErr	DevCom	PortActive	SubstDev	NewPar	res.	res.

Legend:

- NewPar Indication of Data Storage update 1 BIT
 - 0x0: No update
 - 0x1: Update detected; IO-Link master has updated Data Storage, and a new IO backup object is available
- SubstDev Indication of replacement of an IO-Link device (comparison of serial numbers) 1 BIT
 - 0x0: No replcement detected
 - 0x1: Replacement detected
- PortActive Indication of port status 1 BIT
 - 0x0: port deactivated via the port function
 - 0x1: Port activated
- DevCom Indication of availability of an IO-Link device 1 BIT
 - 0x0: IO-Link device not available
 - 0x1: IO-Link device available; IO-Link Device in PREOPERATE state or OPERATE state
- DevErr Indication of errors / warnings from the IO-Link device or IO-Link port 1 BIT
 - 0x0: No error, no warning
 - 0x1: Error / warning
- PQ Status of the process input data on the IO-Link port 1 BIT
 - 0x0: Invalid data
 - 0x1: Valid data

11.2.4.4 IOLD Proxy: IO-Link n I + PQI

Input data: n+1 bytes

Byte	Contents
0	IO-Link Input Data (n bytes)
n	Port Qualifier Information (→ Mapping: Port Qualifier Information (PQI) □ 95)

Legend:

- IO-Link Input Data IO-Link input data (pin 4) n BYTE Per byte:
 - 0x00...0xFF

Output data: --

Mapping: Port Qualifier Information (PQI)

Byte	Bit							
	7	6	5	4	3	2	1	0
n	PQ	DevErr	DevCom	PortActive	SubstDev	NewPar	res.	res.

Legend:

- NewPar Indication of Data Storage update 1 BIT
 - 0x0: No update
 - 0x1: Update detected; IO-Link master has updated Data Storage, and a new IO backup object is available
- SubstDev Indication of replacement of an IO-Link device (comparison of serial numbers) 1 BIT
 - 0x0: No replcement detected
 - 0x1: Replacement detected
- PortActive Indication of port status 1 BIT
 - 0x0: port deactivated via the port function
 - 0x1: Port activated
- DevCom Indication of availability of an IO-Link device 1 BIT
 - 0x0: IO-Link device not available
 - 0x1: IO-Link device available; IO-Link Device in PREOPERATE state or OPERATE state
- DevErr Indication of errors / warnings from the IO-Link device or IO-Link port 1 BIT
 - 0x0: No error, no warning
 - 0x1: Error / warning
- PQ Status of the process input data on the IO-Link port 1 BIT
 - 0x0: Invalid data
 - 0x1: Valid data

11.2.4.5 IOLD Proxy: IO-Link m O + PQI

Input data: 1 byte

Byte	Contents
0	Port Qualifier Information (→ Mapping: Port Qualifier Information (PQI) 96)

Output data: m Bytes

Byte	Contents
0	IO-Link Output Data (m Bytes)

Legend:

- IO-Link Output Data IO-Link output data (pin 4) m BYTE Per byte:
 - 0x00...0xFF

Mapping: Port Qualifier Information (PQI)

Byte	Bit							
	7	6	5	4	3	2	1	0
n	PQ	DevErr	DevCom	PortActive	SubstDev	NewPar	res.	res.

Legend:

- NewPar Indication of Data Storage update 1 BIT
 - 0x0: No update
 - 0x1: Update detected; IO-Link master has updated Data Storage, and a new IO backup object is available
- SubstDev Indication of replacement of an IO-Link device (comparison of serial numbers) 1 BIT
 - 0x0: No replcement detected
 - 0x1: Replacement detected
- PortActive Indication of port status 1 BIT
 - 0x0: port deactivated via the port function
 - 0x1: Port activated
- DevCom Indication of availability of an IO-Link device 1 BIT
 - 0x0: IO-Link device not available
 - 0x1: IO-Link device available; IO-Link Device in PREOPERATE state or OPERATE state
- DevErr Indication of errors / warnings from the IO-Link device or IO-Link port 1 BIT
 - 0x0: No error, no warning
 - 0x1: Error / warning
- PQ Status of the process input data on the IO-Link port 1 BIT
 - 0x0: Invalid data
 - 0x1: Valid data

11.2.4.6 IOLD Proxy: Digital Input

Input data: 1 byte

Byte	Contents
0	Digital Input

Legend:

- Digital Input Switching state of the digital input (pin 4) 1 BYTE • 0x00: LOW
• 0x01: HIGH

11.2.4.7 IOLD Proxy: Digital Output

Output data: 1 byte

Byte	Contents
0	Digital Output

Legend:

- Digital Output Switching state of the digital output (pin 4) 1 BYTE • 0x00: LOW
• 0x01...0xFF: HIGH

11.2.5 Acyclical data

11.2.5.1 I&M data

I&M1 (Slot 0)

Index: 0xAFF1

Variable	Description	Value	Bytes
TAG_FUNCTION	Identifier for function of the submodule • 0x20: empty	0x20	32
TAG_LOCATION	Identifier for location of the submodule • 0x20: empty	0x20	22

I&M2 (Slot 0)

Index: 0xAFF2

Variable	Description	Value	Bytes
INSTALLATION_DATE	Installation date of the submodule (ASCII, separated by spaces) • 0x20: empty	0x20	16
RESERVED	reserved	0x00	38

I&M3 (Slot 0)

Index: 0xAFF3

Variable	Description	Value	Bytes
DESCRIPTOR	Description of the submodule (ASCII, separated by spaces) • 0x20: empty	0x20	54

I&M0 (Slot 1)

Index: 0xAFF4

Variable	Description	Value	Bytes
API	API of the submodule		4
SLOT	Slot of the submodule		2
SUBSLOT	Subslot of the submodule		2
FLAGS	Flags: • 0x01: submodule has own I&M data • 0x02: I&M data of the submodule represent I&M data of the module • 0x04: I&M data of the submodule represent I&M data of the device		4