



Operating instructions
Remote I/O module 8DO 8DI
EtherNet/IP
IP65 / IP66 / IP67 / IP69K
AL4323

GB

Contents

1	Preliminary note	5
1.1	Legal and copyright information	5
1.2	Symbols used	5
1.3	Warnings	5
1.4	Safety symbol on the device	5
1.5	Change history	6
2	Safety instructions	7
2.1	Cyber security	7
3	Intended use	8
4	Function	9
4.1	Visual indication	9
4.2	Parameter setting	9
4.3	Inputs	9
4.4	Outputs	9
4.5	Digital input filters	9
4.5.1	Debouncing	10
4.5.2	Inverting	10
4.5.3	Stretching	10
4.5.4	Filter combination	11
4.6	Counter	11
4.6.1	Counter mode CTU	12
4.6.2	Counter mode CTD	12
4.6.3	Counter mode CTUD	13
4.6.4	Counter mode CTDIR	13
4.7	Switching signal channels	14
4.7.1	Deactivated	14
4.7.2	Latch mode	14
4.7.3	Single point mode	15
4.7.4	Two point mode	15
4.7.5	Window mode	16
4.8	EtherNet/IP	17
5	Installation	18
5.1	Overview	18
5.2	Install device	18
6	Electrical connection	19
6.1	Overview	19
6.2	General wiring information	19
6.2.1	Connection technology	19
6.3	Ethernet	20
6.4	Process connections (actuators)	20
6.5	Process connections (sensors)	20
6.6	Voltage supply	21
6.6.1	Derating behaviour	21
6.7	Voltage output	22
7	Operating and display elements	23
7.1	LEDs	23
7.1.1	Status	23
7.1.2	Ethernet	24
7.1.3	Process connections	24
7.1.4	Voltage supply	24
8	Set-up	26
9	Settings	27
9.1	Parameter setting software	27
9.1.1	Supported parameter setting software	27
9.1.2	Establishing a connection to device	27
9.1.2.1	Configure the EtherNet/IP interface	27

9.1.3	Fieldbus interface	28
9.1.3.1	Reading the interface configuration	28
9.1.3.2	Reading the connection status	28
9.1.4	Process connections	29
9.1.4.1	Configuring the input filters	29
9.1.4.2	Configuring the counter modules	29
9.1.4.3	Configuring the switching signal channels	30
9.1.4.4	Configuring outputs	32
9.1.5	Process data	33
9.1.5.1	Reading digital input data	33
9.1.5.2	Writing the digital outputs	33
9.1.5.3	Reading counter values	34
9.1.5.4	Controlling counter modules	34
9.1.5.5	Reading the switching signals	35
9.1.5.6	Controlling the switching signal channels	35
9.1.5.7	Reading status and diagnostic information	36
9.1.6	Device information	36
9.1.6.1	Reading identification information	36
9.1.7	Device ID	37
9.1.7.1	Setting the application tag	37
9.1.8	Device control	37
9.1.8.1	Resetting the device	37
9.1.8.2	Restarting the device	37
9.1.8.3	Reading the firmware version	38
9.2	IoT-Core Visualizer	39
9.2.1	Starting the ifm IoT Core Visualizer	39
9.2.2	Searching for elements of the IoT Core	40
9.2.3	Configuring the device	41
9.2.3.1	Reading the configuration of the EtherNet/IP interface	42
9.2.3.2	Configuring input filters	42
9.2.3.3	Configuring the counter modules	43
9.2.3.4	Configuring the switching signal channels	44
9.2.3.5	Configuring the digital outputs	45
9.2.3.6	Reading device information	46
9.2.3.7	Reading the firmware version	47
9.2.3.8	Setting the application tag	47
9.2.4	Accessing the process data	48
9.2.4.1	Reading digital input data	49
9.2.4.2	Reading counter values	49
9.2.4.3	Controlling counter modules	49
9.2.4.4	Writing the digital outputs	50
9.2.4.5	Reading the switching signal signals	50
9.2.4.6	Controlling the switching signal channels	50
9.2.4.7	Reading status and diagnostic information	51
9.2.4.8	Reading the connection status	51
9.2.5	Update firmware	52
9.3	EtherNet/IP	53
9.3.1	Register the EDS file	53
9.3.2	Integrate the device into the EtherNet/IP project	53
9.3.3	Set connection types	54
9.3.4	Configure input filters	54
9.3.5	Configuring the digital outputs	55
9.3.6	Configuring the counter modules and switching channels	55
9.3.7	Accessing the process data of the ports	56
9.3.8	Using energy monitoring	57
9.3.9	Acyclic access	58
9.3.9.1	Notes on acyclic access	58
10	Maintenance, repair and disposal	59
10.1	Cleaning	59
10.2	Update firmware	59
11	Appendix	60

11.1	EtherNet/IP	60
11.1.1	Parameters	60
11.1.1.1	Configuration assembly (instance 188)	60
11.1.1.2	Configuration assembly (instance 189)	64
11.1.2	Cyclic data	66
11.1.2.1	Input assembly (instance 110)	66
11.1.2.2	Input assembly (instance 111)	68
11.1.2.3	Input assembly (instance 112)	71
11.1.2.4	Output assembly (instance 160)	74
11.1.3	Acyclical data	76
11.1.3.1	CIP object classes	76
11.1.3.2	CIP class and instance services	76
11.1.3.3	Identity Object (Class Code: 0x01)	77
11.1.3.4	Message Router Object (Class Code: 0x02)	79
11.1.3.5	Assembly Object (Class Code: 0x04)	80
11.1.3.6	Connection Manager Object (Class Code: 0x06)	81
11.1.3.7	Device Level Ring Object (Class Code: 0x47)	82
11.1.3.8	Quality Of Service Object (Class Code: 0x48)	83
11.1.3.9	Input Filter Object (Class Code: 0x81)	84
11.1.3.10	Output object (class code: 0x83)	85
11.1.3.11	Counter / SCC object (class: 0x84)	86
11.1.3.12	TCP/IP Object (Class Code: 0xF5)	88
11.1.3.13	Ethernet Link Object (Class Code: 0xF6)	90
11.1.3.14	LLDP Management Object (Class Code: 0x109)	92

1 Preliminary note

You will find instructions, technical data, approvals and further information using the QR code on the unit / packaging or at documentation.ifm.com.

1.1 Legal and copyright information

© All rights reserved by ifm electronic gmbh. No part of these instructions may be reproduced and used without the consent of ifm electronic gmbh.

All product names, pictures, companies or other brands used are the property of the respective rights owners.

1.2 Symbols used

- ✓ Requirement
- Instructions
- ▷ Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note
Non-compliance may result in malfunction or interference.
-  Information
Supplementary note

1.3 Warnings

Warnings indicate the possibility of personal injury and damage to property. This enables safe product handling. Warnings are graded as follows:

	WARNING Warning of serious personal injury ▷ If the warning is not observed, fatal and serious injuries are possible.
	CAUTION Warning of minor to moderate personal injury ▷ If the warning is not observed, minor to moderate injuries are possible.
	ATTENTION Warning of damage to property ▷ If the warning is not observed, damage to property is possible.

1.4 Safety symbol on the device

-  Safety symbol on the device:
 - Adhere to the operating instructions for the safe operation of the device.

1.5 Change history

Issue	Subject	Date
00	New creation of the document	04 / 2024
01	• Changed: Input assembly 111 Input assembly (instance 111) (→ □ 68) • Changed: Input assembly 112 Input assembly (instance 112) (→ □ 71) • Changed: Output assembly 160, Output assembly (instance 160) (→ □ 74) • Corrected: Description LEDs DO2, Process connections (→ □ 24) • Added: Description LED UA, Voltage supply (→ □ 24) • Corrected: Description LLDP Management Object, LLDP Management Object (Class Code: 0x109) (→ □ 92) • Changed: Supported supply voltages, General wiring information (→ □ 19) • Changed: Screenshots IoT Core Visualizer	11 / 2024

2 Safety instructions

- The unit described is a subcomponent for integration into a system.
 - The system architect is responsible for the safety of the system.
 - The system architect undertakes to perform a risk assessment and to create documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the architect of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (→ Intended use).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the product must be carried out by qualified personnel authorised by the machine operator.
- Protect units and cables against damage.
- Replace damaged units, otherwise the technical data and safety will be impaired.
- Observe applicable documents.

2.1 Cyber security

ATTENTION

Operating the machine in an unprotected network environment

- ▷ Unauthorised read or write access to data is possible.
 - ▷ Unauthorised manipulation of the device function is possible.
 - ▶ Check and restrict access options to the device.
-

3 Intended use

The device may only be used for the following purposes:

- Gateway between digital sensors / actuators and a higher-level control system

The device is designed for use without a control cabinet in the food industry.

4 Function

4.1 Visual indication

The device displays the following indications:

- Status and error indication of the EtherNet/IP gateway and the system
- Status and activity indication of the Ethernet connections
- Status of the voltage supplies US and UA
- Status and error indication of the sensor and actuator ports

4.2 Parameter setting

The device can be configured using the following options:

- Parameter setting software
 - ifm moneo OS + ifm moneo|configure
 - ifm moneo|configure free
- ifm IoT Core
 - IoT-Core Visualizer
- EtherNet/IP
 - Projection software

4.3 Inputs

Ports X5...X8 each have 2 digital inputs (type 2 according to EN 61131-3).

The digital inputs are connected to pins 2 and 4 of the ports.

4.4 Outputs

Ports X1...X4 each have 2 digital outputs.

The digital outputs are connected to pins 2 and 4 of the ports.


A digital output can be switched either by a switching signal channel or by a fieldbus application.

4.5 Digital input filters

The device pre-processes the digital input signals at ports X5...X8. The filter result is forwarded as a process value and as an input signal for a counter module.

The following filters can be applied to the digital input signals in the sequence specified.

1. Debounce
2. Hold
3. Invert

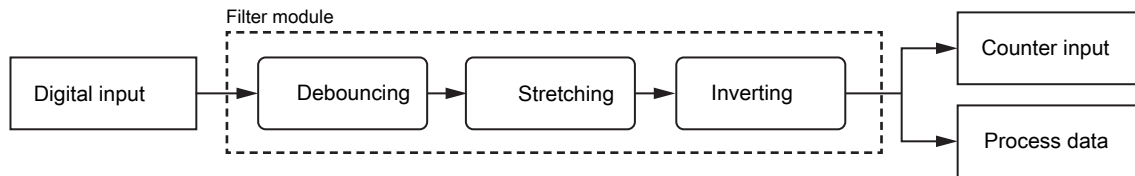


Each filter can be configured separately.

- Maximum input frequency: 4500 Hz
- Minimum detectable positive pulse width: 0.115 ms (+ positive edge)
- Minimum detectable negative pulse width: 0.115 ms (+ negative edge)

4.5.1 Debouncing

The filter suppresses noise signals. The filter provides the input signals at the filter output with a delay (debounce time). All signals shorter than the set debounce time are ignored by the filter.

Time diagram debounce filter:

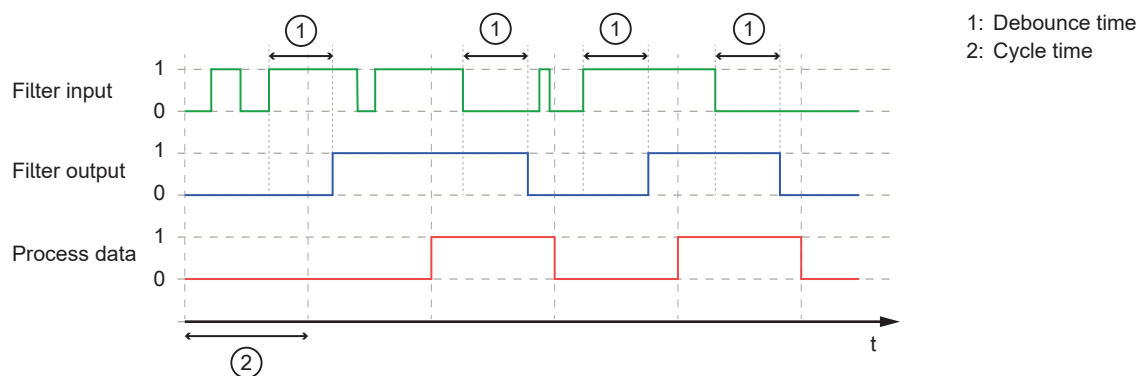

4.5.2 Inverting


The filter inverts signals.

4.5.3 Stretching


The filter stretches short input pulses. Level changes that occur during a stretching period are ignored. The filter is configured via the following parameters:

- Hold time: pulse duration to which short pulses are to be stretched. Pulses that are present for a longer time than the hold time are not stretched.
- Hold level: signal level to be stretched (HIGH or LOW)

Time diagram stretch filter (status HIGH):

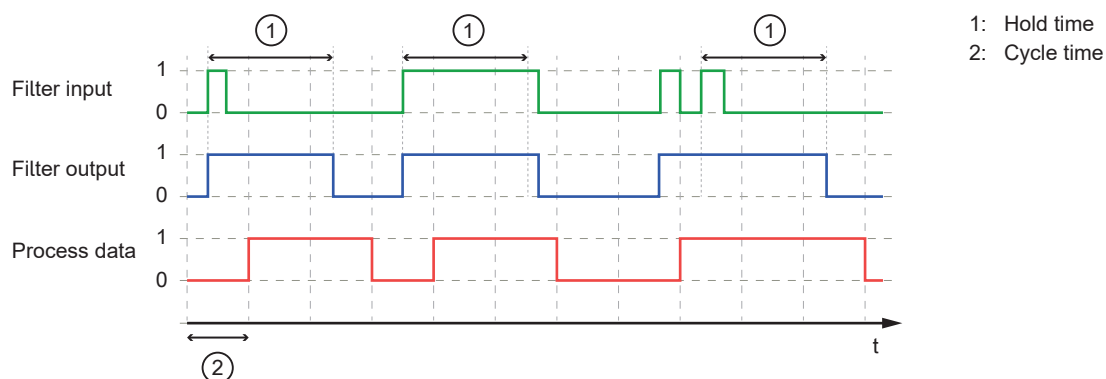

Time diagram stretch filter (status LOW):

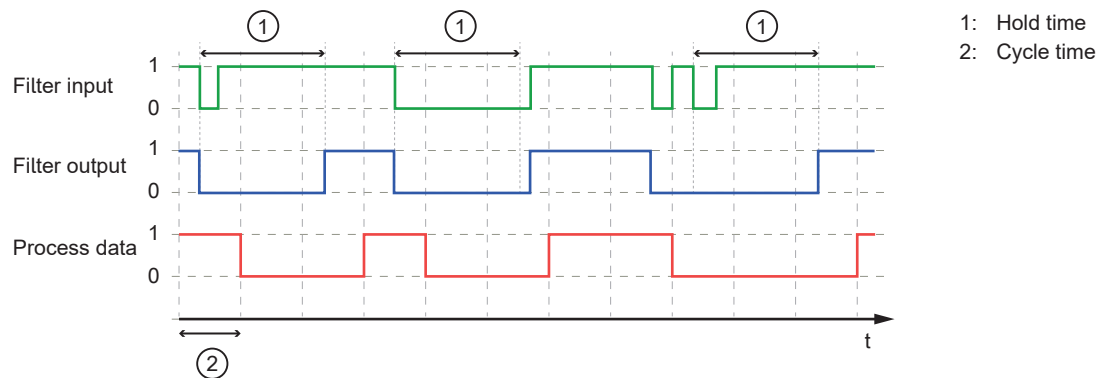


4.5.4 Filter combination

The filters can be combined.

Example: All 3 filters are activated

Time diagram:

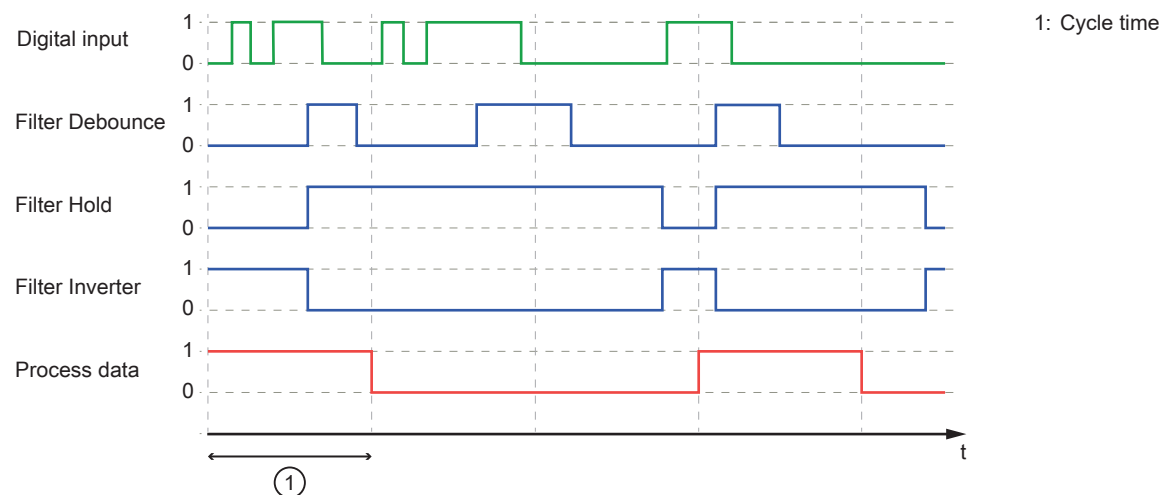


4.6 Counter

The device features one counter module per port.

A counter module consists of 2 separate counters:

- Main counter: The main counter counts the rising edges of the filtered digital input signals. The main counter has a value range that is defined by a threshold value. If the value range of the main counter is exceeded or not reached, an overflow or underflow signal is sent to the batch counter.
- Batch counter: The batch counter counts the overflow or underflow signals of the main counter.

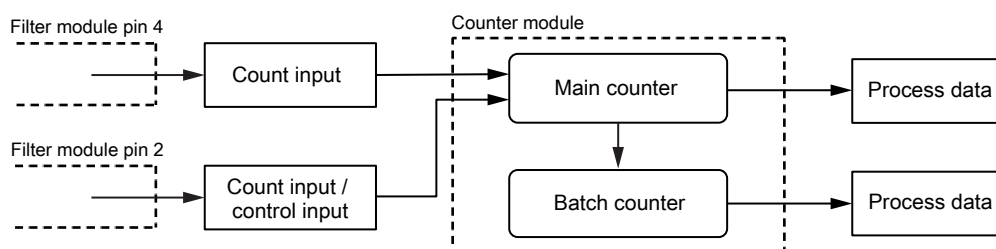

A counter module can be operated in different operating modes. The following operating modes are available.


Maximum count frequency: 4500 Hz

4.6.1 Counter mode CTU

In CTU (Count Up) mode, the counter module operates as an up counter with overflow detection and overflow counter.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is incremented ($m = m+1$).
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).

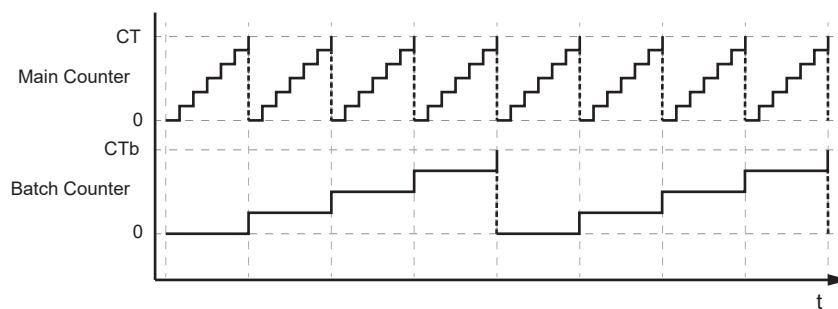


4.6.2 Counter mode CTD

In CTD (Count Down) mode, the counter module operates as a down counter with underflow detection and underflow counting.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- The first time a positive edge is detected at pin 4, the value of the main counter is set to the threshold value $CT-1$ ($m = CT-1$). At the same time, the value of the batch counter is set to the threshold value $CTb-1$ ($b = CTb-1$).
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is decremented ($m = m-1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

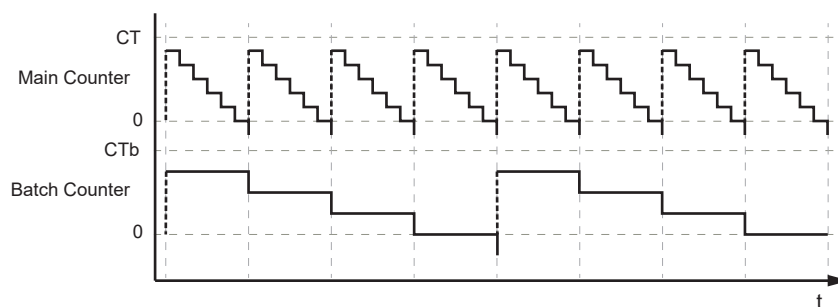


4.6.3 Counter mode CTUD

In CTUD (Count Up Down) mode, the counter operates as a simultaneous up and down counter with overflow and underflow detection.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is incremented ($m = m+1$).
- If the counter module detects a positive edge at pin 2 of the port, the value of the main counter is decremented ($m = m-1$).
- If the counter module simultaneously detects a positive edge at pin 4 and pin 2 of the port, the counter value of the main counter does not change.
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

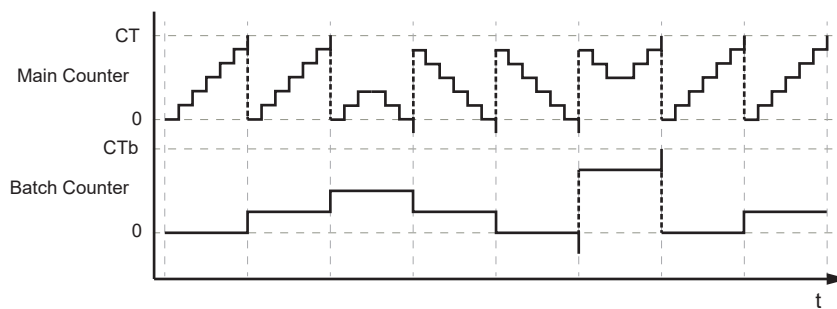


4.6.4 Counter mode CTDIR

In CTDIR (Count Direction) mode, the counter module operates either as an up counter with overflow detection or as a down counter with underflow detection. The counting direction can be set.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- The user can determine the counting direction. The counter module initially operates as an up counter with overflow detection.
- If the counter module detects a positive edge at pin 4 of the port and the counting direction of the port is set to "up", the value of the main counter is incremented ($m = m+1$).
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).
- If the counter module detects a positive edge at pin 4 of the port and the counting direction at pin 2 of the port is set to "down", the value of the main counter is decremented ($m = m-1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

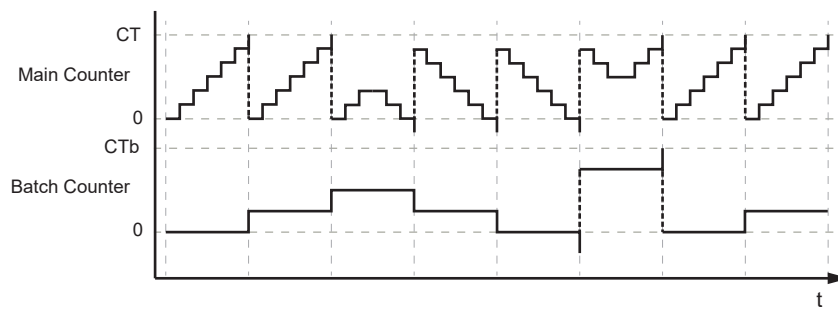

4.7 Switching signal channels

The device has 4 switching signal channels (SSC). The switching signal channels are each assigned to a counter module.

Each switching signal channel provides 2 switching signals. The switching signals can be output at the output channels of ports X1...X4.

The switching signal channels can be operated as normally closed (low active) or normally open (high active).

4.7.1 Deactivated

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the switch point mode Deactivated, the status of the counter module (main counter + batch counter) has no effect on the switching signal output. The switching signal is permanently in the INACTIVE state.

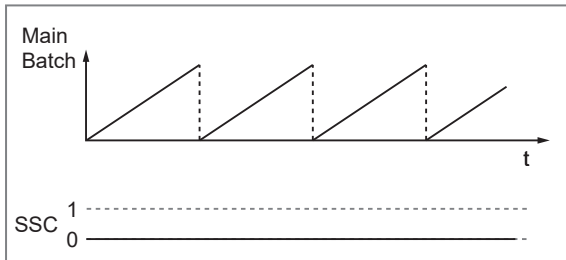


Fig. 1: Deactivated (high active)

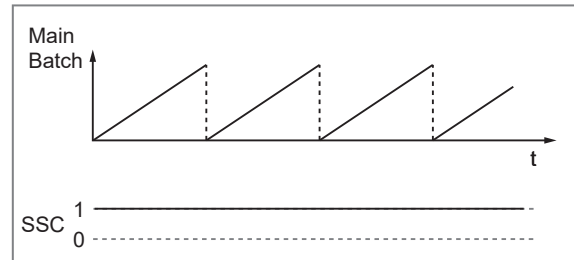


Fig. 2: Deactivated (low active)

4.7.2 Latch mode

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the Latch Mode switch point mode, the overflow or underflow events and the Latch Reset control signal are evaluated to derive the switching signal status.

As soon as the switching signal channel detects an overflow or underflow event, the switching signal is set (ACTIVE). The switching signal remains in this state even if further overflow or underflow events occur.

As soon as the switching signal channel detects a rising edge at the Latch Reset control signal, the switching signal is reset (INACTIVE).

If the switching signal channel simultaneously detects an overflow or underflow event and a rising edge at the Latch Reset control signal, the switching signal is reset (INACTIVE).

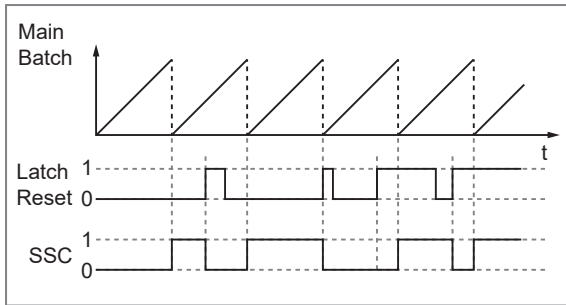


Fig. 3: Latch mode (high-active)

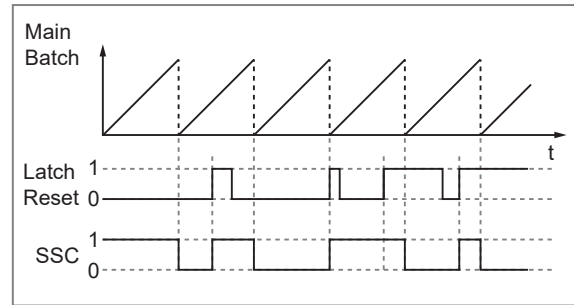


Fig. 4: Latch mode (low-active)

Switch delay is not available.

Reset delay is not available.

The hysteresis function is not available.

4.7.3 Single point mode

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the Single Point Mode switch point mode, the user can define one switch point (SP1). In the basic state, the switching signal is not set (INACTIVE). As soon as the counter value reaches SP1, the switching signal is set (ACTIVE). Subsequently, the switching signal is reset (INACTIVE).

The user can define whether the switching signal channel should evaluate increasing or decreasing counter values.

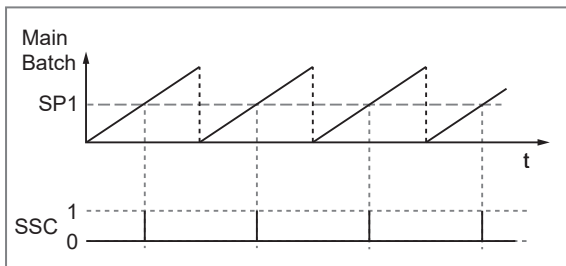


Fig. 5: Single point mode (high-active)

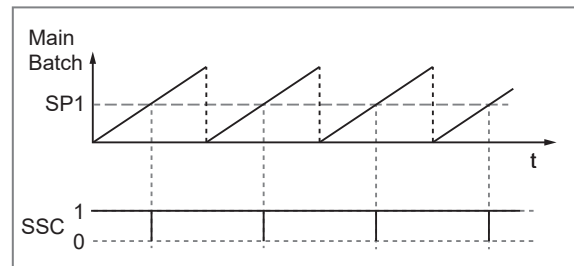


Fig. 6: Single point mode (low-active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signal.

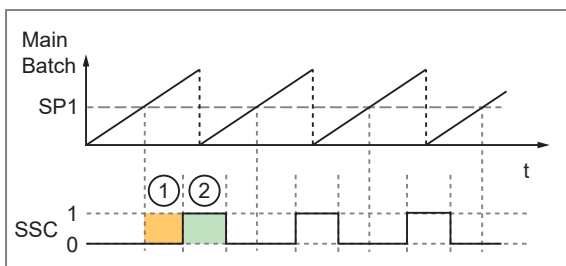


Fig. 7: Single point mode (high-active) with switch delay (1) and reset delay (2)

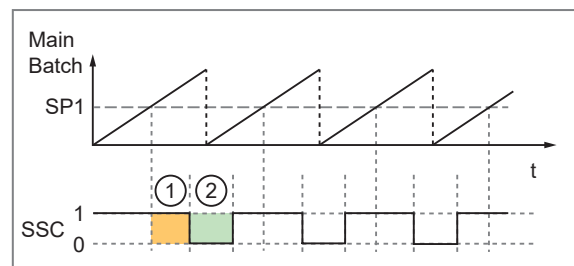


Fig. 8: Single point mode (low-active) with switch delay (1) and reset delay (2)

The hysteresis function is not available.

4.7.4 Two point mode

Can be combined with counter modules: CTUD, CTDIR

In the Two Point Mode switch point mode, the user can define a switch point (SP1) and a reset point (SP2). As soon as the counter value increases and reaches SP1, the switching signal is set (ACTIVE). As soon as the counter value decreases and reaches SP2, the switching signal is reset (INACTIVE).

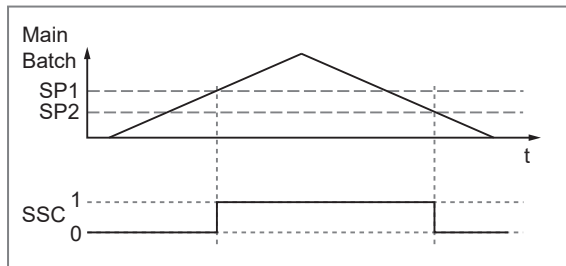


Fig. 9: Two point mode (high-active)

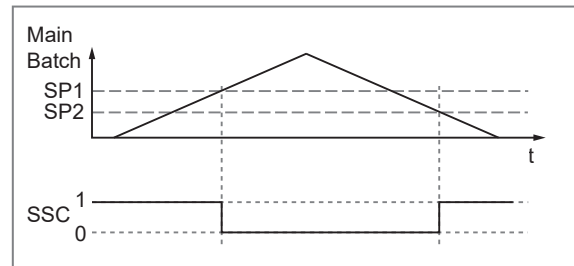


Fig. 10: Two point mode (low-active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signals. For the switching signal to be reset, the counter value must be less than SP2 for at least as long as the set reset delay.

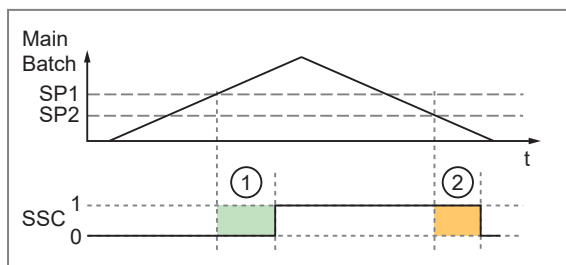


Fig. 11: Two point mode (high-active) with switch delay (1) and reset delay (2)

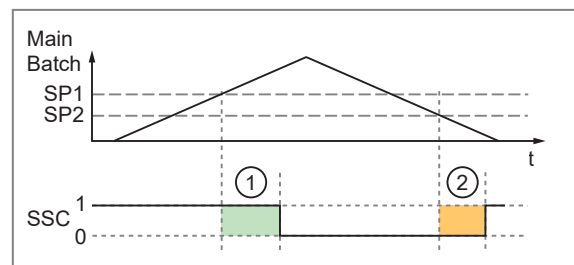


Fig. 12: Two point mode (low-active) with switch delay (1) and reset delay (2)

The hysteresis function is not available.

4.7.5 Window mode

Can be combined with counter modules: CTUD, CTDIR

In the Window Mode switch point mode, the user can define two switch points (SP1, SP2 with SP1 > SP2). The 2 switch points define a range.

If the counter value is within the SP1...SP2 range, the switching signal is set (ACTIVE).

If the counter value is outside the SP1...SP2 range, the switching signal is reset (INACTIVE).

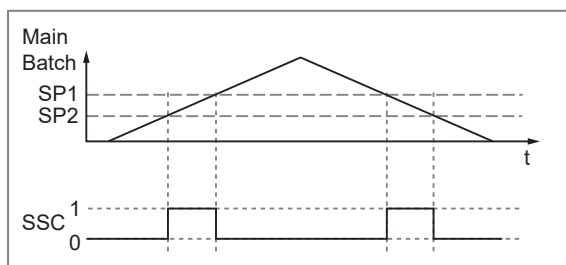


Fig. 13: Window mode (high active)

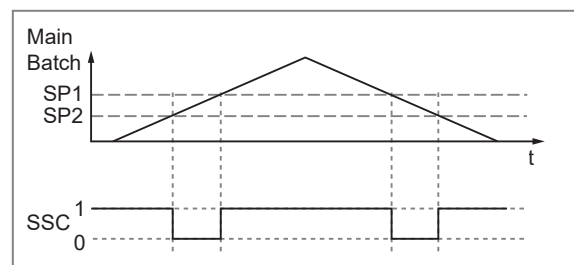


Fig. 14: Window mode (low active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signals. For the switching signal to be reset, the counter value must be less than SP2 for at least as long as the set reset delay.

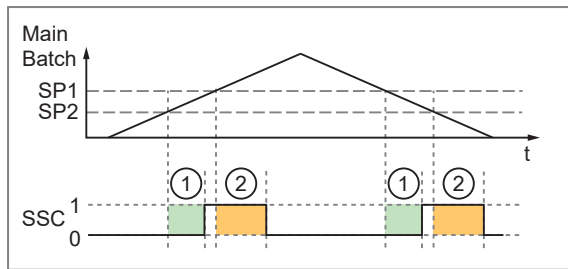


Fig. 15: Window mode (high-active) with switch delay (1) and reset delay (2)

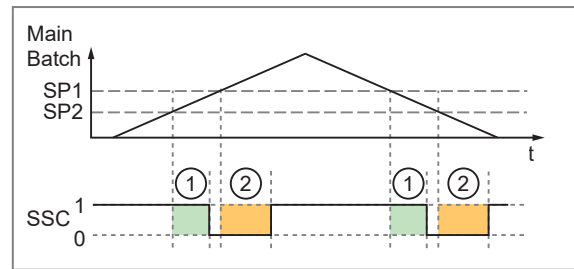


Fig. 16: Window mode (low-active) with switch delay (1) and reset delay (2)

Using the hysteresis function, the switching thresholds of switch points SP1 and SP2 can be equally increased or decreased.

Switching:

- Increasing counter value reaches SP2
- Decreasing counter value reaches SP1

Switching back:

- Increasing counter value reaches $SP1 + HyS$
 - if $SP1 + HyS > HyS_{max}$, then reset at HyS_{max}
- Decreasing counter value reaches $SP2 - HyS$
 - If $SP2 - HyS < 0$, then reset at 0

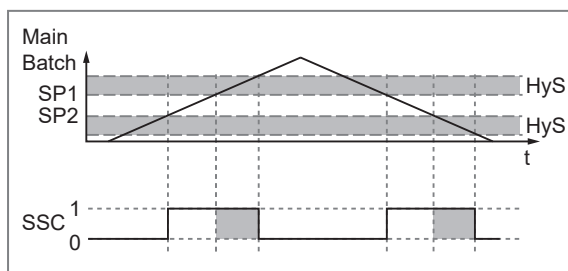


Fig. 17: Window mode (high-active) with hysteresis

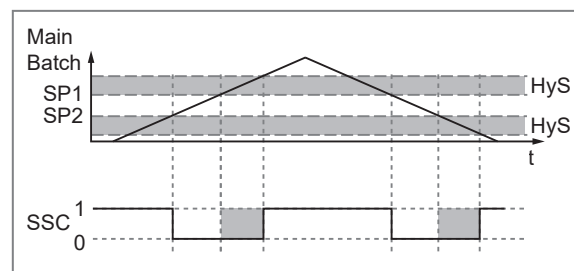


Fig. 18: Window mode (low-active) with hysteresis


4.8 EtherNet/IP

The unit supports the following EtherNet/IP functions:

- Device type: EtherNet/IP adapter
- Device Level Ring (DLR) - Media Redundancy
- Address Conflict Detection (ACD)
- Quality of Service (QoS)

5 Installation

5.1 Overview

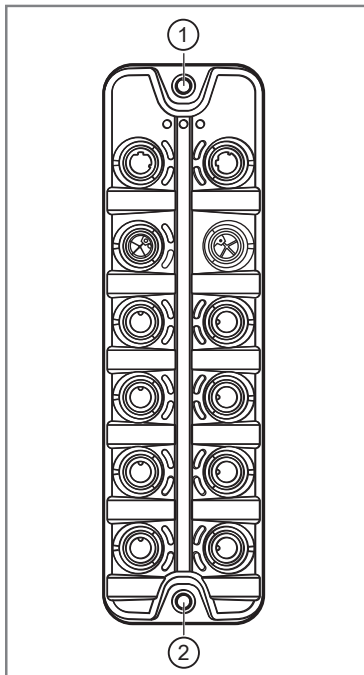

- 1: Upper mounting lug
- 2: Lower mounting lugs lug

5.2 Install device




- ▶ Disconnect the power of the machine before installation.
- ▶ Use a flat mounting surface for installation.
- ▶ Please observe the maximum tightening torque.

Fasten the device onto the mounting surface using 2 M5 mounting screws and washers (tightening torque: 1.8 Nm).

6 Electrical connection

6.1 Overview

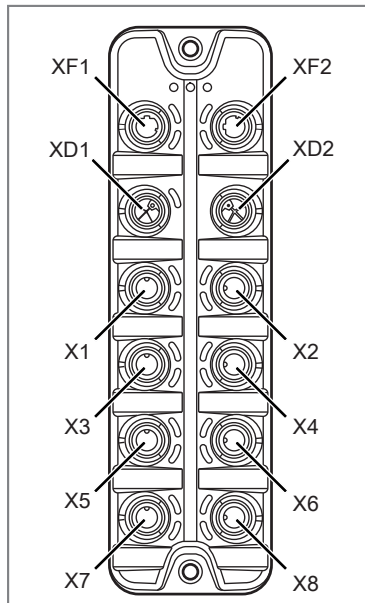

- XF1: Ethernet 1 (EtherNet/IP)
- XF2: Ethernet 2 (EtherNet/IP)
- XD1: Power IN
- XD2: Power Out
- X1: Process connection 1 (actuator)
- X2: Process connection 2 (actuator)
- X3: Process connection 3 (actuator)
- X4: Process connection 4 (actuator)
- X5: Process connection 5 (sensor)
- X6: Process connection 6 (sensor)
- X7: Process connection 7 (sensor)
- X8: Process connection 8 (sensor)

6.2 General wiring information

The device must be connected by a qualified electrician.

- Observe the national and international regulations for the installation of electrical equipment.

The device is only suitable for operation on PELV voltages.

This device contains components that may be damaged or destroyed by electrostatic discharge (ESD).

- Please observe the required precautions against electrostatic discharge!

The circuits are insulated from each other and from touchable surfaces of the device with basic insulation according to EN 61010-1.

The communication interfaces are insulated from each other and from touchable surfaces of the device with basic insulation according to EN 61010-1.

6.2.1 Connection technology


The threaded connections in the device correspond to the M12 standard. To ensure compliance with the specified protection rating, only cables that comply with this standard may be used. In the case of self-assembled cables, the system manufacturer is responsible for the protection rating.

- Use connectors with gold-plated contacts.
- During installation, place the connectors vertically so that the coupling nut will not damage the thread.
- Observe the coding of the connectors during installation.
- Cover unused connections with protective covers. Tightening torque: 1.3 ± 0.1 Nm

6.3 Ethernet

The device is connected to the EtherNet/IP network via Ethernet ports XF1 / XF2 (e. g. EtherNet/IP control, additional EtherNet/IP device). In addition, the device can be connected to an IT network via the Ethernet ports. The user can access functions of the ifm IoT Core via the IT network (parameter setting software, IoT Core Visualizer).

Wiring:

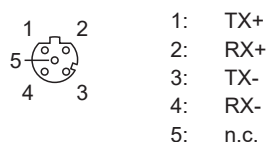

- ▶ Connect the device to the EtherNet/IP network via a free Ethernet port.
- ▶ Optional: Connect the device to the IT network via a free Ethernet port.
- ▶ For connection, use an M12 connector (minimum protection rating: IP65 / IP66 / IP67 / IP69K).
- ▶ Tighten the cable plug using 1.3 ± 0.1 Nm.

6.4 Process connections (actuators)

The actuators are connected to the device via ports X1...X4.


Maximum current rating per port: 3.6 A

Maximum current rating per port pair (X1 & X2, X3 & X4): 3.6 A

Maximum overall current rating: 8 A

The ports feature both short-circuit and overload detection.

Wiring:

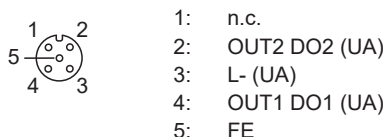

- ▶ Connect the actuators to ports X1...X4.
- ▶ For connection, use M12 connectors (minimum protection rating: IP65 / IP66 / IP67 / IP69K; max. cable length: 30 m).
- ▶ Tighten the cable plug using 1.3 ± 0.1 Nm.

6.5 Process connections (sensors)


The sensors are connected to the device via ports X5...X8.

Maximum current rating per port: 3.6 A

Maximum overall current rating: 3.6 A

The ports feature both short-circuit and overload detection.

Wiring:

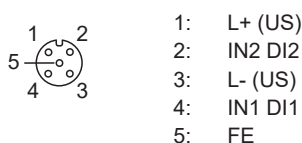

- ▶ Connect the sensors to ports X5...X8.

- For connection, use M12 connectors (minimum protection rating: IP65 / IP66 / IP67 / IP69K; max. cable length: 30 m).
- Tighten the cable plug using 1.3 ± 0.1 Nm.

6.6 Voltage supply

The device is connected to the supply voltages US and UA via the Power IN port.

The US supply voltage supplies the device and the sensors connected to the X5...X8 ports.

The UA supply voltage supplies the actuators connected to the X1...X4 ports.

The XD1 port is equipped with overvoltage protection (US, UA).

The XD1 port is equipped with reverse polarity protection (US, UA).

The XD1 port is equipped with cross polarity protection (US, UA).



CAUTION

Exceeding the maximum input current of 16 A

▷ Risk of fire

- Dimension the I_U and I_A of the US and UA supply voltages accordingly, taking into account the derating behaviour of the device: [Derating behaviour](#) (→ [21](#))

Wiring:




- 1: L+ (US)
- 2: L- (UA)
- 3: L- (US)
- 4: L+ (UA)
- 5: FE

- Disconnect power.
- Connect the device via the XD1 port to the US supply voltage with 24 V DC (20...28 V PELV).
- Connect the device via the XD1 port to the UA supply voltage with 24 V DC (20...28 V PELV).
- For connection, use an L-coded M12 connector (with at least protection rating: IP65 / IP66 / IP67 / IP69K).
- Tighten the cable sockets according to the torque specifications indicated by the cable vendor.
Maximum permissible tightening torque: 0.8 Nm

6.6.1 Derating behaviour


The current I_{US} available at the X5...X8 ports and the currents $I_{US-daisy-chain}$ and $I_{UA-daisy-chain}$ available at port XD2 depend on the ambient temperature of the device.

- Height: 2000 m

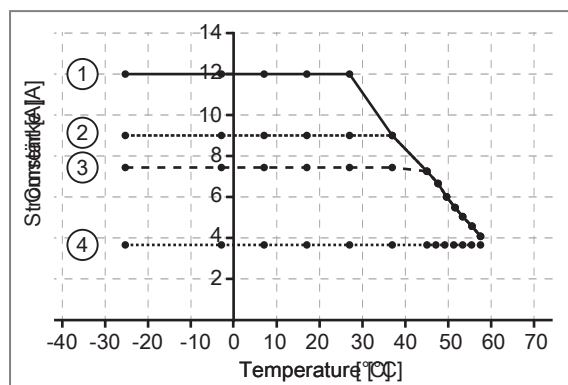


- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

- Height: 3000 m

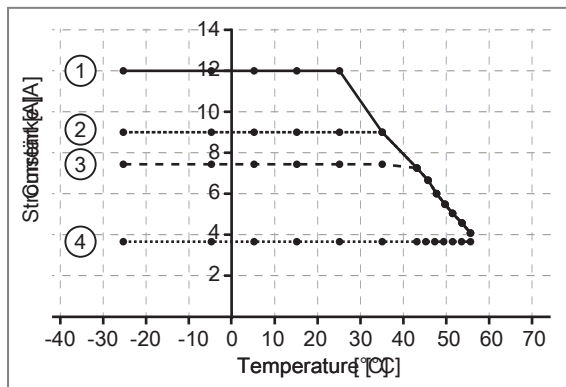

- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

- Height: 4000 m

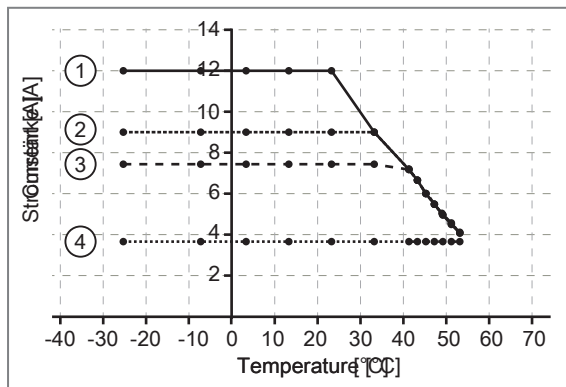

- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

6.7 Voltage output

An additional device can be supplied via the Power OUT port (daisy chain). The supply voltages US and UA are looped through from port XD1 to port XD2.

Max. current intensity for US: 15.7 A


Max. current intensity for UA: 16 A.

Wiring:

- Optional: Connect an additional device to port XD2.
- For connection, use an L-coded M12 connector (with at least protection rating: IP65 / IP66 / IP67 / IP69K).
- Tighten the cable plug using 1.3 ± 0.1 Nm.
- Observe the derating behaviour of the device!

7 Operating and display elements

7.1 LEDs

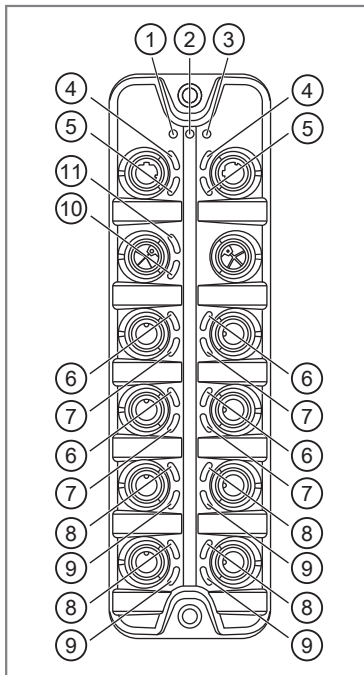

- 1: Status: RDY
- 2: Status: NET
- 3: Status: MOD
- 4: EtherNet/IP: LNK
- 5: EtherNet/IP: ACT
- 6: Process connection: DO1
- 7: Process connection: DO2
- 8: Process connection: DI1
- 9: Process connection: DI2
- 10: Voltage supply: UA
- 11: Voltage supply: US

7.1.1 Status

LED	Description	Colour	State	Description
RDY	Gateway status	-	Off	Not active or reboots
		Green	Flashes 3 s (1 Hz)	DCP signalling service initiated via fieldbus
			Flashes (5 Hz)	Error
			Flashes (200 ms on, 800 ms off)	Firmware update running
			On	OK
		Red	On	Error during firmware update (e.g. firmware not compatible)
NET	Network status	-	Off	Not powered, no IP address: device has no IP address or no voltage applied or voltage applied is too low
		Green / red / yellow	Flashes	Self test: Unit in self-test after start (→ MOD-LED)
		Green	Flashes (1 Hz)	No connection: no CIP connection established and no exclusive owner connection timeout
			On	Connected: device has IP address and at least one CIP connection established and no exclusive owner connection timeout
		Red	Flashes (1 Hz)	Connection timeout: device has IP address and exclusive owner connection timeout
			On	Duplicate IP: IP address used twice
MOD	EtherNet/IP status	--	Off	No power: no voltage is applied or the applied voltage is too low

LED	Description	Colour	State	Description
MOD	EtherNet/IP status	Green / red / yellow	Flashes	Self test: device in self-test during start
		Green	Flashes (2 Hz)	Standby: device is not configured
			On	Device operational: device functions reliably (normal operation)
		Red	Flashes (1 Hz)	Major recoverable fault: e.g. incorrect configuration
			On	Major unrecoverable fault: e.g. module failed

7.1.2 Ethernet

LED	Description	Colour	State	Description
LNK	Status of the connection	-	Off	No Ethernet connection
		Green	On	Ethernet connection established
ACT	Status of the data transmission	-	Off	No data transmission
		Yellow	Flashes	Data transmission

7.1.3 Process connections

LED	Description	Colour	State	Description
DO1	Signal level digital output (pin 4)	-	Off	Digital output - pin 4: LOW
		Yellow	On	Digital output - pin 4: HIGH
		red	flashes	Error • Short circuit after 24 V (if DO1 = LOW) • Short circuit after GND / overvoltage (if DO1 = HIGH)
			On	Output is not controlled by application
DO2	Signal level digital input (pin 2)	-	Off	Digital output– pin 2: LOW
		Yellow	On	Digital output– pin 2: HIGH
		Red	Flashes	Error • Short circuit after 24 V (if DO2 = LOW) • Short circuit after GND / overvoltage (if DO2 = HIGH)
			On	Output is not controlled by application
DI1	Signal level digital input (pin 4)	-	Off	Digital input - pin 4: LOW
		Yellow	On	Digital input - pin 4: HIGH
DI2	Signal level digital input (pin 2)	-	Off	Digital input - pin 2: LOW
		Yellow	On	Digital input - pin 2: HIGH

7.1.4 Voltage supply

LED	Description	Colour	State	Description
US	Power supply US status	-	Off	No supply voltage is applied or the applied supply voltage is too low (<4.5 V)
		Green	On	Supply voltage applied
		Red	On	Overvoltage, undervoltage, short circuit at sensor supply

LED	Description	Colour	State	Description
UA	Status power supply UA	-	Off	No supply voltage is applied or the applied supply voltage is too low (<6 V)
		Green	On	Supply voltage applied
		Red	On	Undervoltage / overvoltage / short circuit at actuator supply

8 Set-up

- ▶ Install the unit correctly.
- ▶ Establish a correct electrical connection with the device.
- ▷ Once connected to the supply voltage, the unit will start.
- ▷ The LEDs show status and error conditions.
- ▷ The unit is ready for operation.
- ▷ The device can be configured.

9 Settings

9.1 Parameter setting software

9.1.1 Supported parameter setting software

Supported parameter setting options:

- ifm moneo|IIoT Core On-Premises (art no. QM9112)
- ifm moneo|IIoT Core Cloud (art no. QCM100)
- ifm moneo|configure free



► For a correct installation: observe the installation instruction for ifm moneo.

- Install the desired parameter setting software.
- Activate the licences required for operation.
- ▷ The parameter setting software can be used for parameter setting of the device.



The configuration created with ifm moneo is overwritten when a Configuration Assembly Object is transferred to the device during connection to the EtherNet/IP PLC.

9.1.2 Establishing a connection to device

Requirements:

- ✓ The parameter setting software is correctly installed on the laptop / PC.
- ✓ The laptop / PC is connected to a free Ethernet port of the device.
- Start the parameter setting software.
- Scan the network for devices.
 - ▷ The parameter setting software recognises the device.
- Optional: [Configure the EtherNet/IP interface \(→ 27\)](#)
- Establish a connection to the device.
- ▷ The parameter setting software can access the device parameters.

9.1.2.1 Configure the EtherNet/IP interface

The EtherNet/IP interface of the device can be configured using the following options:

- Manually: IP parameters are set by the user
- DHCP: IP parameters are set by a DHCP server in the network
- BOOTP: IP parameters are set via the Bootstrap Protocol



With the parameter setting software ifm moneo or ifm moneo|configure (SA), the IP parameters of the EtherNet/IP interface can only be set during the network scan. In the editor view of the device, the configuration of the EtherNet/IP interface is read-only.

- Start the parameter setting software.
- Configure the EtherNet/IP interface of the device.
- ▷ The device has a configured EtherNet/IP interface.

9.1.3 Fieldbus interface

The [fieldbus] menu provides access to the configuration of the fieldbus interface.



The fieldbus interface can only be configured via the fieldbus configuration software.

9.1.3.1 Reading the interface configuration

- Observe the notes on the configuration of the EtherNet/IP interface: [Configure the EtherNet/IP interface](#) (→ [27](#))

Available parameters:

Name	Description	Value range	Access
[dhcp]	Status of the DHCP client of the device	- Static IP: IP parameters are set by the user - DHCP: IP parameters are set by a DHCP server in the network - BOOTP: IP parameters are set via the Bootstrap Protocol	ro ¹
[ipaddress]	IP address of the EtherNet/IP interface	e.g. 192.100.0.10 192.168.1.250 (default)	ro ¹
[subnetmask]	Subnet mask of the network segment	e.g. 255.255.255.0 255.255.255.0 (default)	ro ¹
[ipdefaultgateway]	IP address of the network gateway	e.g. 192.100.0.1 0.0.0.0 (default)	ro ¹
[macaddress]	MAC address of the Ethernet interface	e.g. 00:02:01:0E:10:7F	ro ¹
[hostname]	Name of the device in the EtherNet/IP network	e.g. al4x2x	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the [fieldbussetup] > [network] menu.
- ▷ The menu page displays the current configuration of the EtherNet/IP interface.

9.1.3.2 Reading the connection status

Available information:

Name	Description	Value range	Access
[connectionstatus]	Status of the EtherNet/IP connection	- Disconnected: Not connected - Connected: Connected	ro ¹
[fieldbusfirmware]	Firmware version of the EtherNet/IP stack	e.g. 3.4.0.7 (EtherNet/IP Adapter)	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the [fieldbussetup] menu.
- ▷ The menu page displays the status of the EtherNet/IP connection.

9.1.4 Process connections

The [io] menu provides access to the parameters of the process connections.

9.1.4.1 Configuring the input filters



► Observe the notes on input filters: [Digital input filters](#) (→ [9](#))

Available parameters:

Name	Description	Value range	Access
[debounce_time]	Debounce time (= value * 0.1 ms)	• 0: 0 ms (default) ... • 500: 50 ms	rw ¹
[hold_time]	hold time (= value * 0.1 ms)	• 0: 0 ms (default) ... • 60000: 6000 ms	rw ¹
[hold_level]	hold level	• 0: hold LOW • 1: hold HIGH (default)	rw ¹
[invert]	inversion	• 0: do not invert (default) • 1: invert	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

► Select menu [io] > [port[n]] > [pin2] (n: 5...8).

▷ The menu page shows the available filter parameters for pin 2 of the port.

► Set the parameters.

► Select menu [io] > [port[n]] > [pin4] (n: 5...8).

▷ The menu page shows the available filter parameters for pin 4 of the port.

► Set the parameters.

► Write the changed values to the device.

▷ The digital input filters have been configured.

9.1.4.2 Configuring the counter modules



► Observe the notes on counter modules: [Counter](#) (→ [11](#))



If the operating mode of a counter module is changed, the current counter values will be reset and any active events will be deleted.

Available parameters:

Name	Description	Value range	Access
[mode]	Operating mode of the counter module	• CTU (Up-counter): up counter (default) • CTD (Down-counter): down counter • CTUD (Up-counter / Down-counter): up and down counter • CTDIR (Direction Counter): up or down counter	rw ¹

Name	Description	Value range	Access
[pin2_function]	Pin 2 function of the port (Observe note!)	- N/C: no function (default) - Counter Edge Input 2: counting pulse (rising edge) - Count Direction: counting direction - Reset (Main & Batch Counter): reset main counter and batch counter - Disable (Main & Batch Counter): disable main counter and batch counter - Reset Latch: switching signal latch	rw ¹
[count_direction_selection]	Control instance for selecting the counting direction (Observe note!)	- Pin 2 Count Direction: pin 2 of the port (default) - IoT / PLC Count Direction: IoT core or fieldbus control	rw ¹
[main_threshold]	Main counter threshold (CT)	1 ... 4294967295 (default)	rw ¹
[batch_threshold]	Batch counter threshold (CTb)	1 ... 65535 (default)	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

For the parameters [pin2_function] and [count_direction_selection] all shown parameter values can be selected. It is not checked whether these make sense. For each counter operating mode (parameter [mode]), the table below indicates the valid value ranges (✓: valid setting; ✗: invalid setting):

Counter mode	Pin2 function						Count direction selection	
	No function	counter transition input 2	count direction	Reset counter	Disable counter	Reset SSC Latch	Pin 2	PLC / IoT Core
CTU	✓	✗	✗	✓	✓	✓	✗	✗
CTD	✓	✗	✗	✓	✓	✓	✗	✗
CTUD	✗	✓	✗	✗	✗	✗	✗	✗
CTDIR	✗	✗	✓	✗	✗	✗	✓	✗
	✓	✗	✗	✓	✓	✓	✗	✓

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select menu [io] > [counter[n]] (n: 5...8).
 - ▷ The menu page displays the configuration options of the counter.
- ▶ Configure the counter module.
- ▶ Optional: Configure additional counter modules.
- ▶ Write the changed values to the device.
- ▷ The counter modules are configured.

9.1.4.3 Configuring the switching signal channels



- ▶ Observe the notes on switching signal channels: [Switching signal channels \(→ 14\)](#)

Available parameters:

Available parameters (Main SSC):

Name	Description	Value range	Access
[mode]	Main SSC - switching mode of the switching channel	- Deactivated: switching channel deactivated (default) - Single Point: Single point mode. - Latch: latch mode - Two Point: Two point mode: - Window: window mode	rw ¹
[logic]	Main SSC - switching logic of the switching channel	- Active High: high active (default) - Active Low: low active	rw ¹
[sp1]	Main SSC - switch point 1	0: 0 ... 4294967295: 4294967295 (default)	rw ¹
[sp2]	Main SSC - switch point 2	0: 0 ... 4294967294: 4294967294 (default)	rw ¹
[single_point_edge]	Main SSC - Defines whether the switching channel reacts to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Main SSC - switch delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Main SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[hysteresis]	Main SSC - hysteresis	0: 0 (default) ... 4294967295: 4294967295	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Available parameters (batch SSC):

Name	Description	Value range	Access
[mode]	Batch SSC - switching mode of the switching channel	- Deactivated: switching channel deactivated (default) - Single Point: single point mode. - Latch: latch mode - Two Point: two point mode - Window: window mode	rw ¹
[logic]	Batch SSC - switching logic of the switching channel	- Active High: high active (default) - Active Low: low active	rw ¹
[sp1]	Batch SSC - switch point 1	0: 0 ... 65535: 65535 (default)	rw ¹
[sp2]	Batch SSC - switch point 2	0: 0 ... 65534: 65534 (default)	rw ¹
[single_point_edge]	Batch SSC - Defines whether the switching channel should react to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Batch SSC - switching delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Batch SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹

Name	Description	Value range	Access
[hysteresis]	Batch SSC - hysteresis	0: 0 (default) ... 65535: 65535	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

To configure the switching signal channels:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select menu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current settings of the switching channels of the main counter (main) and the batch counter (batch) of the port.
- Set the parameters.
- Write the changed values to the device.
- ▷ The switching signal channels are configured.

9.1.4.4 Configuring outputs

Available parameters:

Parameter	Description	Value range	Access
[current_limit]	Max. output current of the digital output (value in mA)	0: 0 A ... 2000: 2000 mA (default) ... 3600: 3600 mA	rw ¹
[output_select]	Selection of control instance of digital output	- PLC: higher-level PLC - Counter 1 SSC Main: Counter 1 switching channel - main counter - Counter 1 SSC Batch: Counter 1 switching channel - batch counter - Counter 2 SSC Main: Counter 2 switching channel - main counter - Counter 2 SSC Batch: Counter 2 switching channel - batch counter - Counter 3 SSC Main: Counter 3 switching channel - main counter - Counter 3 SSC Batch: Counter 3 switching channel - batch counter - Counter 4 SSC Main: Counter 4 switching channel - main counter - Counter 4 SSC Batch: Counter 4 switching channel - batch counter	rw ¹
[output_state_com_lost]	Fallback value if fieldbus connection is lost	- State off: OFF - State on: ON - Keep last: keep last valid value	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

To configure the outputs of a port:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the [io] > [port[n]] > [pin2] (n: 1...4) menu.
 - ▷ The menu page shows the current settings of the digital output on pin 2 of the port.

- ▶ Set the parameters.
- ▶ Select menu [io] > [port[n]] > [pin4] (n: 1...4).
 - ▷ The menu page shows the current settings of the digital output on pin 4 of the port.
- ▶ Set the parameters.
- ▶ Write the changed values to the device.
- ▷ The digital outputs of the device are configured.

9.1.5 Process data

The dashboard area provides access to the device's process data.

To display the dashboard area:

- ✓ The parameter value editor for the device is open.
- ▶ In the vertical bar at the right side of the screen: Click on .
- ▷ The dashboard view is displayed.

To hide the dashboard area:

- ✓ The dashboard area is displayed.
- ▶ Click on the vertical bar in the middle of the screen: Click on .
- ▷ The dashboard view is hidden.

9.1.5.1 Reading digital input data

Available information:

Name	Description	Value range	Access
[digital]	Signal level of the digital input channel (after filtering)	• LOW: off • HIGH: on	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ In the vertical bar at the right side of the screen: Click on .
- ▷ The dashboard view is displayed.
- ▷ The view shows the current signal levels of the digital outputs at pin 2 and pin 4 in substructure [io/port[n]] (n: 5...8).



The displayed signal levels are the filtered input data.

9.1.5.2 Writing the digital outputs

Available parameters:

Parameter	Description	Value range	Access
[digital_output]	Signal level of digital output channel	• Low: LOW level • High: HIGH level	rw ¹
[qualifier]	Status indication of digital output	• Output error: Error • Output okay: No error	ro ²

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² Read only

To write the digital outputs:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/port[n]/pin2] (n: 1...4), the present signal level of the output channel at pin 2 of the port is displayed.
 - ▷ In substructure [io/port[n]/pin4] (n: 1...4), the present signal level of the output channel at pin 4 of the port is displayed.
- Set the switching signals.
- Write the changed values to the device.
- ▷ The set values are output at the digital outputs.
- Check the validity of the digital outputs.

9.1.5.3 Reading counter values

Available parameters:

Name	Description	Value range	Access
[maincounter_value]	Main counter reading	0...4294967294	ro ¹
[batchcounter_value]	Batch counter value	0...65534	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/counter[n]] (n: 5...8), the current counter values of the main and batch counters are displayed.

9.1.5.4 Controlling counter modules

Available parameters:

Name	Description	Value range	Access
[disable]	Disable main counter and batch counter	• 0: counter module is active (default) • 1: counter module is not active	rw ¹
[reset]	Reset main counter, batch counter and CT and CTb thresholds to initial values	• 0: no action (default) • 1: reset	rw ¹
[direction] ²	Set the counting direction for the main counter and the batch counter	• 0: up (default) • 1: down	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² only effective if operating mode of counter module = CTDIR

Requirements:

- ✓ The parameter setting software has been started.

- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/counter[n]] (n: 5...8), the available control signals of the counter modules are displayed.
- Optional: Disable the counter module.
- Optional: Reset the counter module.
- Optional: Set the counting direction of the counter module.
- Write the changed parameter values to the device.
- ▷ The selected actions are executed.

9.1.5.5 Reading the switching signals

Available data:

Name	Description	Value range	Access
[state]	State of the switching signal	• False: Off • True: On	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/port[n]/ssc] (n: 5...8), the current states of the switching signals of the main counter (main) and the batch counter (batch) of the port are displayed.

9.1.5.6 Controlling the switching signal channels

Available data:

Name	Description	Value range	Access
[reset_latch]	Reset switching signal (only effective if switch-point mode = latch)	• Inactive → Active: reset switching signal • otherwise: no action	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure io/port[n]/ssc (n: 5...8), the control signals for the switching channels of the main counter (main) and the batch counter (batch) of the port are displayed.
- Set the control signals.
- Write the changed values to the device.
- ▷ The switching signal channels pass into the new state.

9.1.5.7 Reading status and diagnostic information



The measuring accuracy of the current and voltage values of the device supply US is $\pm 10\%$.

Available information:

Parameter	Description	Value range	Access
[temperature]	Device temperature (value in °C)	-30...80	ro ¹
[supervisionstatus_us]	Status of the US device supply	0: No error 1: Error	ro ¹
[supervisionstatus_ua]	Status of the UA device supply	0: No error 1: Error	ro ¹
[voltage_us]	Present voltage value of the US device supply (value in mV)	0...40000	ro ¹
[current_us]	Present current value of the US device supply (value in mA)	0...40000	ro ¹
[voltage_ua]	Present voltage value of the UA device supply (value in mV)	0...4000	ro ¹
[current_ua_upper]	Present current value of the UA device supply of ports 1&2 (value in mA)	0...4000	ro ¹
[current_ua_lowerr]	Present current value of the UA device supply of ports 3&4 (value in mA)	0...4000	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on
 - ▷ The dashboard view is displayed.
- ▷ The view shows the device's status and diagnostic information in the [processdatamaster] substructure.

9.1.6 Device information

The [deviceinfo] menu provides access to the device's identification information.

9.1.6.1 Reading identification information

Available information:

Name	Description	Value range	Access
[productcode]	Article number	AL4323	ro ¹
[devicefamily]	Device family	Ethernet modules	ro ¹
[vendor]	Manufacturer	ifm electronic gmbh	ro ¹
[swrevision]	Firmware revision	e.g. AL4x2x_fw_eip_1.4.0.137	ro ¹
[hwrevision]	Hardware revision (status)	e.g. AA	ro ¹
[bootloaderrevision]	Bootloader version	e.g. AL4xxx_bl_1.2.0.35	ro ¹
[serialnumber]	Serial number	e.g. 0002043100003	ro ¹
[fieldbustype]	Fieldbus	EtherNet/IP	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.

- ✓ The detailed view of the device is active.
- ▶ Select the menu option [deviceinfo].
- ▷ The menu page displays the identification information of the device.

9.1.7 Device ID

Das Menü [devicetag] bietet Zugriff auf die Gerätekenungung.

9.1.7.1 Setting the application tag

Available parameters:

Parameter	Description	Value range	Access
[applicationtag]	Application-specific identifier of the device in moneo	e.g. plant 1 machine 3	rw ¹

¹ Read and write

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select [devicetag] menu.
- ▶ Enter the application identifier.
- ▶ Write the changed values to the device.
- ▷ The device can be identified by the selected application tag.

9.1.8 Device control

Das Menü [firmware] bietet Zugriff auf die Funktionen zur Steuerung des Geräts.

9.1.8.1 Resetting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [factoryreset].
- ▷ The device is reset to factory settings.
- ▷ All parameters are set to their default values.

9.1.8.2 Restarting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [Reboot].
- ▷ The device will be restarted.
- ▷ All set parameter values will be retained.

9.1.8.3 Reading the firmware version

Available information:

Parameter	Description	Value range	Access
[version]	Firmware version	e.g. AL4x2x_fw_eip_1.4.0.137	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the [Firmware] menu.
- ▷ The menu page displays the firmware version of the device.

9.2 IoT-Core Visualizer


The IoT Core Visualizer provides a graphical user interface to access the functions of the ifm IoT Core.

9.2.1 Starting the ifm IoT Core Visualizer

To start the IoT Core Visualizer:

Requirements:

- ✓ The laptop / PC is connected directly or via a suitable network coupling element (e.g. switch) to a EtherNet/IP port (XF1 / XF2) of the device.
- ✓ EtherNet/IP interface has been configured.
- ▶ Start web browser.
- ▶ Go to the following URL: `http://<ip-address>` (e.g. `http://192.168.0.10`)
- ▶ The web browser displays the start page of the IoT Core Visualizer.

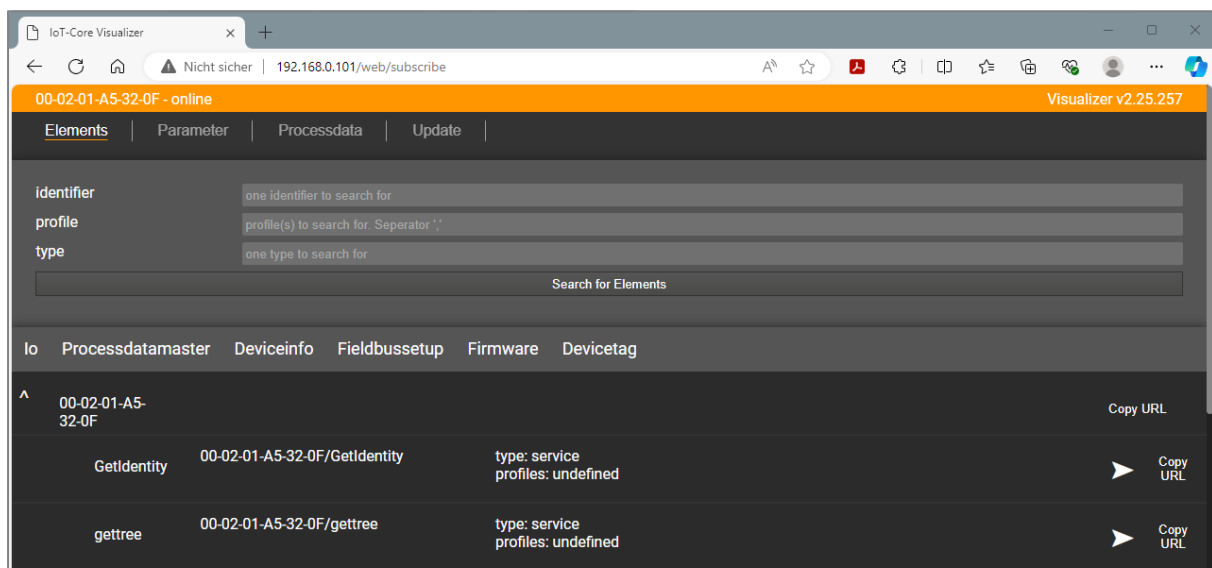

The navigation menu gives the user access to the following functions:

- [Elements]: [Searching for elements of the IoT Core \(→ 40\)](#)
- [Parameter]: [Configuring the device \(→ 41\)](#)
- [Processdata]: [Accessing the process data \(→ 48\)](#)
- [Update]: [Update firmware \(→ 52\)](#)

9.2.2 Searching for elements of the IoT Core

The [Elements] menu page allows you to search the IoT Core tree for elements with specific properties and output the results.

The following properties can be searched for:

- [identifier]: Name of the element
- [profile]: Profile of the element
- [type]: Type of the element

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Elements] menu is active.

00-02-01-A5-32-0F - online Visualizer v2.25.257

Elements | Parameter | Processdata | Update

identifier: one identifier to search for
 profile: profile(s) to search for. Separator ','
 type: one type to search for

Search for Elements

Io	Processdatamaster	Deviceinfo	Fieldbussetup	Firmware	Devicetag
^	00-02-01-A5-32-0F				Copy URL
	GetIdentity	00-02-01-A5-32-0F/GetIdentity		type: service profiles: undefined	Copy URL
	gettree	00-02-01-A5-32-0F/gettree		type: service profiles: undefined	Copy URL
	querytree	00-02-01-A5-32-0F/querytree		type: service profiles: undefined	Copy URL
	getsubscrib	00-02-01-A5-32-0F/getsubscriberlist		type: service profiles: undefined	Copy URL

- ▶ Select the search criteria for the required element in the selection lists [identifier], [profile] and [type].
- ▶ Click on [Search for Elements].
- ▶ Click on [Search for...].
- ▷ IoT Core Visualizer searches the device description for elements with selected search criteria.
- ▷ The result list shows all the elements found.

9.2.3 Configuring the device

The [Parameter] menu page provides access to the configuration options of the device.



The configuration created with the IoT Core Visualizer will be overwritten when a Configuration Assembly Object is transferred to the device during connection to the EtherNet/IP PLC.

Requirements:

- ✓ IoT Core Visualizer has been started.
- Select the [Parameter] menu.
- ▷ The menu page shows the available parameters of the device.

00-02-01-A5-32-0F - online Visualizer v2.25.257

Elements | **Parameter** | Processdata | Update

Io | Deviceinfo | Fieldbussetup | Firmware | Devicetag

^ 00-02-01-A5-32-0F

- ▼ io
- ▼ deviceinfo type: structure profiles: deviceinfo
- ▼ fieldbussetup
- ▼ firmware type: structure profiles: software,software/uploadablesoftware,devicereset
- ^ devicetag type: structure profiles: devicetag
 - applicationtag

Type:	string
Namespace:	json
Encoding:	UTF-8
Valuation:	minlength: 0 maxlength: 31

Copy URL  

9.2.3.1 Reading the configuration of the EtherNet/IP interface

Available parameters:

Name	Description	Values	Access
[network] > [dhcp]	Status of the DHCP client	- Static IP: Static IP address - DHCP: DHCP (Dynamic Host Configuration protocol) - BOOTP: BOOTP (Bootstrap Protocol)	ro ¹
[network] > [ipaddress]	IP address of the Ethernet interface	e.g. 192.200.0.100 192.168.1.250 (default)	ro ¹
[network] > [subnetmask]	Subnet mask of the network segment	e.g. 255.255.192.0 255.255.255.0 (default)	ro ¹
[network] > [ipdefaultgateway]	IP address of the network gateway	e.g. 192.200.63.1 0.0.0.0 (default)	ro ¹
[network] > [macaddress]	MAC address of the Ethernet interface	e.g. 00:02:01:0E:10:7C	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [fieldbussetup] > [network] submenu.
- ▷ The menu page displays the current configuration of the EtherNet/IP interface.

9.2.3.2 Configuring input filters



- ▶ Observe the notes on input filters: [Digital input filters](#) (→ [9](#))

Available parameters:

Name	Description	Value range	Access
[debounce_time]	Debounce time (= value * 0.1 milliseconds)	0: 0 ms (default) ... 500: 50 ms	rw ¹
[hold_time]	Hold time (= value * 0.1 milliseconds)	0: 0 ms (default) ... 60000: 6000 ms	rw ¹
[hold_level]	Hold level	- low: hold LOW - high: hold HIGH (default)	rw ¹
[invert]	Inversion	- signal not inverted: do not invert (default) - signal inverted: invert	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 5...8).
 - ▷ The menu page shows the current settings of the digital input filters on pin 2 and pin 4 of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes to the device.

▷ The filters of the digital inputs are configured.

9.2.3.3 Configuring the counter modules



► Observe the notes on counter modules: [Counter \(→ 11\)](#)



If the operating mode of a counter module is changed, the current counter values will be reset and any active events will be deleted.

For the parameters [pin2_function] and [count_direction_selection] all shown parameter values can be selected. It is not checked whether these make sense. For each counter operating mode (parameter [mode]), the table below indicates the valid value ranges (✓: valid setting; ✗: invalid setting):

Counter mode	pin2_function					count_direction_selection	
	Counter Edge Input 2	Count Direction	Reset (Main & Batch Counter)	Disable (Main & Batch Counter)	Reset SSC Latch (Main & Batch Counter)	Pin 2 Count Direction	IoT / PLC Count Direction
CTU	✗	✗	✓	✓	✓	✗	✗
CTD	✗	✗	✓	✓	✓	✗	✗
CTUD	✓	✗	✗	✗	✗	✗	✗
CTDIR	✗	✓	✓	✓	✓	✓	✓

Available parameters:

Name	Description	Value range	Access
[mode]	Operating mode of the counter module	- CTU (up counter): up counter (default) - CTD (down counter): down counter - CTUD (up counter / down counter): up and down counter - CTDIR (direction counter): up and down counter with selectable counting direction	rw ¹
[pin2_function]	Pin 2 function of the port (→ Observe note!)	- N/C: no function (default) - Counter edge input 2: counting pulse (rising edge) - Count direction: counting direction - Reset (main & batch counter): reset main counter and batch counter - Disable (main & batch counter): disable main counter and batch counter - Reset SSC Latch (Main & Batch Counter): reset switching signal	rw ¹
[count_direction_selection]	Control instance for selecting the counting direction (→ Observe note!)	- Pin 2 count direction: pin 2 (default) - IoT / PLC count direction: IoT Core / Fieldbus PLC	rw ¹
[main_threshold]	Main counter threshold (CT)	1 ... 4294967295 (default)	rw ¹
[batch_threshold]	Batch counter threshold (CTb)	1 ... 65535 (default)	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

✓ IoT Core Visualizer has been started.

- ✓ The [Parameter] menu is active.
- Select submenu [io] > [port[n]] > [counter] (n: 5...8).
 - ▷ The menu page shows the current settings of the port's counter module.
- Set the parameters.
- Click on  to save the changes.
- ▷ The counter modules are configured.

9.2.3.4 Configuring the switching signal channels



- Observe the notes on switching signal channels: [Switching signal channels](#) (→  14)

Available parameters (Main SSC):

Name	Description	Value range	Access
[mode]	Main SSC - switching mode of the switching channel	• Deactivated: switching channel deactivated (default) • Single Point: Single point mode. • Latch: latch mode • Two Point: Two point mode: • Window: window mode	rw ¹
[logic]	Main SSC - switching logic of the switching channel	• Active High: high active (default) • Active Low: low active	rw ¹
[sp1]	Main SSC - switch point 1	• 0: 0 ... • 4294967295: 4294967295 (default)	rw ¹
[sp2]	Main SSC - switch point 2	• 0: 0 ... • 4294967294: 4294967294 (default)	rw ¹
[single_point_edge]	Main SSC - Defines whether the switching channel reacts to increasing or decreasing counter values	• Rising Counter Value: rising edge (default) • Falling Counter Value: falling edge	rw ¹
[switch_delay]	Main SSC - switch delay (value in ms)	• 0: 0 ms (default) ... • 65535: 65535 ms	rw ¹
[reset_delay]	Main SSC - reset delay (value in ms)	• 0: 0 ms (default) ... • 65535: 65535 ms	rw ¹
[hysteresis]	Main SSC - hysteresis	• 0: 0 (default) ... • 4294967295: 4294967295	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Available parameters (batch SSC):

Name	Description	Value range	Access
[mode]	Batch SSC - switching mode of the switching channel	• Deactivated: switching channel deactivated (default) • Single Point: single point mode. • Latch: latch mode • Two Point: two point mode • Window: window mode	rw ¹
[logic]	Batch SSC - switching logic of the switching channel	• Active High: high active (default) • Active Low: low active	rw ¹

Name	Description	Value range	Access
[sp1]	Batch SSC - switch point 1	0: 0 ... 65535: 65535 (default)	rw ¹
[sp2]	Batch SSC - switch point 2	0: 0 ... 65534: 65534 (default)	rw ¹
[single_point_edge]	Batch SSC - Defines whether the switching channel should react to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Batch SSC - switching delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Batch SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[hysteresis]	Batch SSC - hysteresis	0: 0 (default) ... 65535: 65535	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current settings of the switching channels of the main counter ([main]) and the batch counter ([batch]) of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes.
- ▷ The switching signal channels are configured.

9.2.3.5 Configuring the digital outputs

Available parameters:

Parameter	Description	Value range	Access
[current_limit]	Max. output current of the digital output (value in mA)	0: 0 A ... 2000: 2000 mA (default) ... 3600: 3600 mA	rw ¹

Parameter	Description	Value range	Access
[output_select]	Selection of control instance of digital output	- PLC: higher-level PLC - Counter 1 SSC Main: Counter 1 switching channel - main counter - Counter 1 SSC Batch: Counter 1 switching channel - batch counter - Counter 2 SSC Main: Counter 2 switching channel - main counter - Counter 2 SSC Batch: Counter 2 switching channel - batch counter - Counter 3 SSC Main: Counter 3 switching channel - main counter - Counter 3 SSC Batch: Counter 3 switching channel - batch counter - Counter 4 SSC Main: Counter 4 switching channel - main counter - Counter 4 SSC Batch: Counter 4 switching channel - batch counter	rw ¹
[output_state_com_lost]	Fallback value if fieldbus connection is lost	- State off: OFF - State on: ON - Keep last: keep last valid value	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 1...4).
 - ▷ The menu page shows the current settings of the digital output channels on pin 2 and pin 4 of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes.
- ▷ The digital outputs are configured.

9.2.3.6 Reading device information

Available information:

Name	Description	Value range	Access
[productcode]	Article number	AL4323	ro ¹
[vendor]	Vendor	ifm electronic	ro ¹
[devicefamily]	Device family	Ethernet modules	ro ¹
[serialnumber]	Serial number (12 digits)	e.g. 000174210161	ro ¹
[hwrevision]	Hardware revision	E.g. AA	ro ¹
[swrevision]	Firmware version	E.g. AL4x2x_fw_eip_1.4.0.137	ro ¹
[bootloaderrevision]	Bootloader version	E.g. AL4xxx_bl_1.2.0.35	ro ¹
[fieldbustype]	Fieldbus	EtherNet/IP	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [deviceinfo] submenu.
 - ▷ The menu page shows device information.

9.2.3.7 Reading the firmware version

Available information:

Name	Description	Value range	Access
[version]	Firmware version	AL4x2x_fw_eip_1.4.0.137	ro ¹
[type]	Type	• firmware: Firmware type	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [firmware] submenu.
- ▷ The menu page shows the available information.

9.2.3.8 Setting the application tag

Available parameters:

Name	Description	Value range	Access
[applicationtag]	Device designation in monitoring software	E.g. "factory 2 plant 1"	rw ¹

¹ Read and write



32 bytes are available on the device for storing the `applicationtag` parameter. If the memory range is exceeded, the device will abort the write process (diagnostic code 400).

- ▶ When writing the `applicationtag` parameter, observe the different memory requirements of the individual UTF-8 characters (characters 0-127: 1 byte per character; character >127: more than 1 byte per character).

Requirements:


- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [devicetag] submenu.
 - ▷ The menu page shows the current settings.
- ▶ Enter the application tag.
- ▶ Click on  to save the changes to the device.
- ▷ The new application tag is set.

9.2.4 Accessing the process data

The [Processdata] menu page provides access to the process data of the device.

Requirements:

- ✓ IoT Core Visualizer has been started.
- ▶ Select the [Processdata] menu.
- ▷ The menu page shows the substructures of the device description that contains the process data.
- ▷ The current process values are displayed.

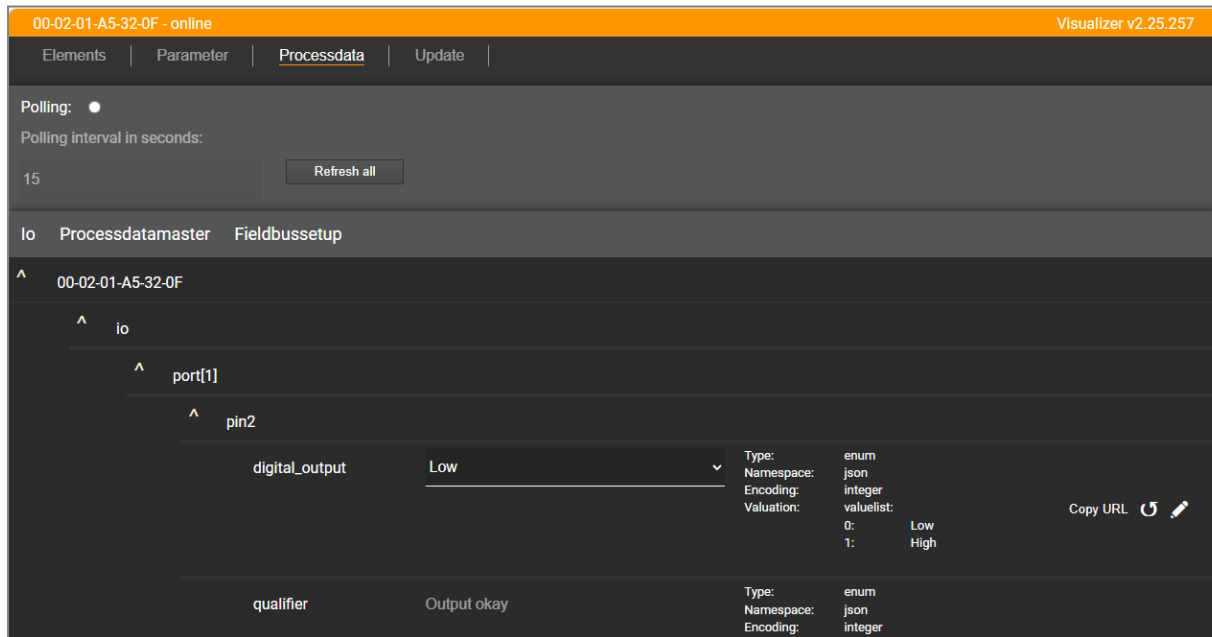

- ▶ Optional: In the header, activate the [Polling] option and set the polling interval.
 - ▷ The process values will be refreshed with the set interval.
- ▶ Optional: Click on ↺ next to an element to manually refresh the process value.

9.2.4.1 Reading digital input data

Available information:

Name	Description	Value range	Access
[digital_input]	Process value digital input (after filtering)	- Low: LOW - High: HIGH	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] (n: 5...8).
- ▷ The menu page shows the digital input data on pin 2 and pin 4 of the port.

9.2.4.2 Reading counter values

Available information:

Name	Description	Value range	Access
[maincounter_value]	Current main counter value	0...4294967295	ro ¹
[batchcounter_value]	Current batch counter value	0...65535	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] > [counter] (n: 5...8).
- ▷ The menu page shows current counter values of the counter module.

9.2.4.3 Controlling counter modules

Available control signals:

Name	Description	Values	Access
[reset]	Reset counter module (reset counter and threshold values to default values)	- inactive: no action (default) - active: reset	rw ¹
[disable]	Disable counter module	- inactive: enable counter (default) - active: disable counter	rw ¹
[direction] ²	Set counting direction for main counter and batch counter	- up: up (default) - down: down	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² only effective if operating mode of counter module = CTDIR

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] > [counter] (n: 5...8).
 - ▷ The menu page shows the available services.
- Set the control signals.
- Click on  to send the control signals to the device.
- ▷ The control signals are executed.

9.2.4.4 Writing the digital outputs

Available data:

Name	Description	Value range	Access
[digital_output]	Signal level of digital output channel	- Low: LOW level - High: HIGH level	rw ¹
[qualifier]	Status of digital output	- Output error: error - Output okay: no error	ro ²

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 1...4).
 - ▷ The menu page shows the options for controlling the digital outputs on pin 2 and pin 4 of the port.
- ▶ Set the value of the digital outputs.
- ▶ Click on  to save the changes.
- ▷ The set value is provided at the digital output.
- ▶ Check whether the status of the digital output is error-free.

9.2.4.5 Reading the switching signal signals

Available data:

Name	Description	Value range	Access
[state]	State of the switching signal	- False: OFF - True: ON	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current states of the switching signals of the main counter (main) and the batch counter (batch) of the port.

9.2.4.6 Controlling the switching signal channels

Available data:

Name	Description	Value range	Access
[reset_latch]	Reset the switching signal (only effective if switch point mode = Latch)	- Inactive > Active: Reset switching signal (INACTIVE) - otherw.: no action	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] > [ssc] (n: 5...8).

- ▷ The menu page shows the control signals for the switching channels of the main counter (main) and the batch counter (batch) of the port.
- ▶ Set the status of the switching signals.
- ▶ Click on  to save the changes.

9.2.4.7 Reading status and diagnostic information



The measuring accuracy of the current and voltage values of the device supply US is $\pm 10\%$.

Available information:

Name	Description	Value range	Access
[temperature]	Device temperature (value in °C)	E.g. 52: 52 °C	ro ¹
[voltage_us]	Present voltage value of device supply US (value in mV)	E.g. 25236: 25236 mV	ro ¹
[current_us]	Present current value of device supply US (value in mA)	E.g. 82: 82 mA	ro ¹
[supervisionstatus_us]	Status of device supply US	• OK: no error • Fault: error	ro ¹
[voltage_ua]	Voltage value of device supply UA (value in mV)	E.g. 25236: 25236 mV	ro ¹
[current_ua_upper]	Upper current value of device supply UA (value in mA)	E.g. 2: 2 mA	ro ¹
[current_ua_lower]	Lower current value of device supply UA (value in mA)	E.g. 82: 82 mA	ro ¹
[supervisionstatus_ua]	Status of device supply UA	• OK: no error • Fault: error	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select the [processdatamaster] submenu.
- ▷ The menu page shows status and diagnostic information.

9.2.4.8 Reading the connection status

Available information:

Name	Description	Value range	Access
[connectionstatus]	Status of the connection to the EtherNet/IP network	• disconnected: not connected • Connected: connected	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select the [fieldbussetup] submenu.
- ▷ The menu page shows the connection status.
- ▷ The menu page shows the number of disconnections.

9.2.5 Update firmware

The [Update] menu page allows you to update the firmware of the device:

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ New firmware has been downloaded. documentation.ifm.com
- ▶ Select the [Update] menu.
- ▷ Menu page shows information about the current firmware version.

00-02-01-A5-32-0F - online Visualizer v2.25.257

Elements | Parameter | Processdata | **Update**

Firmware

00-02-01-A5-32-0F/firmware

Version:	AL4x0x_fw_pn_1.4.0.154 ↕	Container	
Type:	firmware ↕	Chunk size:	4096 ↕
		Max size:	4128768 ↕
		Size:	0 ↕

choose software package

- ▶ Click on [Load software file] and select the new firmware file (*.bin).
- ▶ Click on [Update] to start the update process.
- ▷ The firmware of the device is updated.
- ▷ The progress of the update process is displayed.
- ▷ After successful update: The device reboots automatically.

9.3 EtherNet/IP

9.3.1 Register the EDS file

For the mapping of the device in an EtherNet/IP configuration software ifm provides an Electronic Device Description (EDS). The device description file contains identification information, supported parameters, process data and fieldbus objects. The user can download the EDS file from the website documentation.ifm.com.

To add the device to the device catalogue of RSLogix 5000:

Requirements:

- ✓ Download the EDS file of the device.
- ▶ Start the EtherNet/IP projection software "RSLogix 5000".
- ▶ Select [Tools] > [EDS Hardware Installation Tool].
 - ▷ The wizard starts.
- ▶ Register the downloaded EDS file using the wizard.
 - ▷ The device is added to the device catalogue of the EtherNet/IP projection software.
 - ▷ RSLogix 5000 can access functions and data of the device.


9.3.2 Integrate the device into the EtherNet/IP project

The device is integrated into the project as an Ethernet module.

Requirements:

- ✓ The EDS file of the device is installed correctly.
- ▶ Start RSLogix 5000.
- ▶ Create a new EtherNet/IP project or open an existing one.
- ▶ Add the required components (e.g. PLC, IO scanner) to the automation network and configure them.
- ▶ In [Controller Organizer]: Open the folder [I/O Configuration].
- ▶ Right-click on the node [Ethernet].
 - ▷ The context menu appears.
- ▶ In the context menu, select [New module...].
 - ▷ The module selection dialogue appears.
- ▶ Select the device in the catalogue and click on [Create].
 - ▷ The [New Module]dialogue window appears.
- ▶ Enter the name and IP address and confirm with [OK].
 - ▷ The device has been integrated in the EtherNet/IP project.

Example:

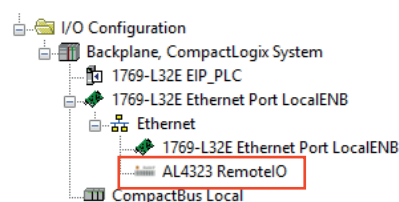

9.3.3 Set connection types

The connection types determine the type and scope of the available parameters and process data of the device.

Supported connection types:

Connection type	Configuration assembly	Input assembly	Output assembly
Exclusive Owner 101	Instance 189	Instance 110	Instance 160
Exclusive Owner 102	Instance 188	Instance 111	Instance 160
Exclusive Owner 103	Instance 188	Instance 112	Instance 160
Input only	Instance 189	Instance 110	Instance 193 (empty)
Listen only	Instance 189	Instance 110	Instance 192 (empty)

Detailed information on the Assembly Objects:




If an “Exclusive owner” connection exists between the IO scanner and the device, the device will switch to the “Implicit protection mode”.

- ▷ In the “Implicit protection mode”, acyclic access to the CIP object “Identity Object” and its functions (e.g. reset device) is not possible. Any access attempts will be denied with the error message `Device state conflict (0x10)`.

To set the connection type:

Requirements:

- ✓ Device is integrated in EtherNet/IP project.
- ▶ In [Controller Organizer]: Double-click on the device node.
 - ▷ The device configuration dialogue appears.
- ▶ Click on [Change...].
 - ▷ The [Module Definition] dialogue appears.

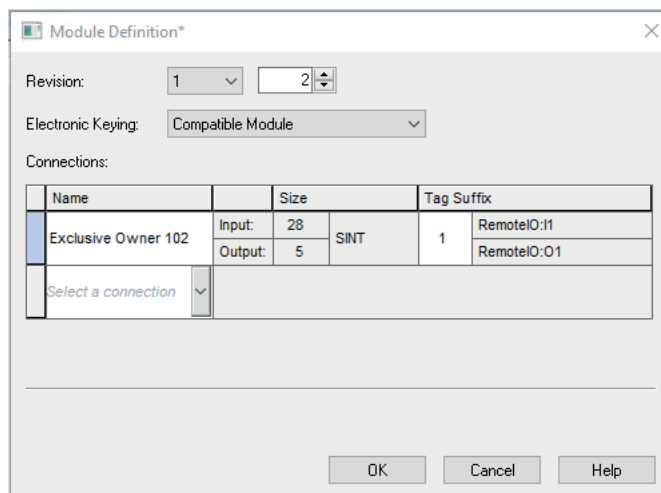

- ▶ Select the required connection type from the list [Connections].
- ▶ If necessary, set the data type to [INT].
- ▶ Click on [OK] to acknowledge the input.
- ▷ Based on the selected connection type, RSLogix 5000 generates the controller tags of the device (Configuration , Input , Output).

9.3.4 Configure input filters



- ▶ Observe the notes on input filters: [Digital input filters](#) (→ 9)

The filters of the digital inputs can be configured via the following objects:

- Configuration Assembly (Instance 198)
- Configuration Assembly (Instance 199)

There is a separate configuration area for each input filter.

Available parameters per input filter:

- debounce time
- hold time
- hold level
- signal inversion

Requirements:

- ✓ Device is integrated in EtherNet/IP project.
- ✓ Connection type [Exclusive Owner] or [Inputs only] is set.
- ▶ In [Controller Organizer], select the device folder.
- ▶ Select [Controller Tags].
 - ▷ [Controller Tags] displays the configuration of the device (`DeviceName.C:Data`).
- ▶ Set the parameters.
- ▷ The input filters have been configured.

9.3.5 Configuring the digital outputs

The digital outputs on pin 2 and pin 4 of ports X1...X4 can be configured via the following objects:

- [Configuration assembly \(instance 188\)](#) (→ [□ 60](#))
- [Configuration assembly \(instance 189\)](#) (→ [□ 64](#))

Each digital output can be configured separately.

Available parameters per digital output:

- Max. current value
- Fallback value if connection to controller is lost
- Control instance for digital output

Requirements:

- ✓ The device has been integrated into the EtherNet/IP project.
- ✓ Connection type [Exclusive Owner 101] or [Exclusive Owner 103] is set.
- ▶ In the [Controller Organizer]: double-click on the [Controller Tags] node.
 - ▷ The [Controller Tags] view shows the available parameters (`DeviceName.C:Data`).
- ▶ Set the parameters.
- ▶ Save the project.
- ▷ The digital outputs are configured.
- ▷ The changed configuration will be activated the next time the application is downloaded to the device.

9.3.6 Configuring the counter modules and switching channels



- ▶ Observe the notes on counter modules: [Counter](#) (→ [□ 11](#))



- Observe the notes on switching signal channels: [Switching signal channels](#) (→ [14](#))

The counter modules and the switching signal channels (SSC) of ports X5...X8 are configured via the following objects:

- [Configuration assembly \(instance 188\)](#) (→ [60](#))

Available parameters for counter modules:

- operating mode of the counter module
- pin 2 function of the port (only operating modes CTU, CTD)
- pin 2 function of the port / selection of the count direction (only operating mode CTDIR)
- threshold CT of the main counter
- threshold CTb of the batch counter

Available parameters per switching channel:

- Main SSC - switching mode
- Main SSC - switching logic
- Main SSC - reaction to increasing / decreasing counter edges
- Main SCC - switch point SP1
- Main SCC - switch point SP2
- Main SCC - switch delay
- Main SCC - reset delay
- Main SCC - hysteresis
- Batch SCC - switching mode
- Batch SCC - switching logic
- Batch SCC - reaction to increasing / decreasing counter edges
- Batch SCC - switch point SP1
- Batch SCC - switch point SP2
- Batch SCC - reset delay
- Batch SCC - reset delay
- Batch SCC - hysteresis

Requirements:

- ✓ The device has been integrated into the EtherNet/IP project.
- ✓ Connection type [Exclusive Owner] is set.
- In the [Controller Organizer]: double-click on the [Controller Tags] node.
 - ▷ The [Controller Tags] view shows the available parameters (`DeviceName.C:Data`).
- Set the parameters.
- Save the project.
- ▷ The counter modules and the assigned switching channels are activated and configured.
- ▷ The changed configuration will be activated the next time the application is downloaded to the device.

9.3.7 Accessing the process data of the ports

Available input data of ports X5...X8:

- digital input data (after filtering)

- qualifiers of the digital input data
- status of the voltage supply

Available output data of ports X1...X4:

- digital output data
- qualifiers of the digital output data

The process data is transmitted in the following objects:

- [Input assembly \(instance 110\)](#) (→ [□ 66](#))
- [Input assembly \(instance 111\)](#) (→ [□ 68](#))
- [Input assembly \(instance 112\)](#) (→ [□ 71](#))
- [Output assembly \(instance 160\)](#) (→ [□ 74](#))

Requirements:

- ✓ Device is integrated in EtherNet/IP project.
- ✓ The device is configured.
- ✓ Connection type [Exclusive Owner 100], [Exclusive Owner 101], [Exclusive Owner 102], [Inputs only] or [Listen only] is set.
- ▶ In the [Controller Organizer]: double-click on the [Controller Tags] node.
- ▶ In [Controller Organizer], select the device folder.
- ▶ Select [Controller Tags].
 - ▷ The substructure [DeviceName.I:Data] shows the input data of the device.
 - ▷ The substructure [DeviceName.O:Data] shows the output data of the device:
- ▶ Link the process data to variables.
- ▷ The process data of the port is available in the application.

9.3.8 Using energy monitoring

The device offers an energy monitoring function.



The measuring accuracy of the current and voltage values of the device supply US is $\pm 10\%$.

Available energy monitoring:

- Supply voltage US error indication
- Supply voltage UA error indication
- Present voltage value of supply voltage US
- Present current value of supply voltage US
- Present voltage value of supply voltage UA
- Present current value of supply voltage UA
- Supply voltage US error indication
- Supply voltage UA error indication - ports 1&2
- Supply voltage UA error indication - ports 3&4
- Present voltage value of supply voltage US
- Present current value of supply voltage US
- Present voltage value of supply voltage UA
- Present current value of supply voltage UA - ports 1&2
- Present current value of supply voltage UA - ports 3&4

The data is transmitted in the following objects:

- [Input assembly \(instance 110\) \(→ □ 66\)](#)
- [Input assembly \(instance 112\) \(→ □ 71\)](#)

Requirements:

- ✓ The device is integrated into the project.
- ✓ Connection type [Exclusive Owner 101] or [Exclusive Owner 103] is set.
- In the [Controller Organizer]: double-click on the [Controller Tags] node.
 - ▷ The [Controller Tags] view shows the available input data (`DeviceName.I.Data`).
- Link the input data to variables.
- ▷ The energy monitoring data is available in the application.

9.3.9 Acyclic access

The user can access identification and diagnostic information as well as configuration and process data acyclically via the CIP object classes.

The device supports the following CIP objects:

Class Code	Name	Description
0x01	Identity Object	Identity Object (Class Code: 0x01) (→ □ 77)
0x02	Message Router Object	Message Router Object (Class Code: 0x02) (→ □ 79)
0x04	Assembly Object	Assembly Object (Class Code: 0x04) (→ □ 80)
0x06	Connection Manager Object	Connection Manager Object (Class Code: 0x06) (→ □ 81)
0x109	LLDP Management Object	LLDP Management Object (Class Code: 0x109) (→ □ 92)
0x47	Device Level Ring Object	Device Level Ring Object (Class Code: 0x47) (→ □ 82)
0x48	Quality Of Service Object	Quality Of Service Object (Class Code: 0x48) (→ □ 83)
0x81	Input Filter Object	Input Filter Object (Class Code: 0x81) (→ □ 84)
0x84	Counter / SCC Object	Counter / SCC object (class: 0x84) (→ □ 86)
0xF5	TCP/IP Object	TCP/IP Object (Class Code: 0xF5) (→ □ 88)
0xF6	Ethernet Link Object	Ethernet Link Object (Class Code: 0xF6) (→ □ 90)



ifm electronic recommends configuring the counter modules via the Configuration Assembly instead of via Counter/SSC Object 0x84.

9.3.9.1 Notes on acyclic access

For acyclic sending and receiving of data, EtherNet/IP applications use the Message (MSG) command.



For detailed information about the Message (MSG) command: → user documentation of the EtherNet/IP projection software

10 Maintenance, repair and disposal

The operation of the device is maintenance-free.

- ▶ Dispose of the device in an environmentally friendly way in accordance with the applicable national regulations when it is no longer used.

10.1 Cleaning

- ▶ Disconnect the device from the voltage supply.
- ▶ Clean the device from dirt using a soft, chemically untreated and dry cloth.
- ▶ In case of severe soiling, use a damp cloth.



- ▶ Do not use any caustic cleaning agents for cleaning!

10.2 Update firmware

The system software of the device can be updated using the following options:

- IoT-Core Visualizer: [Update firmware](#) (→ [52](#))

11 Appendix

11.1 EtherNet/IP

11.1.1 Parameters

11.1.1.1 Configuration assembly (instance 188)

Byte	Bit							
	7	6	5	4	3	2	1	0
0	X2 DO2 Pin2 Output State COM Lost		X2 DO1 Pin4 Output State COM Lost		X1 DO2 Pin2 Output State COM Lost		X1 DO1 Pin4 Output State COM Lost	
1	X4 DO2 Pin2 Output State COM Lost		X4 DO1 Pin4 Output State COM Lost		X3 DO2 Pin2 Output State COM Lost		X3 DO1 Pin4 Output State COM Lost	
2...7	X5 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings □ 61)							
8...13	X5 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings □ 61)							
14...19	X6 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings □ 61)							
20...25	X6 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings □ 61)							
26...31	X7 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings □ 61)							
32...37	X7 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings □ 61)							
38...43	X8 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings □ 61)							
44...49	X8 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings □ 61)							
50	X1 DO2 Pin2 Output Select				X1 DO1 Pin4 Output Select			
51	X2 DO2 Pin2 Output Select				X2 DO1 Pin4 Output Select			
52	X3 DO2 Pin2 Output Select				X3 DO1 Pin4 Output Select			
53	X4 DO2 Pin2 Output Select				X4 DO1 Pin4 Output Select			
54...88	Counter 1: Counter + SSC Settings (→ Mapping: counter + SSC settings □ 62)							
89...123	Counter 2: Counter + SSC Settings (→ Mapping: counter + SSC settings □ 62)							
124...158	Counter 3: Counter + SSC Settings (→ Mapping: counter + SSC settings □ 62)							
159...193	Counter 4: Counter + SSC Settings (→ Mapping: counter + SSC settings □ 62)							

Legend:

- | | | | |
|----------------------|---|-------|---|
| • OutputStateCOMLost | Fallback value for output channel if connection is lost | 2 BIT | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH • 0x2: keep last value |
| • OutputSelect | Control instance for output channel | 4 BIT | <ul style="list-style-type: none"> • 0x0: PLC • 0x1: Counter 1 SSC Main • 0x2: Counter 1 SSC Batch • 0x3: Counter 2 SSC Main • 0x4: Counter 2 SSC Batch • 0x5: Counter 3 SSC Main" • 0x6: Counter 3 SSC Batch • 0x7: Counter 4 SSC Main • 0x8: Counter 4 SSC Batch |

[illegible]

• Invert Input	Signal inversion	USINT / rw	• 0x00: do not invert (default) • 0x01: invert
• Hold Level	Signal level to be maintained	USINT / rw	• 0x00: LOW • 0x01: HIGH (default)
• Debounce Time	Debounce time (value in *0.1 ms) Debounce Time = 0x0123 • Debounce Time[0] = 0x23 • Debounce Time[1] = 0x01	UINT / rw ...	• 0x0000: 0 ms (default) • 0x01F4: 50 ms
• Hold Time	Hold time (value in *0.1 ms) Hold Time = 0x0123 • Hold Time[0] = 0x23 • Hold Time[1] = 0x01	UINT / rw ...	• 0x0000: 0 ms (default) • 0xEA60: 6000 ms

Mapping: counter + SSC settings

Byte / Off-set	Bit							
	7	6	5	4	3	2	1	0
n	Counter Direction Selection	Pin2 Function			res.	Counter Mode		
n+1	Main Threshold							
n+5	res.			Main Single Point Edge	Main Switchpoint Logic	Main Switchpoint Mode		
n+6	Main SP1 Counter							
n+10	Main SP2 Counter							
n+14	Main Switch Delay							
n+16	Main Reset Delay							
n+18	Main Hysteresis							
n+22	BatchThreshold							
n+24	res.			Batch Single Point Edge	Batch Switchpoint Logic	Batch Switchpoint Mode		
n+25	Batch SP1 Counter							
n+27	Batch SP2 Counter							
n+29	Batch Switch Delay							
n+31	Batch Reset Delay							
n+33	Batch Hysteresis							

Legend:

- Counter Mode

Operating mode of the counter module

3 BIT

- 0x0: CTU – Up Counter (default)
 - 0x1: CTD – Down Counter
 - 0x2: CTUD - Up/Down Counter
 - 0x3: CTDIR – Direction Counter
- Pin2 Function

Pin 2 function of the port

3 BIT

- 0x0: N/C (default)
 - 0x1: counter transition input 2
 - 0x2: count direction
 - 0x03: reset main & batch counter
 - 0x04: disable main & batch counter
 - 0x05: reset main & batch SSC
- Counter Direction Selection

Instance for selecting the counting direction

1 BIT

- 0x0: pin 2 (default)
 - 0x1: PLC
- Main Threshold

Threshold CT of the main counter
Main Threshold = 0x01234567

4 BYTE

- Main Threshold[0] = 0x01
 - Main Threshold[1] = 0x23
 - Main Threshold[2] = 0x45
 - Main Threshold[3] = 0x67
- Main Switchpoint Mode

Main counter + SSC - switching mode of the switching channel

3 BIT

- 0x0: Deactivated (Default)
 - 0x1: Single-point mode
 - 0x2: Latch mode
 - 0x3: Two-point mode
 - 0x4: Window mode
- Main Switchpoint Logic

Main counter + SSC - switching logic of the switching channel

1 BIT

- 0x0: High active (default)
 - 0x1: Low active

• Main Single Point Edge	Main Counter + SSC - reaction to rising or falling counter values	1 BIT	• 0x0: Rising counter value (default) • 0x1: falling counter value
• Main SP1 Counter	Main counter + SSC - switch point 1 Main SP1 Counter = 0x01234567 • Main SP1 Counter[0] = 0x01 • Main SP1 Counter[1] = 0x23 • Main SP1 Counter[2] = 0x45 • Main SP1 Counter[3] = 0x67	4 BYTE	• 0x0000 0000: 0 ... • 0xFFFF FFFF: 4294967295 (default)
• Main SP2 Counter	Main counter + SSC - switch point 2 Main SP2 Counter = 0x01234567 • Main SP2 Counter[0] = 0x01 • Main SP2 Counter[1] = 0x23 • Main SP2 Counter[2] = 0x45 • Main SP2 Counter[3] = 0x67	4 BYTE	• 0x0000 0000: 0 ... • 0xFFFF FFEE: 4294967294 (default)
• Main Switch Delay	Main counter + SSC - switching delay (value in ms)	2 BYTE	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• Main Reset Delay	Main counter + SSC - reset delay (value in ms)	2 BYTE	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• Main Hysteresis	Main counter + SSC - hysteresis	4 BYTE	• 0x0000 0000: 0 (default) ... • 0xFFFF FFFF: 4294967295
• Batch Threshold	Threshold CTb of the batch counter	2 BYTE	0x0001: 1 ... 0xFFFF: 65535 (default)
• Batch Switchpoint Mode	Batch Counter + SSC - switch point mode	3 BIT	• 0x0: Deactivated (default) • 0x1: Single-point mode • 0x2: Latch mode • 0x3: Two-point mode • 0x4: Window mode
• Batch Switchpoint Logic	Batch Counter + SSC - switch point logic	1 BIT	• 0x0: High Active (default) • 0x1: Low Active
• Batch Single Point Edge	Batch Counter + SSC - reaction to increasing or decreasing counter values	1 BIT	• 0x0: Rising Counter Value (Default) • 0x1: Falling Counter Value
• Batch SP1 Counter	Batch counter + SSC - switch point 1	2 BYTE	• 0x0000: 0 ... • 0xFFFF: 65535 (default)
• Batch SP2 Counter	Batch Counter + SSC - switch point 2	2 BYTE	• 0x0000: 0 ... • 0xFFFE: 65534 (default)
• Batch Switch Delay	Batch Counter + SSC - switch delay (value in ms)	2 BYTE	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• Batch Reset Delay	Batch Counter + SSC - reset delay (value in ms)	2 BYTE	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• Batch Hysteresis	Batch Counter + SSC - hysteresis	2 BYTE	• 0x0000: 0 (default) ... • 0xFFFF: 65535

11.1.1.2 Configuration assembly (instance 189)

Byte	Bit							
	7	6	5	4	3	2	1	0
0	X2 DO2 Pin2 Output State COM Lost		X2 DO1 Pin4 Output State COM Lost		X1 DO2 Pin2 Output State COM Lost		X1 DO1 Pin4 Output State COM Lost	
1	X4 DO2 Pin2 Output State COM Lost		X4 DO1 Pin4 Output State COM Lost		X3 DO2 Pin2 Output State COM Lost		X3 DO1 Pin4 Output State COM Lost	
2...7	X5 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
8...13	X5 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
14...19	X6 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
20...25	X6 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
26...31	X7 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
32...37	X7 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
38...43	X8 DI1 Pin4: Filter Settings (→ Mapping: Filter Settings ▢ 65)							
44...49	X8 DI2 Pin2: Filter Settings (→ Mapping: Filter Settings ▢ 65)							

Mapping: Filter Settings

Byte / Off-set	Bit							
	7	6	5	4	3	2	1	0
n	Invert Input							
n+1	Hold Level							
n+2	Debounce Time							
n+4	Hold Time							

Legend:

- Invert Input
 - Hold Level
 - Debounce Time
 - Hold Time

Signal inversion

Signal level to be maintained

Debounce time (value in *0.1 ms)
Debounce Time = 0x0123

 - Debounce Time[0] = 0x23
 - Debounce Time[1] = 0x01

Hold time (value in *0.1 ms)
Hold Time = 0x0123

 - Hold Time[0] = 0x23
 - Hold Time[1] = 0x01

USINT / rw

USINT / rw

UINT / rw

UINT / rw

- 0x00: do not invert (default)
 - 0x01: invert
 - 0x00: LOW
 - 0x01: HIGH (default)
 - 0x0000: 0 ms (default)
 - ...
 - 0x01F4: 50 ms
 - 0x0000: 0 ms (default)
 - ...
 - 0xEA60: 6000 ms

11.1.2 Cyclic data

11.1.2.1 Input assembly (instance 110)

Byte	Contents
0	Power Status & Counter Events
1	Digital Inputs State
2...3	Sensor Supply Voltage
4...5	Sensor Supply Current
6...7	Actuator Supply Voltage
8...9	Upper Actuator Supply Current
10...11	Lower Actuator Supply Current

Legend:

• Power Status & Counter Events	Status of the power supply and over-flow/underflow events of the counter modules 1...4	USINT / ro	Power Status & Counter Events (Mapping) (→ □ 67)
• Digital Inputs State	Digital inputs of the ports X5...X8	USINT / ro	Digital Inputs State (Mapping) (→ □ 67)
• Sensor Supply Voltage	Present voltage value of the US supply voltage (in mV)	UINT / ro	• 0x0000: 0 mV ... • 0x0FA0: 4000 mV
• Sensor Supply Current	Present current value of the US supply voltage (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA
• Actuator Supply Voltage	Present voltage value of the UA supply voltage (in mV)	UINT / ro	• 0x0000: 0 mV ... • 0x0FA0: 4000 mV
• Upper Actuator Supply Current	Present current value of the UA supply voltage - ports 1&2 (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA
• Lower Actuator Supply Current	Present current value of the UA supply voltage - ports 3&4 (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA

Power Status & Counter Events (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	C4 OF / UF Event	C3 OF / UF Event	C2 OF / UF Event	C1 OF / UF Event	res.	AUX PWR LOWER	AUX PWR UPPER	SENS PWR

Legend:

- | | | | |
|--------------------|--|-------|---|
| • SENS PWR | Error indication supply voltage US | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR UPPER | Error indication supply voltage UA - ports 1&2 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR LOWER | Error indication supply voltage UA - ports 3&4 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • Cx OF / UF Event | Counter module x: Display of an overflow or underflow event (x: 1...4) | 1 BIT | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Overflow/underflow event recognised |

Digital Inputs State (Mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	X8 DI2 Pin 2	X8 DI1 Pin 4	X7 DI2 Pin 2	X7 DI1 Pin 4	X6 DI2 Pin 2	X6 DI1 Pin 4	X5 DI2 Pin 2	X5 DI1 Pin 4

Legend:

- | | | | |
|-------------|--|------------|---|
| • DI1 Pin 4 | Signal level of the digital input channel DI1 on pin 4 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • DI2 Pin 2 | Signal level of the digital input channel DI2 on pin 2 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

11.1.2.2 Input assembly (instance 111)

Byte	Contents
0	Power Status & Counter Events
1	Digital Inputs State
2...5	C1 Main Counter Value
6...7	C1 Batch Counter Value
8...11	C2 Main Counter Value
12...13	C2 Batch Counter Value
14...17	C3 Main Counter Value
18...19	C3 Batch Counter Value
20...23	C4 Main Counter Value
24...25	C4 Batch Counter Value
26	Main Counter Events
27	Batch Counter Events

Legend:

- Power Status & Counter Events Status of the power supply and overflow/underflow events of the counter modules 1...4 USINT / ro [Power Status & Counter Events \(Mapping\) \(→ □ 69\)](#)
- Digital Inputs State Digital inputs of the ports X5...X8 USINT / ro [Digital Inputs State \(Mapping\) \(→ □ 69\)](#)
- Cx Main Counter Value Counter module x: Current counter value of the main counter (x: 1...4) UDINT / ro [Main counter value \(Mapping\) \(→ □ 69\)](#)
- Cx Batch Counter Value Counter module x: Current counter value of the batch counter (x: 1...4) UINT / ro [Batch counter value \(Mapping\) \(→ □ 70\)](#)
- Main Counter Events Reset overflow/underflow event of the main counter 1...4 USINT / ro [Main Counter Events \(mapping\) \(→ □ 70\)](#)
- Batch Counter Events Reset overflow/underflow events of the batch counter 1...4 USINT / ro [Batch Counter Events \(mapping\) \(→ □ 70\)](#)

Power Status & Counter Events (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	C4 OF / UF Event	C3 OF / UF Event	C2 OF / UF Event	C1 OF / UF Event	res.	AUX PWR LOWER	AUX PWR UPPER	SENS PWR

Legend:

- | | | | |
|--------------------|--|-------|---|
| • SENS PWR | Error indication supply voltage US | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR UPPER | Error indication supply voltage UA - ports 1&2 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR LOWER | Error indication supply voltage UA - ports 3&4 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • Cx OF / UF Event | Counter module x: Display of an overflow or underflow event (x: 1...4) | 1 BIT | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Overflow/underflow event recognised |

Digital Inputs State (Mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	X8 DI2 Pin 2	X8 DI1 Pin 4	X7 DI2 Pin 2	X7 DI1 Pin 4	X6 DI2 Pin 2	X6 DI1 Pin 4	X5 DI2 Pin 2	X5 DI1 Pin 4

Legend:

- | | | | |
|-------------|--|------------|---|
| • DI1 Pin 4 | Signal level of the digital input channel DI1 on pin 4 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • DI2 Pin 2 | Signal level of the digital input channel DI2 on pin 2 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

Main counter value (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	Main Counter Value[0]							
n+1	Main Counter Value[1]							
n+2	Main Counter Value[2]							
n+3	Main Counter Value[3]							

Legend:

- | | | | |
|--|---|------------------------------|---|
| <ul style="list-style-type: none"> • Main Counter Value | <p>Current counter value of the main counter</p> <p>Main Counter Value = 0x01234567:</p> <ul style="list-style-type: none"> • Main Counter Value[0]: 0x67 • Main Counter Value[2]: 0x45 • Main Counter Value[1]: 0x23 • Main Counter Value[0]: 0x01 | <p>UDINT / ro</p> <p>...</p> | <ul style="list-style-type: none"> • 0x0000 0000: 0 • 0xFFFF FFFE: 4294967294 |
|--|---|------------------------------|---|

Batch counter value (Mapping)

[illegible]

Legend:

- | | | | |
|-----------------------|--|-----------|-----------------|
| • Batch Counter Value | Current counter value of the batch counter | UINT / ro | • 0x0000: 0 |
| | Batch Counter Value = 0x0123 | | ... |
| | • Batch Counter Value[0]: 0x23 | | • 0xFFFF: 65534 |
| | • Batch Counter Value[1]: 0x01 | | |

Main Counter Events (mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	Main Counter 4 OF / UF Event	Main Counter 3 OF / UF Event	Main Counter 2 OF / UF Event	Main Counter 1 OF / UF Event	res.	res.	res.	res.

Legend:

- | | | | |
|--|--|------------|--|
| <ul style="list-style-type: none"> • Main Counter x OF/UF Event | Counter x: Display overflow/underflow event on the main counter (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: no event • 0x1: overflow/underflow event |
|--|--|------------|--|

Batch Counter Events (mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	Batch Counter 4 OF / UF Event	Batch Counter 3 OF / UF Event	Batch Counter 2 OF / UF Event	Batch Counter 1 OF / UF Event	res.	res.	res.	res.

Legend:

- | | | | |
|---|---|------------|--|
| <ul style="list-style-type: none"> Batch Counter x OF/UF Event | Counter x: Overflow/underflow event displayed on the batch counter (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> 0x0: no event 0x1: overflow/underflow event |
|---|---|------------|--|

11.1.2.3 Input assembly (instance 112)

Byte	Contents
0	Power Status & Counter Events
1	Digital Input States
2...3	Sensor Supply Voltage
4...5	Sensor Supply Current
6...7	Actuator Supply Voltage
8...9	Upper Actuator Supply Current
10...11	Lower Actuator Supply Current
12...15	C1 Main Counter Value
16...17	C1 Batch Counter Value
18...21	C2 Main Counter Value
22...23	C2 Batch Counter Value
24...27	C3 Main Counter Value
28...29	C3 Batch Counter Value
30...33	C4 Main Counter Value
34...35	C4 Batch Counter Value
36	Main Counter Events
37	Batch Counter Events

Legend:

• Power Status & Counter Events	Status of the power supply and overflow/underflow events of the counter modules 1...4	USINT / ro	Power Status & Counter Events (Mapping) (→ □ 72)
• Digital Inputs State	Digital inputs of the ports X5...X8	USINT / ro	Digital Inputs State (Mapping) (→ □ 72)
• Sensor Supply Voltage	Present voltage value of the US supply voltage (in mV)	UINT / ro	• 0x0000: 0 mV ... • 0x0FA0: 4000 mV
• Sensor Supply Current	Present current value of the US supply voltage (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA
• Actuator Supply Voltage	Present voltage value of the UA supply voltage (in mV)	UINT / ro	• 0x0000: 0 mV ... • 0x0FA0: 4000 mV
• Upper Actuator Supply Current	Present current value of the UA supply voltage - ports 1&2 (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA
• Lower Actuator Supply Current	Present current value of the UA supply voltage - ports 3&4 (in mA)	UINT / ro	• 0x0000: 0 mA ... • 0x0E10: 3600 mA
• Cx Main Counter Value	Counter module x: Current counter value of the main counter (x: 1...4)	UDINT / ro	Main counter value (Mapping) (→ □ 72)
• Cx Batch Counter Value	Counter module x: Current counter value of the batch counter (x: 1...4)	UINT / ro	Batch counter value (Mapping) (→ □ 73)
• Main Counter Events	Reset overflow/underflow event of the main counter 1...4	USINT / ro	Main Counter Events (mapping) (→ □ 73)
• Batch Counter Events	Reset overflow/underflow events of the batch counter 1...4	USINT / ro	Batch Counter Events (mapping) (→ □ 73)

Power Status & Counter Events (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	C4 OF / UF Event	C3 OF / UF Event	C2 OF / UF Event	C1 OF / UF Event	res.	AUX PWR LOWER	AUX PWR UPPER	SENS PWR

Legend:

- | | | | |
|--------------------|--|-------|---|
| • SENS PWR | Error indication supply voltage US | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR UPPER | Error indication supply voltage UA - ports 1&2 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • AUX PWR LOWER | Error indication supply voltage UA - ports 3&4 | 1 BIT | <ul style="list-style-type: none"> • 0x0: no error • 0x1: error |
| • Cx OF / UF Event | Counter module x: Display of an overflow or underflow event (x: 1...4) | 1 BIT | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Overflow/underflow event recognised |

Digital Inputs State (Mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	X8 DI2 Pin 2	X8 DI1 Pin 4	X7 DI2 Pin 2	X7 DI1 Pin 4	X6 DI2 Pin 2	X6 DI1 Pin 4	X5 DI2 Pin 2	X5 DI1 Pin 4

Legend:

- | | | | |
|-------------|--|------------|---|
| • DI1 Pin 4 | Signal level of the digital input channel DI1 on pin 4 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • DI2 Pin 2 | Signal level of the digital input channel DI2 on pin 2 of the port (after filtering) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

Main counter value (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	Main Counter Value[0]							
n+1	Main Counter Value[1]							
n+2	Main Counter Value[2]							
n+3	Main Counter Value[3]							

Legend:

- | | | | |
|--|---|------------------------------|---|
| <ul style="list-style-type: none"> • Main Counter Value | <p>Current counter value of the main counter</p> <p>Main Counter Value = 0x01234567:</p> <ul style="list-style-type: none"> • Main Counter Value[0]: 0x67 • Main Counter Value[2]: 0x45 • Main Counter Value[1]: 0x23 • Main Counter Value[0]: 0x01 | <p>UDINT / ro</p> <p>...</p> | <ul style="list-style-type: none"> • 0x0000 0000: 0 • 0xFFFF FFFE: 4294967294 |
|--|---|------------------------------|---|

Batch counter value (Mapping)

Byte (Offset)	Bit							
	7	6	5	4	3	2	1	0
n	Batch Counter Value[0]							
n+1	Batch Counter Value[1]							

Legend:

- Batch Counter Value Current counter value of the batch counter UINT / ro • 0x0000: 0
 Batch Counter Value = 0x0123 ... • 0xFFFFE: 65534
 - Batch Counter Value[0]: 0x23
 - Batch Counter Value[1]: 0x01

Main Counter Events (mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	Main Counter 4 OF / UF Event	Main Counter 3 OF / UF Event	Main Counter 2 OF / UF Event	Main Counter 1 OF / UF Event	res.	res.	res.	res.

Legend:

- Main Counter x OF/UF Event Counter x: Display overflow/underflow event on the main counter (x: 1...4) 1 BIT / ro • 0x0: no event
 • 0x1: overflow/underflow event

Batch Counter Events (mapping)

Byte (offset)	Bit							
	7	6	5	4	3	2	1	0
n	Batch Counter 4 OF / UF Event	Batch Counter 3 OF / UF Event	Batch Counter 2 OF / UF Event	Batch Counter 1 OF / UF Event	res.	res.	res.	res.

Legend:

- Batch Counter x OF/UF Event Counter x: Overflow/underflow event displayed on the batch counter (x: 1...4) 1 BIT / ro • 0x0: no event
 • 0x1: overflow/underflow event

11.1.2.4 Output assembly (instance 160)

Byte	Contents
0	Digital Outputs State
1	Counter 1 functions
2	Counter 2 functions
3	Counter 3 functions
4	Counter 4 functions

Legend:

- Digital Outputs State Digital outputs of the ports X1...X4 USINT / rw [Digital Outputs State \(mapping\)](#)
(→ [75](#))
- Counter x functions Counter module x: Control signals (x: 1...4) USINT / rw [Counter x functions \(mapping\)](#)
(→ [75](#))

Digital Outputs State (mapping)

Byte	Bit							
	7	6	5	4	3	2	1	0
n	X4 DO2 Pin 2	X4 DO1 Pin 4	X3 DO2 Pin 2	X3 DO1 Pin 4	X2 DO2 Pin 2	X2 DO1 Pin 4	X1 DO2 Pin 2	X1 DO1 Pin 4

Legend:

- | | | | |
|-------------|--|------------|---|
| • DO1 Pin 4 | Switching level of the digital output channel DO1 on pin 4 of the port | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • DO2 Pin 2 | Switching level of the digital output channel DO2 on pin 2 of the port | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

Counter x functions (mapping)

Byte	Bit							
	7	6	5	4	3	2	1	0
n	Batch Counter x Event Reset	Main Counter x Event Reset	Counter x Event Reset	Batch Counter x SSC Latch Reset	Main Counter x SSC Latch Reset	Counter x Direction	Counter x Disable	Counter x + SSC x Reset

- | | | | |
|-----------------------------------|--|------------|--|
| • Counter x + SSC x Reset | Counter module x: reset Main + Batch SSC Counter (x: 1...4) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset Main SSC Counter + Batch SSC Counter and counter events to overflow/underflow |
| • Counter x Disable | Counter module x: disable Main + Batch Counter (x: 1...4) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: disable Main SSC Counter + Batch SSC Counter |
| • Counter x Direction | Counter module x: set Main + Batch Counter (x: 1...4) <ul style="list-style-type: none"> • only effective if the parameter [Counter Mode] = [CTDIR] and the parameter [Counter Direction Selection] = [PLC] | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: up • 0x1: down |
| • Main Counter x SSC Latch Reset | Switching channel x: reset the latch signal of the Main Counter switching channel (x: 1...4) <ul style="list-style-type: none"> • only effective if the parameter [Mode] = [Latch] | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset latch signal |
| • Batch Counter x SSC Latch Reset | Switching channel x: reset the latch signal of the Batch Counter switching channel (x: 1...4) <ul style="list-style-type: none"> • only effective if the parameter [Mode] = [Latch] | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset latch signal |
| • Counter x Event Reset | Counter module x: reset overflow/underflow events (x: 1...4) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset events |
| • Main Counter x Event Reset | Counter module x: reset overflow/underflow event of the main counter (x: 1...4) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset events |
| • Batch Counter x Event Reset | Counter module x: reset overflow/underflow event of the batch counter (x: 1...4) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset events |

11.1.3 Acyclical data

11.1.3.1 CIP object classes

Supported object classes:

Class Code	Name	Description
0x01	Identity Object	Identity Object (Class Code: 0x01) (→ ¶ 77)
0x02	Message Router Object	Message Router Object (Class Code: 0x02) (→ ¶ 79)
0x04	Assembly Object	Assembly Object (Class Code: 0x04) (→ ¶ 80)
0x06	Connection Manager Object	Connection Manager Object (Class Code: 0x06) (→ ¶ 81)
0x47	Device Level Ring Object	Device Level Ring Object (Class Code: 0x47) (→ ¶ 82)
0x48	Quality Of Service Object	Quality Of Service Object (Class Code: 0x48) (→ ¶ 83)
0x81	Input Filter Object	Input Filter Object (Class Code: 0x81) (→ ¶ 84)
0x83	Output Object	Output object (class code: 0x83) (→ ¶ 85)
0x84	Counter / SCC Object	Counter / SCC object (class: 0x84) (→ ¶ 86)
0xF5	TCP/IP Object	TCP/IP Object (Class Code: 0xF5) (→ ¶ 88)
0xF6	Ethernet Link Object	Ethernet Link Object (Class Code: 0xF6) (→ ¶ 90)
0x109	LLDP Management Object	LLDP Management Object (Class Code: 0x109) (→ ¶ 92)

11.1.3.2 CIP class and instance services

Supported class and instance services:

Service code	Name	Description
0x01	Get Attribute All	Read all attributes
0x02	Set Attribute All	Write all attributes
0x05	Reset	Reset
0x09	Delete	Delete
0x0E	Get Attribute Single	Read single attribute
0x10	Set Attribute Single	Write single attribute
0x4E	Forward Close	Close connection
0x54	Forward Open	Open new connection

11.1.3.3 Identity Object (Class Code: 0x01)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	2.001
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances of the object	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	9

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get	Vendor ID	UINT	Manufacturer ID	322
2	Get	Device Type	UINT	Device type	12
3	Get	Product Code	UINT	Product code of the device	4323
4	Get	Revision	STRUCT	Revision of the device	2.001
		• Major Revision	USINT	Major revision (1...127)	2
		• Minor Revision	USINT	Minor revision (3 digits)	001
5	Get	Status	WORD	Overall status of the device	
6	Get	Serial Number	UDINT	Serial number of the device	--
7	Get	Product Name	SHORT STRING	Product name of the device	ETH Module PFL EIP 8DO8DI IP-69K
8	Get	State	USINT	State of the device (State machine) • 0: Nonexistent • 1: Device Self Testing • 2: Standby • 3: Operational • 4: Major Recoverable Fault • 5: Major Unrecoverable Fault • 6-254: Reserved • 255: Default for "Get_Attributes_All" service	
19	Get	Protection Mode	UINT	Current protection mode of the device	0

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	Yes	Yes	Read all attributes
0x05	Reset	Yes	Yes	Reset
0x4B	Flash LEDs	No	Yes	Flash device LEDs (identification)
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	Yes	Yes	Write single attribute

If an Identity Object receives a reset request, it carries out the following actions:

- It checks if it supports the requested reset type.
- It responds to the request.
- It tries to execute the requested reset type.

Supported reset types:

- 0: reboot the device (mandatory for all EtherNet/IP devices).
- 1: restore factory settings and reboot the device.

11.1.3.4 Message Router Object (Class Code: 0x02)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	0

Instance attributes

The object class has no instance attributes.

Services

Code	Service	Class	Instance	Description
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.5 Assembly Object (Class Code: 0x04)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	2
2	Get	Max. Instance	UINT	Max. number of instances of the object	0x00C7
3	Get	Number of instances	UINT	Number of instances	6
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of the class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	4

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get	Number of Members	UINT	Number of members in list	--
2	Get	Member	UINT	List of members	--
3	Get / Set	Data	UINT	Current process data image	--
4	Get	Size	UINT	Process data length (number of bytes)	--

The following object instances are available:

- [Configuration assembly \(instance 188\) \(→ □ 60\)](#)
- [Configuration assembly \(instance 189\) \(→ □ 64\)](#)
- [Input assembly \(instance 110\) \(→ □ 66\)](#)
- [Input assembly \(instance 111\) \(→ □ 68\)](#)
- [Input assembly \(instance 112\) \(→ □ 71\)](#)
- [Output assembly \(instance 160\) \(→ □ 74\)](#)

Services

Code	Service	Class	Instance	Description
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute
0x18	Get Member	No	Yes	Read member of an instance attribute

11.1.3.6 Connection Manager Object (Class Code: 0x06)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances	3
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	0

Instance attributes

The object class has no instance attributes.

Services

Code	Service	Class	Instance	Description
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute
0x4E	Forward Close	No	Yes	Close connection
0x54	Forward Open	No	Yes	Open new connection

11.1.3.7 Device Level Ring Object (Class Code: 0x47)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	3
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances of the object	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of the class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	12

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get	Network topology	USINT	Current network topology • 0: linear	0
2	Get	Network status	USINT	Current network status • 0: OK	0
10	Get	Active Supervisor	STRUCT	Identification of the supervisor	0
			• UDINT	IP address	
			• ARRAY(6) of USINT	MAC address of the active supervisor	
12	Get	Capability Flags	DWORD	DLR capability of the device • 0x82: Beacon based Ring Node, Flush Table Frame support	0x82

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute

11.1.3.8 Quality Of Service Object (Class Code: 0x48)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances of the object	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	8

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
2	Get / Set	DSCP PTP Event	USINT	DSCP value for PTP event frames	59
3	Get / Set	DSCP PTP General	USINT	DSCP value for PTP general frames	47
4	Get / Set	DSCP PTP Urgent	USINT	DSCP value for implicit messages with "urgent" priority	55
5	Get / Set	DSCP Scheduled	USINT	DSCP value for implicit messages with "scheduled" priority	47
6	Get / Set	DSCP High	USINT	DSCP value for implicit messages with "high" priority	43
7	Get / Set	DSCP Low	USINT	DSCP value for implicit messages with "low" priority	31
8	Get / Set	DSCP Explicit	USINT	DSCP value for explicit messages with "explicit" priority	27

Services

Code	Service	Class	Instance	Description
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.9 Input Filter Object (Class Code: 0x81)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	8
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	4

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get / Set	Input Inverter	USINT	Signal inversion • 0: no signal inversion • 1: signal inversion	0
2	Get / Set	Hold Level	USINT	Signal level to be maintained • 0: LOW • 1: HIGH	1
3	Get / Set	Debounce Time	UINT	Debounce time • 0: 0 ms ... • 500: 50 ms	0
4	Get / Set	Hold Time	UINT	Hold time • 0: 0 ms ... • 60000: 6000 ms	0

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.10 Output object (class code: 0x83)**Class attributes**

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	8
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	4

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get / Set	Output State COM Lost	USINT	Fallback value if connection is lost • 0: LOW • 1: HGH	0
2	Get / Set	Output Value	USINT	Output value of the channel • 0: LOW • 1: HGH	0
3	Get / Set	Output Select	USINT	Control instance for output • 0: PLC • 1: Counter 1 SSC Main • 2: Counter 1 SSC Batch • 3: Counter 2 SSC Main • 4: Counter 2 SSC Batch • 5: Counter 3 SSC Main • 6: Counter 3 SSC Batch • 7: Counter 4 SSC Main • 8: Counter 4 SSC Batch	0
4	Get / Set	Current Limit	UINT	Max. output current at the port • 0: 0 mA ... • 3600: 3600 mA	2000

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.11 Counter / SCC object (class: 0x84)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	4
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	16

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get / Set	Main Switchpoint Mode	USINT	Main counter - switching mode of switching channel 0x00: Deactivated 0x01: Single point mode 0x02: Latch mode 0x03: Two-point mode 0x04: Window mode	0x00
2	Get / Set	Main Switchpoint Logic	USINT	Main counter - switching logic 0x00: high active 0x01: low active	0x00
3	Get / Set	Main Single Point Edge	USINT	Main counter - reaction of the switching channel to rising or falling counter values 0x00: Rising Counter Value 0x01: Falling Counter Value	0x00
4	Get / Set	Main SP1	UDINT	Main counter - switch point 1 0x0000 0000: 0 ... 0xFFFF FFFF: 4294967295	0xFFFF FF FF
5	Get / Set	Main SP2	UDINT	Main counter - switch point 2 0x0000 0000: 0 ... 0xFFFF FFFE: 4294967294	0xFFFF FF FE
6	Get / Set	Main Switch Delay	UINT	Main counter - switching delay (value in ms) 0x0000. 0 ms ... 0xFFFF: 65535 ms	0x0000
7	Get / Set	Main Reset Delay	UINT	Main counter - reset delay (value in ms) 0x0000. 0 ms ... 0xFFFF: 65535 ms	0x0000
8	Get / Set	Main Hysteresis	UDINT	Main counter - hysteresis 0x0000 0000: 0 ... 0xFFFF FFFF: 4294967295	0x0000 000 0

Attr. ID	Access	Name	Data type	Description	Default
9	Get / Set	Batch Switchpoint Mode	USINT	Batch counter - switching mode of switching channel • 0x00: Deactivated • 0x01: Single point mode • 0x02: Latch mode • 0x03: Two-point mode • 0x04: Window mode	0x00
10	Get / Set	Batch Switchpoint Logic	USINT	Batch counter - switching logic • 0x00: high active • 0x01: low active	0x00
11	Get / Set	Batch Single Point Edge	USINT	Batch counter - reaction of the switching channel to rising or falling counter values • 0x00: Rising Counter Value • 0x01: Falling Counter Value	0x00
12	Get / Set	Batch SP1	UINT	Batch counter - switch point 1 • 0x0000: 0 ... • 0xFFFF: 65535	0xFFFF
13	Get / Set	Batch SP2	UINT	Batch counter - switch point 2 • 0x0000: 0 ... • 0xFFFF: 65534	0xFFFF
14	Get / Set	Batch Switch Delay	UINT	Batch counter - switching delay • 0x0000: 0 ... • 0xFFFF: 65535	0x0000
15	Get / Set	Batch Reset Delay	UINT	Batch counter - reset delay • 0x0000: 0 ... • 0xFFFF: 65535	0x0000
16	Get / Set	Batch Hysteresis	UINT	Batch counter - hysteresis • 0x0000: 0 ... • 0xFFFF: 65535	0x0000

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.12 TCP/IP Object (Class Code: 0xF5)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	4
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances of the object	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attribute	UINT	Max. ID number of the instance attribute	14

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get	Status	UINT	Status of the TCP/IP interface 0: interface not configured 1: interface configured with DHCP, BOOTP or non-volatile memory	
2	Get	Configuration Capability	DWORD	Configuration options for interface - Bit 0: BOOTP Client - Bit 2: DHCP Client - Bit 4: configuration adjustable - Bit 7: ACD-capable	0x95 (BOOTP, DHCP, TCP/IP configurable, ACD capable)
3	Get / Set	Configuration Control	DWORD	Configuration control - Bit 0..3: startup configuration 0: statically assigned IP address 1: configuration via BOOTP 2: configuration via DHCP	0
4	Get	Physical Link Object Path	STRUCT of	Logical path to the physical communication interface (Ethernet link object)	
		• Path Size	UINT	Length (number of words, little endian format)	0x02 00
		• Path	Padded EPATH	Class ID: 0xF6 (Ethernet Link Object) Instance ID: 0x1	0x20 F6 2 4 01
5	Get / Set	Interface configuration	STRUCT of	TCP/IP interface configuration	
		• IP Address	UDINT	IP address	192.168.1.250
		• Network Mask	UDINT	Network mask	255.255.255.0
		• Gateway Address	UDINT	Gateway address	0.0.0.0
		• Name Server	UDINT	Primary name server	0.0.0.0
		• Name Server 2	UDINT	Secondary name server	0.0.0.0
		• Domain Name	STRING	Default domain name	0
6	Get / Set	Host Name	STRING	Host Name 0: not configured	0
8	Get	TTL Value	UINT	TTL value	1
9	Get / Set	Mcast Config	UINT	Mcast configuration	0
10	Get / Set	SelectAcd	BOOL	ACD activation / deactivation 0: deactivated 1: activated	1
11	Get / Set	Last conflict detected	STRUCT of	Last conflict detected	0

Attr. ID	Access	Name	Data type	Description	Default
11	Get / Set	• AcdActivity	USINT	Condition of ACD activity at last conflict detected • 0: Noconflict detected • 1: Probelpv4Address • 2: Ongoing Detection • 3: SemiActiveprobe	
		• Remote MAC	ARRAY(6) of USINT	MAC address of the remote node of the ARP PDU in which the conflict was detected	
		• ArpPdu	ARRAY(28) of USINT	Copy of the data of the ARP PDU in which the conflict was detected	
13	Get / Set	Encapsulation Inactivity Timeout	UINT	Inactivity before the TCP connection is deactivated (in seconds)	120
14	Get	IANA Port Admin	UINT	IANA port administrator configuration • 0x0: tcp: 44818 • 0x1: udp: 44818 • 0x2: udp: 2222	0

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.13 Ethernet Link Object (Class Code: 0xF6)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	4
2	Get	Max. Instance	UINT	Max. number of instances of the object	2
3	Get	Number of instances	UINT	Number of instances	2
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attribute	UINT	Max. ID number of the instance attribute	768

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get	Interface Speed	UDINT	Current transmission rate 10: 10 Mbit/s 100: 100 Mbit/s	100
2	Get	Interface Status Flag	DWORD	Interface status flags - Bit 0: link status - Bit 1: half/full duplex - Bit 2...4: negotiation status - Bit 5: manual change requires reset - Bit 6: local hardware error - Bit 7...31: reserved	0x20
3	Get	Physical Address	ARRAY(6) of USINT	MAC address	
4	Get	Interface Counters	STRUCT(11) of UDINT	Interface-specific counter	
5	Get	Media Counters	STRUCT(12) of UDINT	Medium-specific counter	
6	Get / Set	Interface Control	STRUCT of	Interface control	
		• Interface Settings	DWORD	Settings - Bit 0: 0: auto-negotiation on 1: auto-negotiation off - Bit 1: 0: half duplex 1: full duplex	0
		• Interface Speed	UINT	Transmission rate 10: 10 Mbit/s 100: 100 Mbit/s	
7	Get	Interface type	USINT	0: unknown 1: internal interface 2: twisted pair 3: optical fibre	2
8	Get	Interface State	USINT	Current status of the interface 0: unknown 1: active; ready for transmission and reception 2: not active 3: test mode	0

Attr. ID	Access	Name	Data type	Description	Default
9	Get / Set	Admin State	USINT	Control of the access to the interface • 1: activate • 2: deactivate	1
10	Get	Interface Label	SHORT_STRING	Interface identifier	• XF1 (instance 1) • XF2 (instance 2)
11	Get	Interface Capability	STRUCT of	Interface capability	
		• Interface Speed	DWORD	Transmission rate • 10: 10 Mbit/s • 100: 100 Mbit/s	
		• Interface Duplex Mode	DWORD	Duplex mode • HD: half duplex • FD: full duplex	
768	Get / Set	MDIX	USINT	MDIX configuration • 1: MDIX_AUTO • 2: MDIX_MDI • 3: MDIX_MDIX	1

Services

Code	Service	Class	Instance	Description
0x01	Get Attribute All	No	Yes	Read all attributes
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute

11.1.3.14 LLDP Management Object (Class Code: 0x109)

Class attributes

Attr. ID	Access	Name	Data type	Description	Value
1	Get	Revision	UINT	Revision of the object	1
2	Get	Max. Instance	UINT	Max. number of instances of the object	1
3	Get	Number of instances	UINT	Number of instances of the object	1
6	Get	Max. ID Number Class Attributes	UINT	Max. ID number of a class attribute	7
7	Get	Max. ID Number Instance Attributes	UINT	Max. ID number of the instance attribute	5

Instance attributes

Attr. ID	Access	Name	Data type	Description	Default
1	Get / Set	LLDP Enable	STRUCT	Enable / disable LLDP globally or for individual ports - Length of the LLDP Enable Array (UINT): 3: 1 + 2 (= value of class attribute 2 of the Ethernet Link Object) - LLDP Enable Array (BYTE): - Bit 0: 1 (= globally enabled, LLDP Tx + Rx enabled) - Bit 1: 1 (= LLDP Tx enabled - Instance 1 Ethernet Link Object) - Bit 2: 1 (= LLDP Rx enabled - Instance 2 Ethernet Link Object)	0x030007
2	Get / Set	msgTxInterval	UINT	Interval for transmission of LLDP frames (in seconds)	30
3	Get / Set	msgTxHold	USINT	Interval time multiplier, factor for determining the hold time for transmission to adjacent devices e.g. 4: 4x interval time	4
4	Get	LLDP Datastore	UINT	Supported methods for querying the LLDP database 0x02: SNMP	0x02
5	Get / Set	Last Change	DWORD	Time since last change in local LLDP database (in seconds)	0

Services

Code	Service	Class	Instance	Description
0x0E	Get Attribute Single	Yes	Yes	Read single attribute
0x10	Set Attribute Single	No	Yes	Write single attribute