



Operating instructions
Remote I/O module 8DO 8DI
ModbusTCP
IP65 / IP66 / IP67 / IP69K
AL4343

GB

Contents

1	Preliminary note	5
1.1	Legal and copyright information	5
1.2	Symbols used	5
1.3	Warnings	5
1.4	Safety symbol on the device	5
1.5	Change history	6
2	Safety instructions	7
2.1	Cyber security	7
3	Intended use	8
4	Function	9
4.1	Visual indication	9
4.2	Parameter setting	9
4.3	Inputs	9
4.4	Outputs	9
4.5	Digital input filters	9
4.5.1	Debouncing	10
4.5.2	Inverting	10
4.5.3	Stretching	10
4.5.4	Filter combination	11
4.6	Counter	11
4.6.1	Counter mode CTU	12
4.6.2	Counter mode CTD	12
4.6.3	Counter mode CTUD	13
4.6.4	Counter mode CTDIR	13
4.7	Switching signal channels	14
4.7.1	Deactivated	14
4.7.2	Latch mode	14
4.7.3	Single point mode	15
4.7.4	Two point mode	15
4.7.5	Window mode	16
4.8	Modbus TCP	17
5	Installation	18
5.1	Overview	18
5.2	Install device	18
6	Electrical connection	19
6.1	Overview	19
6.2	General wiring information	19
6.2.1	Connection technology	19
6.3	Ethernet	20
6.4	Process connections (actuators)	20
6.5	Process connections (sensors)	20
6.6	Voltage supply	21
6.6.1	Derating behaviour	21
6.7	Voltage output	22
7	Operating and display elements	23
7.1	LEDs	23
7.1.1	Status	23
7.1.2	Ethernet	24
7.1.3	Process connections	24
7.1.4	Voltage supply	24
8	Set-up	25
9	Settings	26
9.1	Parameter setting software	26
9.1.1	Supported parameter setting software	26
9.1.2	Establishing a connection to device	26
9.1.3	Fieldbus interface	26

9.1.3.1	Configuring the ModbusTCP interface	26
9.1.3.2	Setting ModbusTCP-specific parameters	27
9.1.3.3	Reading the connection status	28
9.1.4	Process connections	28
9.1.4.1	Configuring the input filters	28
9.1.4.2	Setting up the digital input and output channels	29
9.1.4.3	Configuring the counter modules	29
9.1.4.4	Configuring the switching signal channels	30
9.1.4.5	Configuring outputs	31
9.1.5	Process data	32
9.1.5.1	Reading digital input data	33
9.1.5.2	Writing the digital outputs	33
9.1.5.3	Reading counter values	33
9.1.5.4	Controlling counter modules	34
9.1.5.5	Reading the switching signals	34
9.1.5.6	Controlling the switching signal channels	35
9.1.5.7	Reading status and diagnostic information	35
9.1.6	Device information	36
9.1.6.1	Reading identification information	36
9.1.7	Device ID	36
9.1.7.1	Setting the application tag	36
9.1.8	Device control	37
9.1.8.1	Resetting the device	37
9.1.8.2	Restarting the device	37
9.1.8.3	Reading the firmware version	37
9.2	IoT-Core Visualizer	38
9.2.1	Starting the ifm IoT Core Visualizer	38
9.2.2	Searching for elements of the IoT Core	39
9.2.3	Configuring the device	40
9.2.3.1	Configuring a ModbusTCP interface	41
9.2.3.2	Configuring input filters	41
9.2.3.3	Configuring the counter modules	42
9.2.3.4	Configuring the switching signal channels	43
9.2.3.5	Configuring the digital outputs	45
9.2.3.6	Reading device information	45
9.2.3.7	Reading the firmware version	46
9.2.3.8	Setting the application tag	46
9.2.4	Accessing the process data	47
9.2.4.1	Reading digital input data	48
9.2.4.2	Reading counter values	48
9.2.4.3	Controlling counter modules	48
9.2.4.4	Writing the digital outputs	49
9.2.4.5	Reading the switching signal signals	49
9.2.4.6	Controlling the switching signal channels	49
9.2.4.7	Reading status and diagnostic information	50
9.2.5	Update firmware	51
9.3	ModbusTCP	52
9.3.1	Integrating a device into a Modbus TCP project	52
9.3.1.1	Example: Integrating a device into a CODESYS project	52
9.3.2	Device-specific notes	53
9.3.2.1	Rules for accessing the Modbus register	53
9.3.2.2	Supported function codes	53
9.3.2.3	Exception codes	53
9.3.3	Configuring the device	54
9.3.4	Configuring digital inputs	54
9.3.5	Configuring the counter modules and switching channels	54
9.3.6	Configuring the digital outputs	55
9.3.7	Controlling the device	55
9.3.8	Controlling the counter modules and switching channels	55
9.3.9	Reading process data	56
9.3.10	Reading diagnostic data	56
9.3.11	Reading identification information	56

10	Maintenance, repair and disposal	58
10.1	Cleaning	58
10.2	Update firmware	58
11	Appendix	59
11.1	ModbusTCP	59
11.1.1	Register	59
11.1.1.1	Input data (0 - 18)	59
11.1.1.2	Digital Input Configuration (100 - 131)	61
11.1.1.3	Counter Configuration (200 - 235)	63
11.1.1.4	Counter Control (300 - 327)	65
11.1.1.5	Block Configuration (400 - 413)	67
11.1.1.6	Byte Swap (500)	69
11.1.1.7	Connection Timeout (510)	70
11.1.1.8	DI DO Channel Mapping (550)	71
11.1.1.9	System Command (600)	72
11.1.1.10	SSC State (700)	73
11.1.1.11	SSC Configuration (710 - 785)	74
11.1.1.12	SSC Reset Latch (900 - 907)	77
11.1.1.13	Digital Output (1000)	79
11.1.1.14	Digital Output Qualifier (1010)	80
11.1.1.15	Digital Output Configuration (1100 - 1123)	81
11.1.1.16	Diagnostic Data (2000 - 2007)	83

1 Preliminary note

You will find instructions, technical data, approvals and further information using the QR code on the unit / packaging or at documentation.ifm.com.

1.1 Legal and copyright information

© All rights reserved by ifm electronic gmbh. No part of these instructions may be reproduced and used without the consent of ifm electronic gmbh.

All product names, pictures, companies or other brands used are the property of the respective rights owners.

1.2 Symbols used

- ✓ Requirement
- Instructions
- ▷ Reaction, result
- [...] Designation of keys, buttons or indications
- Cross-reference
-  Important note
Non-compliance may result in malfunction or interference.
-  Information
Supplementary note

1.3 Warnings

Warnings indicate the possibility of personal injury and damage to property. This enables safe product handling. Warnings are graded as follows:

	WARNING Warning of serious personal injury ▷ If the warning is not observed, fatal and serious injuries are possible.
	CAUTION Warning of minor to moderate personal injury ▷ If the warning is not observed, minor to moderate injuries are possible.
	ATTENTION Warning of damage to property ▷ If the warning is not observed, damage to property is possible.

1.4 Safety symbol on the device

-  Safety symbol on the device:
 - Adhere to the operating instructions for the safe operation of the device.

1.5 Change history

Issue	Subject	Date
00	New creation of the document	11 / 2024

2 Safety instructions

- The unit described is a subcomponent for integration into a system.
 - The system architect is responsible for the safety of the system.
 - The system architect undertakes to perform a risk assessment and to create documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the architect of the system.
- Read this document before setting up the product and keep it during the entire service life.
- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (→ Intended use).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the product must be carried out by qualified personnel authorised by the machine operator.
- Protect units and cables against damage.
- Replace damaged units, otherwise the technical data and safety will be impaired.
- Observe applicable documents.

2.1 Cyber security

ATTENTION

Operating the machine in an unprotected network environment

- ▷ Unauthorised read or write access to data is possible.
 - ▷ Unauthorised manipulation of the device function is possible.
 - ▶ Check and restrict access options to the device.
-

3 Intended use

The device may only be used for the following purposes:

- Gateway between digital sensors / actuators and a higher-level control system

The device is designed for use without a control cabinet in the food industry.

4 Function

4.1 Visual indication

The device displays the following indications:

- Status and error indication of the ModbusTCP gateway and the system
- Status and activity indication of the Ethernet connections
- Status of the voltage supplies US and UA
- Status and error indication of the sensor and actuator ports

4.2 Parameter setting

The device can be configured using the following options:

- Parameter setting software
 - ifm moneo OS + ifm moneo|configure
 - ifm moneo|configure free
- ifm IoT Core
 - IoT-Core Visualizer
- ModbusTCP
 - Projection software

4.3 Inputs

Ports X5...X8 each have 2 digital inputs (type 2 according to EN 61131-3).

The digital inputs are connected to pins 2 and 4 of the ports.

4.4 Outputs

Ports X1...X4 each have 2 digital outputs.

The digital outputs are connected to pins 2 and 4 of the ports.


A digital output can be switched either by a switching signal channel or by a fieldbus application.

4.5 Digital input filters

The device pre-processes the digital input signals at ports X5...X8. The filter result is forwarded as a process value and as an input signal for a counter module.

The following filters can be applied to the digital input signals in the sequence specified.

1. Debounce
2. Hold
3. Invert

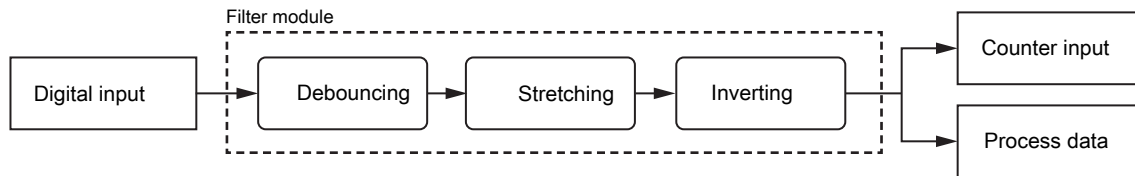


Each filter can be configured separately.

- Maximum input frequency: 4500 Hz
- Minimum detectable positive pulse width: 0.115 ms (+ positive edge)
- Minimum detectable negative pulse width: 0.115 ms (+ negative edge)

4.5.1 Debouncing

The filter suppresses noise signals. The filter provides the input signals at the filter output with a delay (debounce time). All signals shorter than the set debounce time are ignored by the filter.

Time diagram debounce filter:

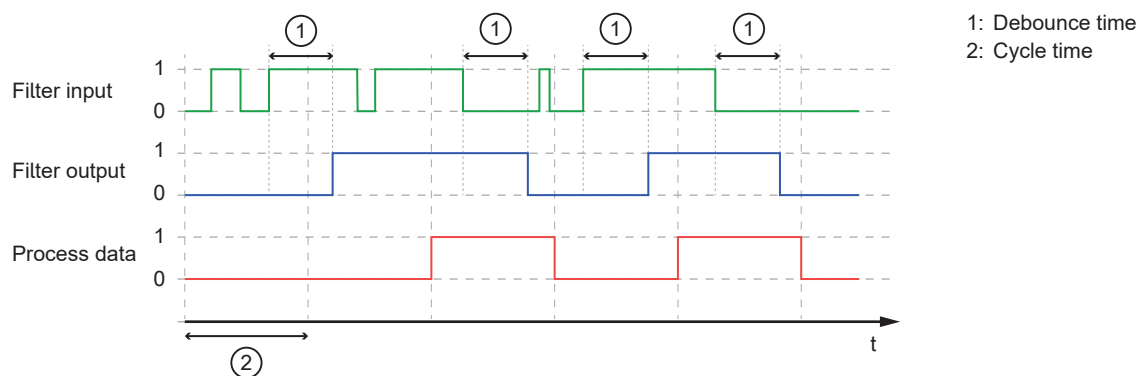

4.5.2 Inverting


The filter inverts signals.

4.5.3 Stretching


The filter stretches short input pulses. Level changes that occur during a stretching period are ignored. The filter is configured via the following parameters:

- Hold time: pulse duration to which short pulses are to be stretched. Pulses that are present for a longer time than the hold time are not stretched.
- Hold level: signal level to be stretched (HIGH or LOW)

Time diagram stretch filter (status HIGH):

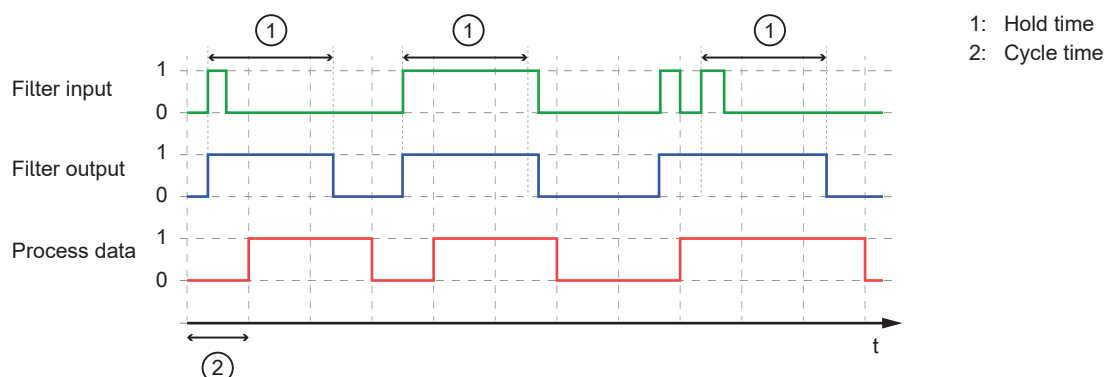

Time diagram stretch filter (status LOW):

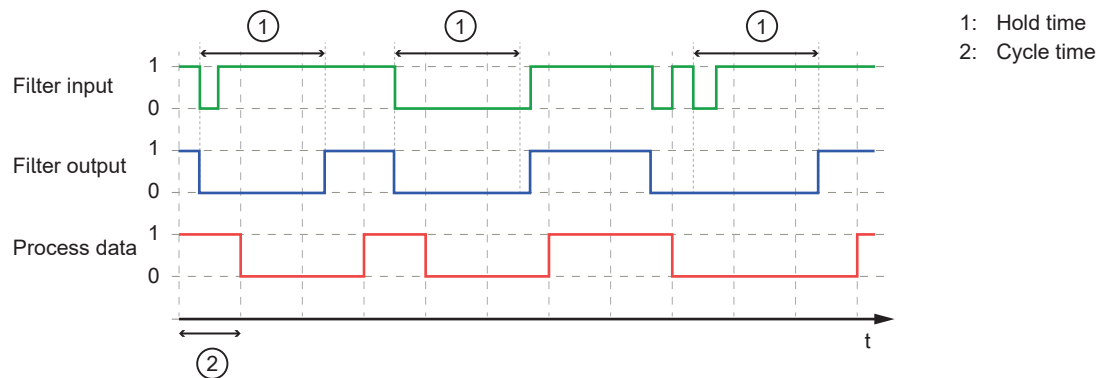


4.5.4 Filter combination

The filters can be combined.

Example: All 3 filters are activated

Time diagram:

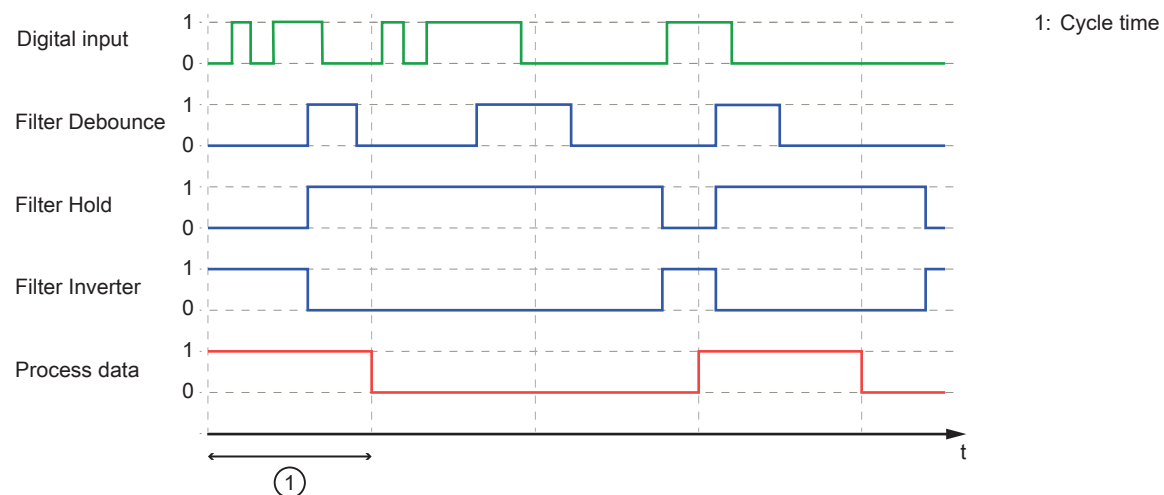


4.6 Counter

The device features one counter module per port.

A counter module consists of 2 separate counters:

- Main counter: The main counter counts the rising edges of the filtered digital input signals. The main counter has a value range that is defined by a threshold value. If the value range of the main counter is exceeded or not reached, an overflow or underflow signal is sent to the batch counter.
- Batch counter: The batch counter counts the overflow or underflow signals of the main counter.

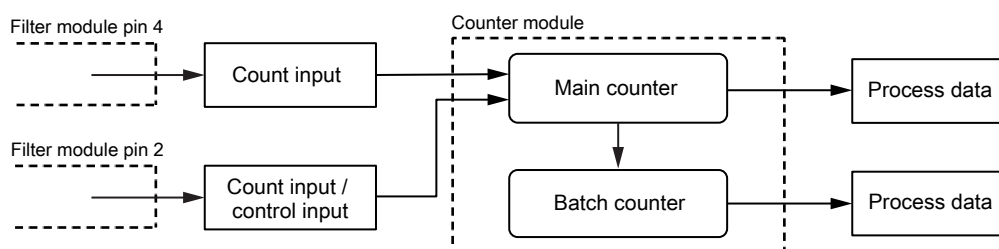

A counter module can be operated in different operating modes. The following operating modes are available.


Maximum count frequency: 4500 Hz

4.6.1 Counter mode CTU

In CTU (Count Up) mode, the counter module operates as an up counter with overflow detection and overflow counter.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is incremented ($m = m+1$).
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).

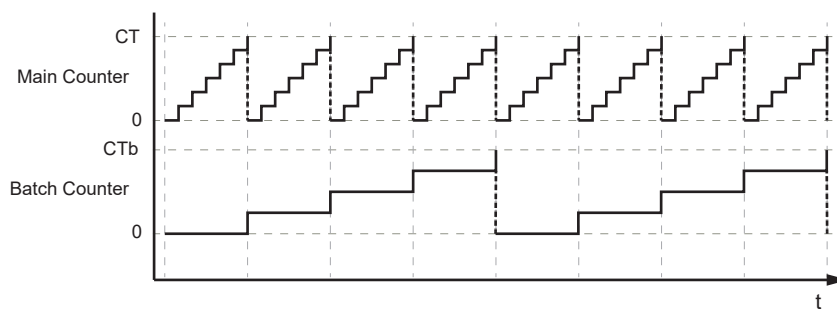


4.6.2 Counter mode CTD

In CTD (Count Down) mode, the counter module operates as a down counter with underflow detection and underflow counting.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- The first time a positive edge is detected at pin 4, the value of the main counter is set to the threshold value $CT-1$ ($m = CT-1$). At the same time, the value of the batch counter is set to the threshold value $CTb-1$ ($b = CTb-1$).
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is decremented ($m = m-1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

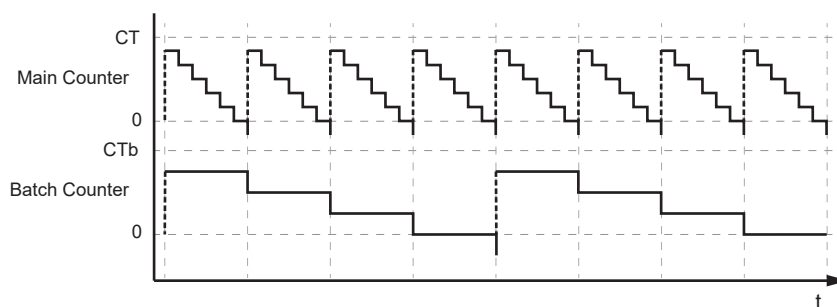


4.6.3 Counter mode CTUD

In CTUD (Count Up Down) mode, the counter operates as a simultaneous up and down counter with overflow and underflow detection.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- If the counter module detects a positive edge at pin 4 of the port, the value of the main counter is incremented ($m = m+1$).
- If the counter module detects a positive edge at pin 2 of the port, the value of the main counter is decremented ($m = m-1$).
- If the counter module simultaneously detects a positive edge at pin 4 and pin 2 of the port, the counter value of the main counter does not change.
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

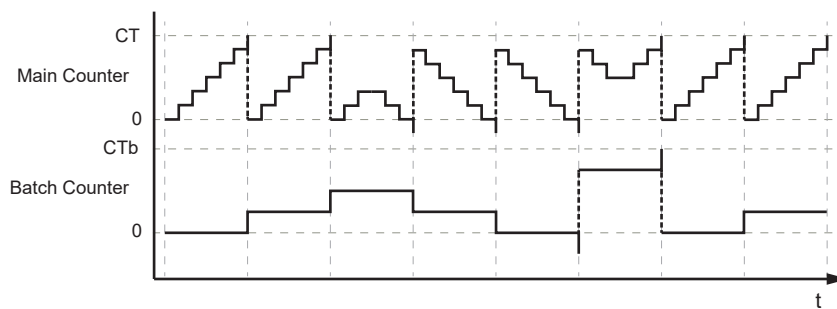


4.6.4 Counter mode CTDIR

In CTDIR (Count Direction) mode, the counter module operates either as an up counter with overflow detection or as a down counter with underflow detection. The counting direction can be set.

Behaviour:

- The initial value of the main counter is $m = 0$. The initial value of the batch counter is $b = 0$. The main counter has a threshold value CT . The batch counter has a threshold value CTb .
- The user can determine the counting direction. The counter module initially operates as an up counter with overflow detection.
- If the counter module detects a positive edge at pin 4 of the port and the counting direction of the port is set to "up", the value of the main counter is incremented ($m = m+1$).
- If the main counter reaches the threshold value CT ($m = CT$), the counter value is reset ($m = 0$). Due to the overflow detection, the value of the batch counter is incremented ($b = b+1$).
- If the batch counter reaches the threshold value CTb ($b = CTb$), the counter value is reset ($b = 0$).
- If the counter module detects a positive edge at pin 4 of the port and the counting direction at pin 2 of the port is set to "down", the value of the main counter is decremented ($m = m-1$).
- If the main counter falls below 0, the counter value is reset to the threshold value ($m = CT-1$). Due to the underflow detection, the value of the batch counter is decremented ($b = b-1$).
- If the batch counter falls below 0, the counter value is reset to the threshold value ($b = CTb-1$).

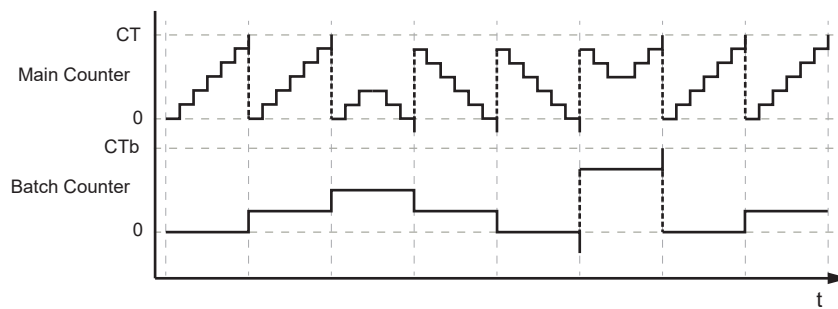

4.7 Switching signal channels

The device has 4 switching signal channels (SSC). The switching signal channels are each assigned to a counter module.

Each switching signal channel provides 2 switching signals. The switching signals can be output at the output channels of ports X1...X4.

The switching signal channels can be operated as normally closed (low active) or normally open (high active).

4.7.1 Deactivated

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the switch point mode Deactivated, the status of the counter module (main counter + batch counter) has no effect on the switching signal output. The switching signal is permanently in the INACTIVE state.

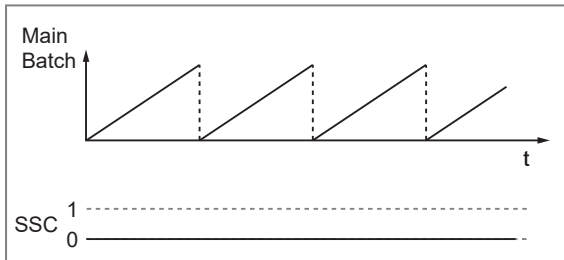


Fig. 1: Deactivated (high active)

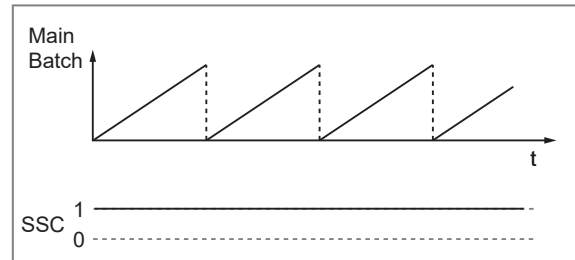


Fig. 2: Deactivated (low active)

4.7.2 Latch mode

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the Latch Mode switch point mode, the overflow or underflow events and the Latch Reset control signal are evaluated to derive the switching signal status.

As soon as the switching signal channel detects an overflow or underflow event, the switching signal is set (ACTIVE). The switching signal remains in this state even if further overflow or underflow events occur.

As soon as the switching signal channel detects a rising edge at the Latch Reset control signal, the switching signal is reset (INACTIVE).

If the switching signal channel simultaneously detects an overflow or underflow event and a rising edge at the Latch Reset control signal, the switching signal is reset (INACTIVE).

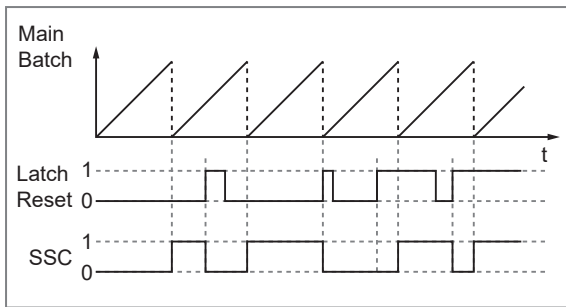


Fig. 3: Latch mode (high-active)

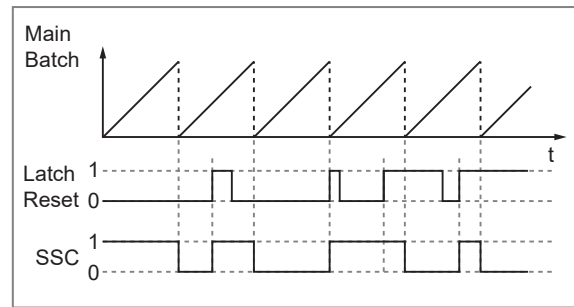


Fig. 4: Latch mode (low-active)

Switch delay is not available.

Reset delay is not available.

The hysteresis function is not available.

4.7.3 Single point mode

Can be combined with counter modules: CTU, CTD, CTUD, CTDIR

In the Single Point Mode switch point mode, the user can define one switch point (SP1). In the basic state, the switching signal is not set (INACTIVE). As soon as the counter value reaches SP1, the switching signal is set (ACTIVE). Subsequently, the switching signal is reset (INACTIVE).

The user can define whether the switching signal channel should evaluate increasing or decreasing counter values.

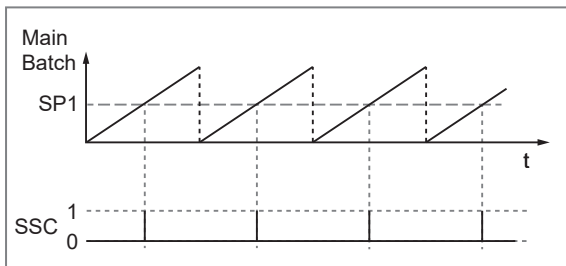


Fig. 5: Single point mode (high-active)

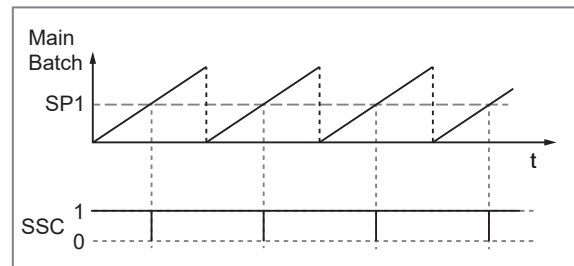


Fig. 6: Single point mode (low-active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signal.

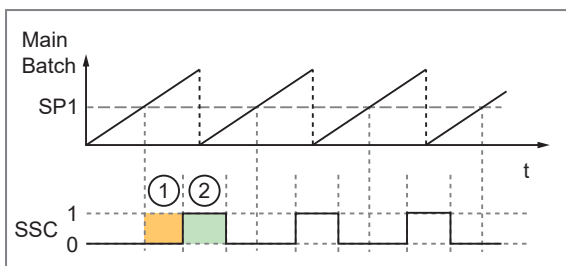


Fig. 7: Single point mode (high-active) with switch delay (1) and reset delay (2)

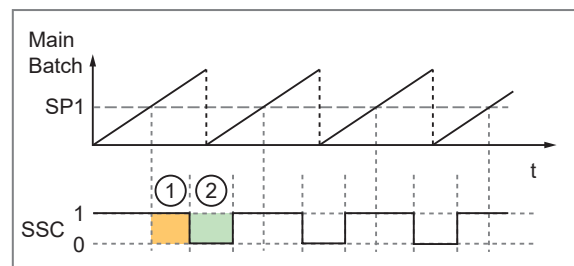


Fig. 8: Single point mode (low-active) with switch delay (1) and reset delay (2)

The hysteresis function is not available.

4.7.4 Two point mode

Can be combined with counter modules: CTUD, CTDIR

In the Two Point Mode switch point mode, the user can define a switch point (SP1) and a reset point (SP2). As soon as the counter value increases and reaches SP1, the switching signal is set (ACTIVE). As soon as the counter value decreases and reaches SP2, the switching signal is reset (INACTIVE).

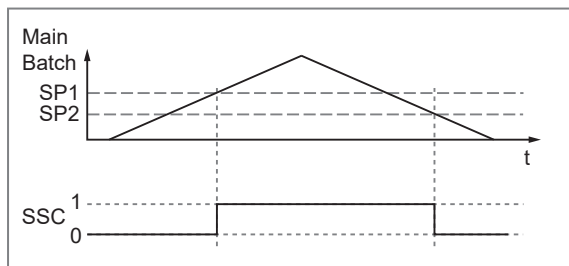


Fig. 9: Two point mode (high-active)

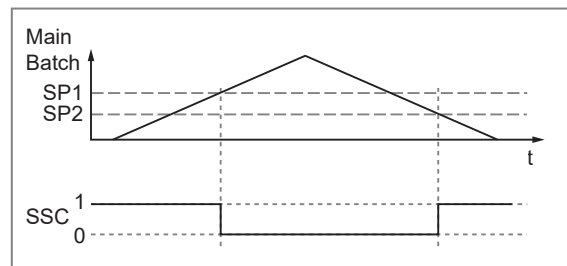


Fig. 10: Two point mode (low-active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signals. For the switching signal to be reset, the counter value must be less than SP2 for at least as long as the set reset delay.

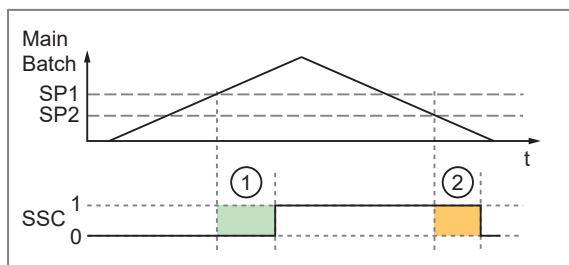


Fig. 11: Two point mode (high-active) with switch delay (1) and reset delay (2)

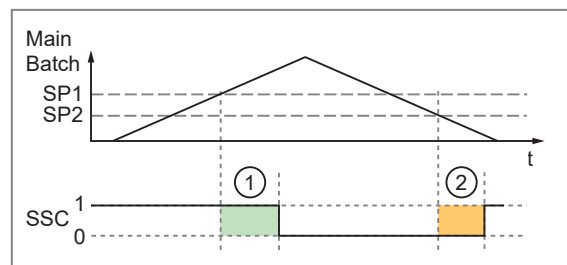


Fig. 12: Two point mode (low-active) with switch delay (1) and reset delay (2)

The hysteresis function is not available.

4.7.5 Window mode

Can be combined with counter modules: CTUD, CTDIR

In the Window Mode switch point mode, the user can define two switch points (SP1, SP2 with SP1 > SP2). The 2 switch points define a range.

If the counter value is within the SP1...SP2 range, the switching signal is set (ACTIVE).

If the counter value is outside the SP1...SP2 range, the switching signal is reset (INACTIVE).

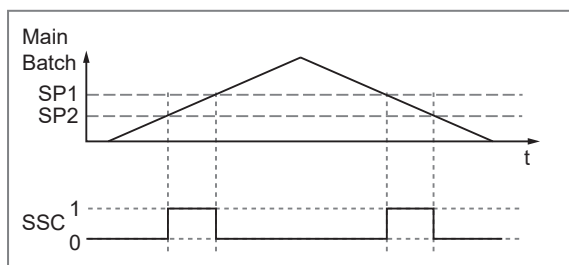


Fig. 13: Window mode (high active)

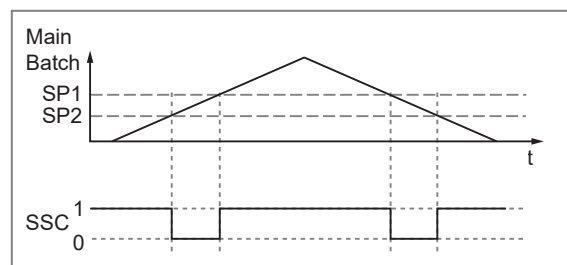


Fig. 14: Window mode (low active)

A switching delay can be used to delay the setting of the switching signal. For the switching signal to be set, the counter value must be greater than SP1 for at least as long as the set switching delay.

A reset delay can be used to delay the reset of the switching signals. For the switching signal to be reset, the counter value must be less than SP2 for at least as long as the set reset delay.

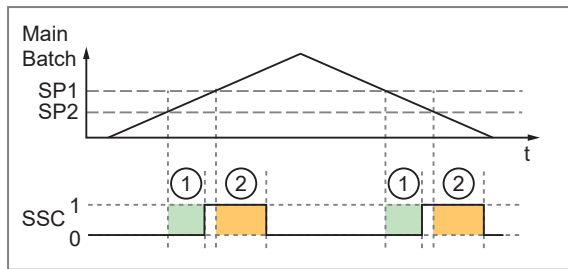


Fig. 15: Window mode (high-active) with switch delay (1) and reset delay (2)

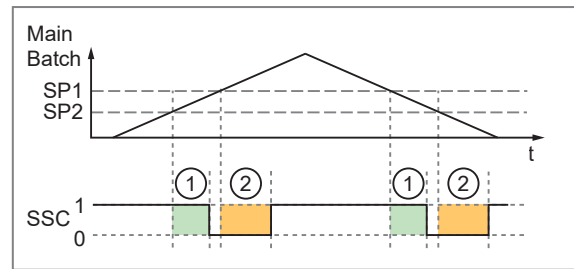


Fig. 16: Window mode (low-active) with switch delay (1) and reset delay (2)

Using the hysteresis function, the switching thresholds of switch points SP1 and SP2 can be equally increased or decreased.

Switching:

- Increasing counter value reaches SP2
- Decreasing counter value reaches SP1

Switching back:

- Increasing counter value reaches $SP1 + HyS$
 - if $SP1 + HyS > HyS_{max}$, then reset at HyS_{max}
- Decreasing counter value reaches $SP2 - HyS$
 - If $SP2 - HyS < 0$, then reset at 0

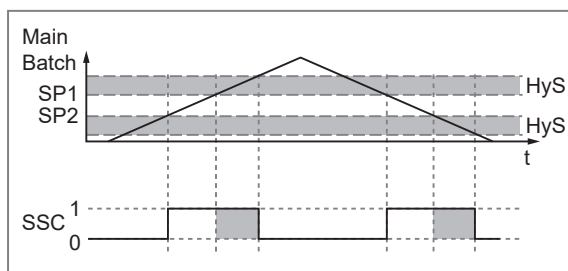


Fig. 17: Window mode (high-active) with hysteresis

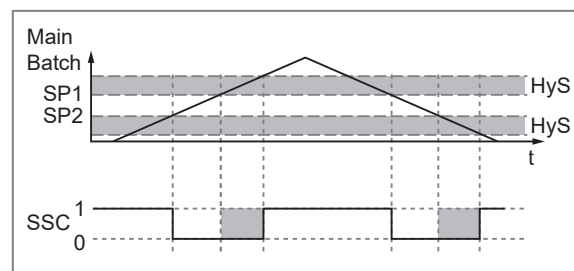


Fig. 18: Window mode (low-active) with hysteresis


4.8 Modbus TCP

The device offers the following Modbus TCP functions:

- Device profile: Modbus TCP Server (message mode)
- 2-port switch for access to Modbus TCP interface (XF1 / XF2)

5 Installation

5.1 Overview

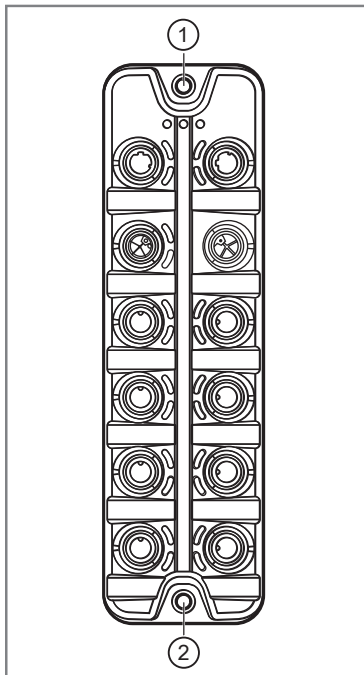

- 1: Upper mounting lug
- 2: Lower mounting lugs lug

5.2 Install device




- ▶ Disconnect the power of the machine before installation.
- ▶ Use a flat mounting surface for installation.
- ▶ Please observe the maximum tightening torque.

Fasten the device onto the mounting surface using 2 M5 mounting screws and washers (tightening torque: 1.8 Nm).

6 Electrical connection

6.1 Overview

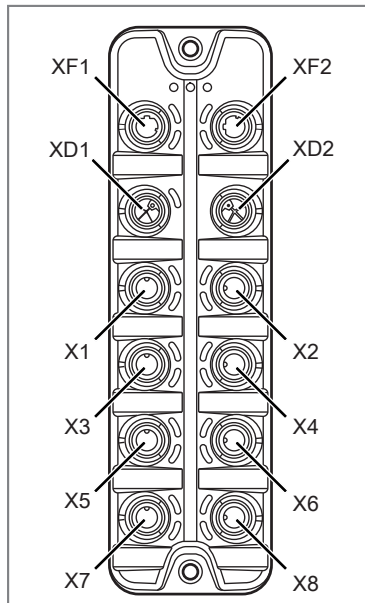

- XF1: Ethernet 1 (ModbusTCP)
- XF2: Ethernet 2 (ModbusTCP)
- XD1: Power IN
- XD2: Power Out
- X1: Process connection 1 (actuator)
- X2: Process connection 2 (actuator)
- X3: Process connection 3 (actuator)
- X4: Process connection 4 (actuator)
- X5: Process connection 5 (sensor)
- X6: Process connection 6 (sensor)
- X7: Process connection 7 (sensor)
- X8: Process connection 8 (sensor)

6.2 General wiring information

The device must be connected by a qualified electrician.

- Observe the national and international regulations for the installation of electrical equipment.

The device is only suitable for operation on PELV voltages.

This device contains components that may be damaged or destroyed by electrostatic discharge (ESD).

- Please observe the required precautions against electrostatic discharge!

The circuits are insulated from each other and from touchable surfaces of the device with basic insulation according to EN 61010-1.

The communication interfaces are insulated from each other and from touchable surfaces of the device with basic insulation according to EN 61010-1.

6.2.1 Connection technology


The threaded connections in the device correspond to the M12 standard. To ensure compliance with the specified protection rating, only cables that comply with this standard may be used. In the case of self-assembled cables, the system manufacturer is responsible for the protection rating.

- Use connectors with gold-plated contacts.
- During installation, place the connectors vertically so that the coupling nut will not damage the thread.
- Observe the coding of the connectors during installation.
- Cover unused connections with protective covers. Tightening torque: 1.3 ± 0.1 Nm

6.3 Ethernet

The device is connected to the ModbusTCP network via Ethernet ports XF1 / XF2 (e. g. ModbusTCP control, additional ModbusTCP device). In addition, the device can be connected to an IT network via the Ethernet ports. The user can access functions of the ifm IoT Core via the IT network (parameter setting software, IoT Core Visualizer).

Wiring:

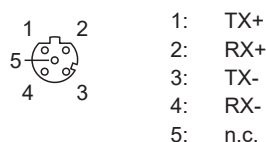

- ▶ Connect the device to the ModbusTCP network via a free Ethernet port.
- ▶ Optional: Connect the device to the IT network via a free Ethernet port.
- ▶ For connection, use an M12 connector (minimum protection rating: IP65 / IP66 / IP67 / IP69K).
- ▶ Tighten the cable plug using 1.3 ± 0.1 Nm.

6.4 Process connections (actuators)

The actuators are connected to the device via ports X1...X4.


Maximum current rating per port: 3.6 A

Maximum current rating per port pair (X01 & X02, X03 & X04): 3.6 A

Maximum overall current rating: 8 A

The ports feature both short-circuit and overload detection.

Wiring:

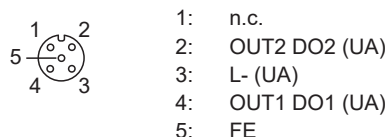

- ▶ Connect the actuators to ports X1...X4.
- ▶ For connection, use M12 connectors (minimum protection rating: IP65 / IP66 / IP67 / IP69K; max. cable length: 30 m).
- ▶ Tighten the cable plug using 1.3 ± 0.1 Nm.

6.5 Process connections (sensors)


The sensors are connected to the device via ports X5...X8.

Maximum current rating per port: 3.6 A

Maximum overall current rating: 3.6 A

The ports feature both short-circuit and overload detection.

Wiring:

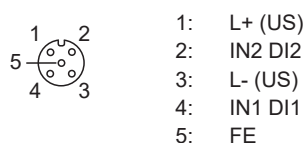

- ▶ Connect the sensors to ports X5...X8.

- For connection, use M12 connectors (minimum protection rating: IP65 / IP66 / IP67 / IP69K; max. cable length: 30 m).
- Tighten the cable plug using 1.3 ± 0.1 Nm.

6.6 Voltage supply

The device is connected to the supply voltages US and UA via the Power IN port.

The US supply voltage supplies the device and the sensors connected to the X5...X8 ports.

The UA supply voltage supplies the actuators connected to the X1...X4 ports.

The XD1 port is equipped with overvoltage protection (US, UA).

The XD1 port is equipped with reverse polarity protection (US, UA).

The XD1 port is equipped with cross polarity protection (US, UA).



CAUTION

Exceeding the maximum input current of 16 A

▷ Risk of fire

- Dimension the I_U and I_A of the US and UA supply voltages accordingly, taking into account the derating behaviour of the device: [Derating behaviour](#) (→ [21](#))

Wiring:




- 1: L+ (US)
- 2: L- (UA)
- 3: L- (US)
- 4: L+ (UA)
- 5: FE

- Disconnect power.
- Connect the device via the XD1 port to the US supply voltage with 24 V DC (20...28 V PELV).
- Connect the device via the XD1 port to the UA supply voltage with 24 V DC (20...28 V PELV).
- For connection, use an L-coded M12 connector (with at least protection rating: IP65 / IP66 / IP67 / IP69K).
- Tighten the cable sockets according to the torque specifications indicated by the cable vendor.
Maximum permissible tightening torque: 0.8 Nm

6.6.1 Derating behaviour


The current I_{US} available at the X5...X8 ports and the currents $I_{US-daisy-chain}$ and $I_{UA-daisy-chain}$ available at port XD2 depend on the ambient temperature of the device.

- Height: 2000 m

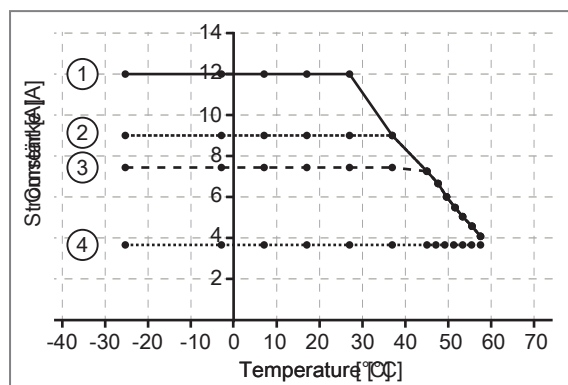


- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

- Height: 3000 m

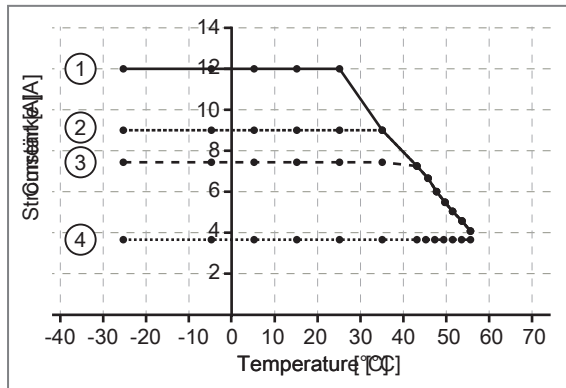

- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

- Height: 4000 m

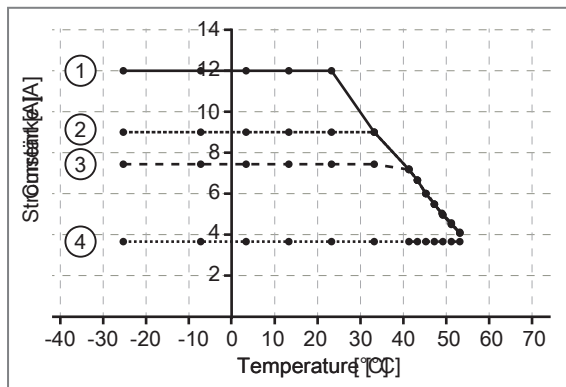

- 1: $I_{US-daisy-chain}$ at port XD2
- 2: $I_{UA-daisy-chain}$ at port XD2
- 3: I_{UA} at port XD1
- 4: I_{US} at port XD1

6.7 Voltage output

An additional device can be supplied via the Power OUT port (daisy chain). The supply voltages US and UA are looped through from port XD1 to port XD2.

Max. current intensity for US: 15.7 A


Max. current intensity for UA: 16 A.

Wiring:

- Optional: Connect an additional device to port XD2.
- For connection, use an L-coded M12 connector (with at least protection rating: IP65 / IP66 / IP67 / IP69K).
- Tighten the cable plug using 1.3 ± 0.1 Nm.
- Observe the derating behaviour of the device!

7 Operating and display elements

7.1 LEDs

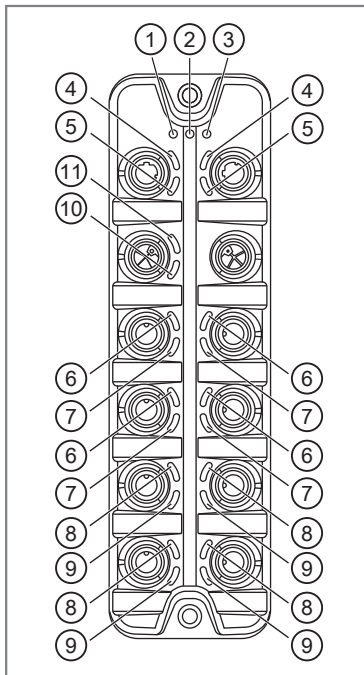

- 1: Status: RDY
- 2: Status: ERR
- 3: Status: RUN
- 4: Modbus TCP: LNK
- 5: Modbus TCP: ACT
- 6: Process connection: DO1
- 7: Process connection: DO2
- 8: Process connection: DI1
- 9: Process connection: DI2
- 10: Voltage supply: UA
- 11: Voltage supply: US

7.1.1 Status

LED	Description	Colour	State	Description
RDY	Gateway status	-	Off	Not active or reboots
		Green	Flashes 3 s (1 Hz)	DCP signalling service initiated via fieldbus
			Flashes (5 Hz)	Error
			Flashes (200 ms on, 800 ms off)	Firmware update running
			On	OK
		Red	On	Error during firmware update (e.g. firmware not compatible)
ERR	Error indication	-	Off	No error
		Red	Flashes (10 Hz)	Boot error
			Flashes (200 ms on, 200 ms off, 200 ms on, 1000 ms off)	Watchdog error (Modbus TCP or process data)
			Flashes (200 ms on, 1000 ms off)	Local error
			Flashes (2.5 Hz)	Invalid configuration
			On	Communication error
RUN	Modbus TCP state (state machine)	-	Off	Not ready
		Green	Flashes (1 Hz)	Ready, but not yet configured
			Flashes (5 Hz)	Waiting for connection
			On	Connecting

7.1.2 Ethernet

LED	Description	Colour	State	Description
LNK	Status of the connection	-	Off	No Ethernet connection
		Green	On	Ethernet connection established
ACT	Status of the data transmission	-	Off	No data transmission
		Yellow	Flashes	Data transmission

7.1.3 Process connections

LED	Description	Colour	State	Description
DO1	Signal level digital output (pin 4)	-	Off	Digital output - pin 4: LOW
		Yellow	On	Digital output - pin 4: HIGH
		red	flashes	Error - Short circuit after 24 V (if DO1 = LOW) - Short circuit after GND / overvoltage (if DO1 = HIGH)
			On	Output is not controlled by application
DO2	Signal level digital input (pin 2)	-	Off	Digital output– pin 2: LOW
		Yellow	On	Digital output– pin 2: HIGH
		Red	Flashes	Error - Short circuit after 24 V (if DO2 = LOW) - Short circuit after GND / overvoltage (if DO2 = HIGH)
			On	Output is not controlled by application
DI1	Signal level digital input (pin 4)	-	Off	Digital input - pin 4: LOW
		Yellow	On	Digital input - pin 4: HIGH
DI2	Signal level digital input (pin 2)	-	Off	Digital input - pin 2: LOW
		Yellow	On	Digital input - pin 2: HIGH

7.1.4 Voltage supply

LED	Description	Colour	State	Description
US	Power supply US status	-	Off	No supply voltage is applied or the applied supply voltage is too low (<4.5 V)
		Green	On	Supply voltage applied
		Red	On	Overvoltage, undervoltage, short circuit at sensor supply
UA	Status power supply UA	-	Off	No supply voltage is applied or the applied supply voltage is too low (<6 V)
		Green	On	Supply voltage applied
		Red	On	Undervoltage / overvoltage / short circuit at actuator supply

8 Set-up

- ▶ Install the unit correctly.
- ▶ Establish a correct electrical connection with the device.
- ▷ Once connected to the supply voltage, the unit will start.
- ▷ The LEDs show status and error conditions.
- ▷ The unit is ready for operation.
- ▷ The device can be configured.

9 Settings

9.1 Parameter setting software

9.1.1 Supported parameter setting software

Supported parameter setting options:

- ifm moneo|IIoT Core On-Premises (art no. QM9112)
- ifm moneo|IIoT Core Cloud (art no. QCM100)
- ifm moneo|configure free



► For a correct installation: observe the installation instruction for ifm moneo.

► Install the desired parameter setting software.

► Activate the licences required for operation.

▷ The parameter setting software can be used for parameter setting of the device.

9.1.2 Establishing a connection to device

Requirements:

- ✓ The parameter setting software is correctly installed on the laptop / PC.
- ✓ The laptop / PC is connected to a free Ethernet port of the device.
- Start the parameter setting software.
- Scan the network for devices.
 - ▷ The parameter setting software recognises the device.
- Optional:
- Establish a connection to the device.
- ▷ The parameter setting software can access the device parameters.

9.1.3 Fieldbus interface

The [fieldbus] menu provides access to the configuration of the fieldbus interface.



The fieldbus interface can only be configured via the fieldbus configuration software.

9.1.3.1 Configuring the ModbusTCP interface

The ModbusTCP interface of the device must be configured for communication with the ModbusTCP network.

Available parameters:

Name	Description	Value range	Access
[dhcp]	Status of the DHCP client of the device	• Static IP: IP parameters are set by the user • DHCP: IP parameters are set by a DHCP server in the network (default) • BOOTP: IP parameters are set via the Bootstrap Protocol	rw ¹

Name	Description	Value range	Access
[ipaddress]	IP address of the ModbusTCP interface	e.g. 192.100.0.10 • 192.168.1.250 (default)	rw ¹
[subnetmask]	Subnet mask of the network segment	e.g. 255.255.255.0 • 255.255.255.0 (default)	rw ¹
[ipdefaultgateway]	IP address of the network gateway	e.g. 192.100.0.1 • 0.0.0.0 (default)	rw ¹
[macaddress]	MAC address of the Ethernet interface	e.g. 00:02:01:0E:10:7F	ro ²
[hostname]	Name of the device in the ModbusTCP network	e.g. al4x4x	ro ²

¹ Read and write

² Read only

To configure the ModbusTCP interface:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device has been established.
- ▶ Select the [fieldbussetup] > [network] menu.
 - ▷ The menu page shows the current settings.
- ▶ Set IP parameters of the interface.
- ▶ Write the changed values to the device.
- ▶ Restart the device.
- ▷ The ModbusTCP interface is configured

9.1.3.2 Setting ModbusTCP-specific parameters



Changes to the [byteswap] parameters will only take effect after the device has been restarted.

Available parameters:

Name	Description	Value range	Access
[connectiontimeout]	Set timeout for interruption of the fieldbus connection (value in milliseconds)	• 20: 20 ms ... • 30000: 30000 ms (default) ... • 60000: 60000 ms	rw ¹
[byteswap]	Order of the bytes in data WORD	• 0: Big-Endian (default) • 65535: Little-Endian	rw ¹

¹ Read and write

To set the ModbusTCP-specific parameters:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The connection to the device is established (online).
- ▶ Select the [fieldbus] > [configuration] menu.
 - ▷ The menu page shows the current settings.
- ▶ Setting ModbusTCP-specific parameters.
- ▶ Write the changed values to the device.
- ▷ ModbusTCP-specific parameters are set.

9.1.3.3 Reading the connection status

Available information:

Name	Description	Value range	Access
[connectionstatus]	Status of the ModbusTCP connection	- Disconnected: Not connected - Connected: Connected	ro ¹
[disconnectioncounter]	Connection interruption counter	0: no interruption ... 65535: 65535 interruptions	ro ¹
[fieldbusfirmware]	Firmware version of the ModbusTCP stack	e.g. 5.4.0.3 (ModbusTCP Server)	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the [fieldbussetup] menu.
- ▷ The menu page displays the status of the ModbusTCP connection.

9.1.4 Process connections

The [io] menu provides access to the parameters of the process connections.

9.1.4.1 Configuring the input filters



- Observe the notes on input filters: [Digital input filters \(→ 9\)](#)

Available parameters:

Name	Description	Value range	Access
[debounce_time]	Debounce time (= value * 0.1 ms)	0: 0 ms (default) ... 500: 50 ms	rw ¹
[hold_time]	hold time (= value * 0.1 ms)	0: 0 ms (default) ... 60000: 6000 ms	rw ¹
[hold_level]	hold level	0: hold LOW 1: hold HIGH (default)	rw ¹
[invert]	inversion	0: do not invert (default) 1: invert	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

- Select menu [io] > [port[n]] > [pin2] (n: 5...8).
 - ▷ The menu page shows the available filter parameters for pin 2 of the port.
- Set the parameters.
- Select menu [io] > [port[n]] > [pin4] (n: 5...8).
 - ▷ The menu page shows the available filter parameters for pin 4 of the port.
- Set the parameters.
- Write the changed values to the device.
- ▷ The digital input filters have been configured.

9.1.4.2 Setting up the digital input and output channels

9.1.4.3 Configuring the counter modules



► Observe the notes on counter modules: [Counter \(→ 11\)](#)



If the operating mode of a counter module is changed, the current counter values will be reset and any active events will be deleted.

Available parameters:

Name	Description	Value range	Access
[mode]	Operating mode of the counter module	- CTU (Up-counter): up counter (default) - CTD (Down-counter): down counter - CTUD (Up-counter / Down-counter): up and down counter - CTDIR (Direction Counter): up or down counter	rw ¹
[pin2_function]	Pin 2 function of the port (Observe note!)	- N/C: no function (default) - Counter Edge Input 2: counting pulse (rising edge) - Count Direction: counting direction - Reset (Main & Batch Counter): reset main counter and batch counter - Disable (Main & Batch Counter): disable main counter and batch counter - Reset Latch: switching signal latch	rw ¹
[count_direction_selection]	Control instance for selecting the counting direction (Observe note!)	- Pin 2 Count Direction: pin 2 of the port (default) - IoT / PLC Count Direction: IoT core or fieldbus control	rw ¹
[main_threshold]	Main counter threshold (CT)	1 ... 4294967295 (default)	rw ¹
[batch_threshold]	Batch counter threshold (CTb)	1 ... 65535 (default)	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

For the parameters [pin2_function] and [count_direction_selection] all shown parameter values can be selected. It is not checked whether these make sense. For each counter operating mode (parameter [mode]), the table below indicates the valid value ranges (✓: valid setting; ✗: invalid setting):

Counter mode	Pin2 function						Count direction selection	
	No function	counter transition input 2	count direction	Reset counter	Disable counter	Reset SSC Latch	Pin 2	PLC / IoT Core
CTU	✓	✗	✗	✓	✓	✓	✗	✗
CTD	✓	✗	✗	✓	✓	✓	✗	✗
CTUD	✗	✓	✗	✗	✗	✗	✗	✗
CTDIR	✗	✗	✓	✗	✗	✗	✓	✗
	✓	✗	✗	✓	✓	✓	✗	✓

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.

- Select menu [io] > [counter[n]] (n: 5...8).
 - ▷ The menu page displays the configuration options of the counter.
- Configure the counter module.
- Optional: Configure additional counter modules.
- Write the changed values to the device.
 - ▷ The counter modules are configured.

9.1.4.4 Configuring the switching signal channels



- Observe the notes on switching signal channels: [Switching signal channels](#) (→ [14](#))

Available parameters:

Available parameters (Main SSC):

Name	Description	Value range	Access
[mode]	Main SSC - switching mode of the switching channel	• Deactivated: switching channel deactivated (default) • Single Point: Single point mode. • Latch: latch mode • Two Point: Two point mode: • Window: window mode	rw ¹
[logic]	Main SSC - switching logic of the switching channel	• Active High: high active (default) • Active Low: low active	rw ¹
[sp1]	Main SSC - switch point 1	• 0: 0 ... • 4294967295: 4294967295 (default)	rw ¹
[sp2]	Main SSC - switch point 2	• 0: 0 ... • 4294967294: 4294967294 (default)	rw ¹
[single_point_edge]	Main SSC - Defines whether the switching channel reacts to increasing or decreasing counter values	• Rising Counter Value: rising edge (default) • Falling Counter Value: falling edge	rw ¹
[switch_delay]	Main SSC - switch delay (value in ms)	• 0: 0 ms (default) ... • 65535: 65535 ms	rw ¹
[reset_delay]	Main SSC - reset delay (value in ms)	• 0: 0 ms (default) ... • 65535: 65535 ms	rw ¹
[hysteresis]	Main SSC - hysteresis	• 0: 0 (default) ... • 4294967295: 4294967295	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Available parameters (batch SSC):

Name	Description	Value range	Access
[mode]	Batch SSC - switching mode of the switching channel	• Deactivated: switching channel deactivated (default) • Single Point: single point mode. • Latch: latch mode • Two Point: two point mode • Window: window mode	rw ¹
[logic]	Batch SSC - switching logic of the switching channel	• Active High: high active (default) • Active Low: low active	rw ¹

Name	Description	Value range	Access
[sp1]	Batch SSC - switch point 1	0: 0 ... 65535: 65535 (default)	rw ¹
[sp2]	Batch SSC - switch point 2	0: 0 ... 65534: 65534 (default)	rw ¹
[single_point_edge]	Batch SSC - Defines whether the switching channel should react to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Batch SSC - switching delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Batch SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[hysteresis]	Batch SSC - hysteresis	0: 0 (default) ... 65535: 65535	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

To configure the switching signal channels:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select menu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current settings of the switching channels of the main counter (main) and the batch counter (batch) of the port.
- ▶ Set the parameters.
- ▶ Write the changed values to the device.
- ▷ The switching signal channels are configured.

9.1.4.5 Configuring outputs

Available parameters:

Parameter	Description	Value range	Access
[current_limit]	Max. output current of the digital output (value in mA)	0: 0 A ... 2000: 2000 mA (default) ... 3600: 3600 mA	rw ¹

Parameter	Description	Value range	Access
[output_select]	Selection of control instance of digital output	• PLC: higher-level PLC • Counter 1 SSC Main: Counter 1 switching channel - main counter • Counter 1 SSC Batch: Counter 1 switching channel - batch counter • Counter 2 SSC Main: Counter 2 switching channel - main counter • Counter 2 SSC Batch: Counter 2 switching channel - batch counter • Counter 3 SSC Main: Counter 3 switching channel - main counter • Counter 3 SSC Batch: Counter 3 switching channel - batch counter • Counter 4 SSC Main: Counter 4 switching channel - main counter • Counter 4 SSC Batch: Counter 4 switching channel - batch counter	rw ¹
[output_state_com_lost]	Fallback value if fieldbus connection is lost	• State off: OFF • State on: ON • Keep last: keep last valid value	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

To configure the outputs of a port:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [io] > [port[n]] > [pin2] (n: 1...4) menu.
 - ▷ The menu page shows the current settings of the digital output on pin 2 of the port.
- ▶ Set the parameters.
- ▶ Select menu [io] > [port[n]] > [pin4] (n: 1...4).
 - ▷ The menu page shows the current settings of the digital output on pin 4 of the port.
- ▶ Set the parameters.
- ▶ Write the changed values to the device.
- ▷ The digital outputs of the device are configured.

9.1.5 Process data

The dashboard area provides access to the device's process data.

To display the dashboard area:

- ✓ The parameter value editor for the device is open.
- ▶ In the vertical bar at the right side of the screen: Click on .
- ▷ The dashboard view is displayed.

To hide the dashboard area:

- ✓ The dashboard area is displayed.
- ▶ Click on the vertical bar in the middle of the screen: Click on .
- ▷ The dashboard view is hidden.

9.1.5.1 Reading digital input data

Available information:

Name	Description	Value range	Access
[digital]	Signal level of the digital input channel (after filtering)	• LOW: off • HIGH: on	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
- ▷ The view shows the current signal levels of the digital outputs at pin 2 and pin 4 in substructure [io/port[n]] (n: 5...8).



The displayed signal levels are the filtered input data.

9.1.5.2 Writing the digital outputs

Available parameters:

Parameter	Description	Value range	Access
[digital_output]	Signal level of digital output channel	• Low: LOW level • High: HIGH level	rw ¹
[qualifier]	Status indication of digital output	• Output error: Error • Output okay: No error	ro ²

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² Read only

To write the digital outputs:

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/port[n]/pin2] (n: 1...4), the present signal level of the output channel at pin 2 of the port is displayed.
 - ▷ In substructure [io/port[n]/pin4] (n: 1...4), the present signal level of the output channel at pin 4 of the port is displayed.
- Set the switching signals.
- Write the changed values to the device.
- ▷ The set values are output at the digital outputs.
- Check the validity of the digital outputs.

9.1.5.3 Reading counter values

Available parameters:

Name	Description	Value range	Access
[maincounter_value]	Main counter reading	0...4294967294	ro ¹
[batchcounter_value]	Batch counter value	0...65534	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
- ▷ In substructure [io/counter[n]] (n: 5...8), the current counter values of the main and batch counters are displayed.

9.1.5.4 Controlling counter modules

Available parameters:

Name	Description	Value range	Access
[disable]	Disable main counter and batch counter	• 0: counter module is active (default) • 1: counter module is not active	rw ¹
[reset]	Reset main counter, batch counter and CT and CTb thresholds to initial values	• 0: no action (default) • 1: reset	rw ¹
[direction] ²	Set the counting direction for the main counter and the batch counter	• 0: up (default) • 1: down	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² only effective if operating mode of counter module = CTDIR

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure [io/counter[n]] (n: 5...8), the available control signals of the counter modules are displayed.
- Optional: Disable the counter module.
- Optional: Reset the counter module.
- Optional: Set the counting direction of the counter module.
- Write the changed parameter values to the device.
- ▷ The selected actions are executed.

9.1.5.5 Reading the switching signals

Available data:

Name	Description	Value range	Access
[state]	State of the switching signal	• False: Off • True: On	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
- ▷ In substructure [io/port[n]/ssc] (n: 5...8), the current states of the switching signals of the main counter (main) and the batch counter (batch) of the port are displayed.

9.1.5.6 Controlling the switching signal channels

Available data:

Name	Description	Value range	Access
[reset_latch]	Reset switching signal (only effective if switch-point mode = latch)	• Inactive → Active: reset switching signal • otherwise: no action	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
 - ▷ In substructure io/port[n]/ssc (n: 5...8), the control signals for the switching channels of the main counter (main) and the batch counter (batch) of the port are displayed.
- ▶ Set the control signals.
- ▶ Write the changed values to the device.
- ▷ The switching signal channels pass into the new state.

9.1.5.7 Reading status and diagnostic information



The measuring accuracy of the current and voltage values of the device supply US is ±10%.

Available information:

Parameter	Description	Value range	Access
[temperature]	Device temperature (value in °C)	-30...80	ro ¹
[supervisionstatus_us]	Status of the US device supply	• 0: No error • 1: Error	ro ¹
[supervisionstatus_ua]	Status of the UA device supply	0: No error 1: Error	ro ¹
[voltage_us]	Present voltage value of the US device supply (value in mV)	0...40000	ro ¹
[current_us]	Present current value of the US device supply (value in mA)	0...40000	ro ¹
[voltage_ua]	Present voltage value of the UA device supply (value in mV)	0...4000	ro ¹
[current_ua_upper]	Present current value of the UA device supply of ports 1&2 (value in mA)	0...4000	ro ¹
[current_ua_lowerr]	Present current value of the UA device supply of ports 3&4 (value in mA)	0...4000	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- In the vertical bar at the right side of the screen: Click on .
 - ▷ The dashboard view is displayed.
- ▷ The view shows the device's status and diagnostic information in the [processdatamaster] substructure.

9.1.6 Device information

The [deviceinfo] menu provides access to the device's identification information.

9.1.6.1 Reading identification information

Available information:

Name	Description	Value range	Access
[productcode]	Article number	AL4343	ro ¹
[devicefamily]	Device family	Ethernet modules	ro ¹
[vendor]	Manufacturer	ifm electronic gmbh	ro ¹
[swrevision]	Firmware revision	e.g. AL4x4x_fw_md_1.4.0.142	ro ¹
[hwrevision]	Hardware revision (status)	e.g. AA	ro ¹
[bootloaderrevision]	Bootloader version	e.g. AL4xxx_bl_1.4.0.39	ro ¹
[serialnumber]	Serial number	e.g. 0002043100003	ro ¹
[fieldbustype]	Fieldbus	ModbusTCP	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select the menu option [deviceinfo].
- ▷ The menu page displays the identification information of the device.

9.1.7 Device ID

Das Menü [devicetag] bietet Zugriff auf die Gerätekenung.

9.1.7.1 Setting the application tag

Available parameters:

Parameter	Description	Value range	Access
[applicationtag]	Application-specific identifier of the device in moneo	e.g. plant 1 machine 3	rw ¹

¹ Read and write

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- Select [devicetag] menu.
- Enter the application identifier.
- Write the changed values to the device.

- ▷ The device can be identified by the selected application tag.

9.1.8 Device control

Das Menü [firmware] bietet Zugriff auf die Funktionen zur Steuerung des Geräts.

9.1.8.1 Resetting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [factoryreset].
- ▷ The device is reset to factory settings.
- ▷ All parameters are set to their default values.

9.1.8.2 Restarting the device

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▶ Click on [Reboot].
- ▷ The device will be restarted.
- ▷ All set parameter values will be retained.

9.1.8.3 Reading the firmware version

Available information:

Parameter	Description	Value range	Access
[version]	Firmware version	e.g. AL4x4x_fw_md_1.4.0.142	ro ¹

¹ Read only

Requirements:

- ✓ The parameter setting software has been started.
- ✓ The detailed view of the device is active.
- ▶ Select the [Firmware] menu.
- ▷ The menu page displays the firmware version of the device.

9.2 IoT-Core Visualizer


The IoT Core Visualizer provides a graphical user interface to access the functions of the ifm IoT Core.

9.2.1 Starting the ifm IoT Core Visualizer

To start the IoT Core Visualizer:

Requirements:

- ✓ The laptop / PC is connected directly or via a suitable network coupling element (e.g. switch) to a ModbusTCP port (XF1 / XF2) of the device.
- ✓ ModbusTCP interface has been configured.
- ▶ Start web browser.
- ▶ Go to the following URL: `http://<ip-address>` (e.g. `http://192.168.0.10`)
- ▶ The web browser displays the start page of the IoT Core Visualizer.

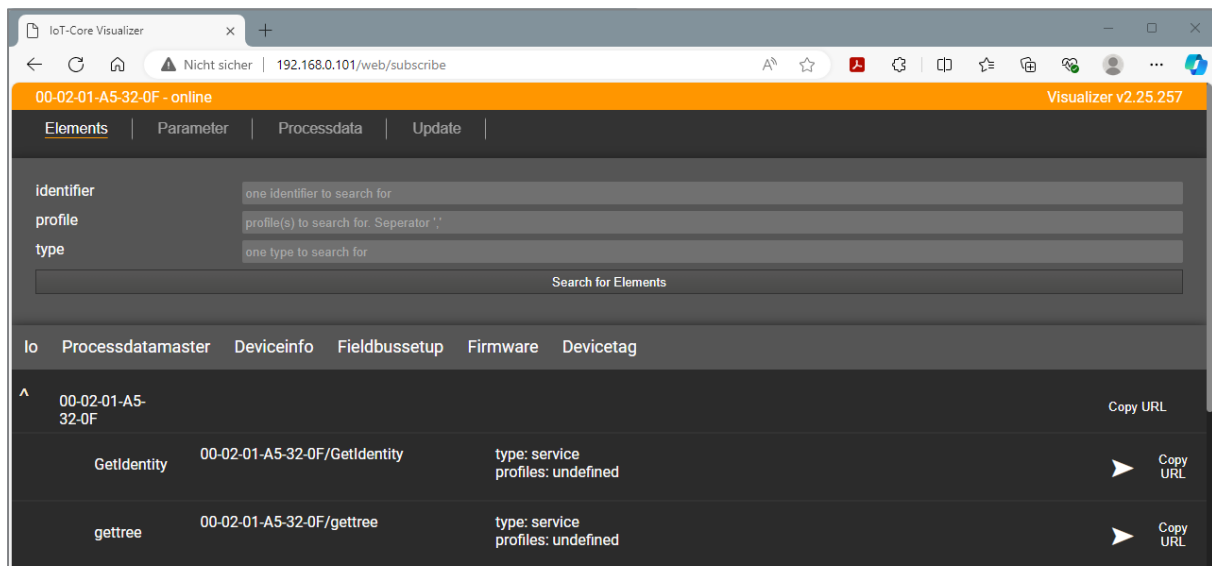

The navigation menu gives the user access to the following functions:

- [Elements]: [Searching for elements of the IoT Core \(→ 39\)](#)
- [Parameter]: [Configuring the device \(→ 40\)](#)
- [Processdata]: [Accessing the process data \(→ 47\)](#)
- [Update]: [Update firmware \(→ 51\)](#)

9.2.2 Searching for elements of the IoT Core

The [Elements] menu page allows you to search the IoT Core tree for elements with specific properties and output the results.

The following properties can be searched for:

- [identifier]: Name of the element
- [profile]: Profile of the element
- [type]: Type of the element

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Elements] menu is active.

The screenshot shows the 'Elements' menu in the IoT Core Visualizer. At the top, there's a header bar with the device ID '00-02-01-A5-32-0F - online' and the version 'Visualizer v2.25.257'. Below the header, there are tabs: 'Elements', 'Parameter', 'Processdata', and 'Update'. The 'Elements' tab is active. Under this tab, there are three input fields: 'identifier' (placeholder: 'one identifier to search for'), 'profile' (placeholder: 'profile(s) to search for. Seperator ',''), and 'type' (placeholder: 'one type to search for'). Below these fields is a 'Search for Elements' button. Below the search area, there's a table with columns: 'Io', 'Processdatamaster', 'Deviceinfo', 'Fieldbussetup', 'Firmware', and 'Devicetag'. The table shows a list of elements for the device '00-02-01-A5-32-0F'. Each row has a 'Copy URL' button. The elements listed are: 'GetIdentity', 'gettree', 'querytree', and 'getsubscrib'.

Io	Processdatamaster	Deviceinfo	Fieldbussetup	Firmware	Devicetag	Copy URL
^	00-02-01-A5-32-0F					Copy URL
	GetIdentity	00-02-01-A5-32-0F/GetIdentity		type: service profiles: undefined		Copy URL
	gettree	00-02-01-A5-32-0F/gettree		type: service profiles: undefined		Copy URL
	querytree	00-02-01-A5-32-0F/querytree		type: service profiles: undefined		Copy URL
	getsubscrib	00-02-01-A5-32-0F/getsubscriberlist		type: service profiles: undefined		Copy URL

- ▶ Select the search criteria for the required element in the selection lists [identifier], [profile] and [type].
- ▶ Click on [Search for Elements].
- ▶ Click on [Search for...].
- ▷ IoT Core Visualizer searches the device description for elements with selected search criteria.
- ▷ The result list shows all the elements found.

9.2.3 Configuring the device

The [Parameter] menu page provides access to the configuration options of the device.



The configuration created via the IoT Core Visualizer is overwritten when a connection is established between the device and the ModbusTCP PLC.

Requirements:

- ✓ IoT Core Visualizer has been started.
- Select the [Parameter] menu.
- ▷ The menu page shows the available parameters of the device.

00-02-01-A5-32-0F - online Visualizer v2.25.257

Elements | **Parameter** | Processdata | Update

Io Deviceinfo Fieldbussetup Firmware Devicetag

^ 00-02-01-A5-32-0F

- ▼ io
- ▼ deviceinfo type: structure profiles: deviceinfo
- ▼ fieldbussetup
- ▼ firmware type: structure profiles: software,software/uploadablesoftware,devicereset
- ^ devicetag type: structure profiles: devicetag

Name	Type	Namespace	Encoding	Valuation	minlength	maxlength
applicationtag	string	json	UTF-8		0	31

Copy URL  

9.2.3.1 Configuring a ModbusTCP interface



Changes to the `byteswap` data point will only take effect after the device has been restarted.

Available parameters:

Name	Description	Value range	Access
[network] > [dhcp]	Status of the DHCP client	- Static IP: Static IP address - DHCP: DHCP (Dynamic Host Configuration protocol) - BOOTP: BOOTP (Bootstrap Protocol)	rw ¹
[network] > [ipaddress]	IP address of the Ethernet interface	e.g. 192.200.0.100 192.168.1.250 (default)	rw ¹
[network] > [subnetmask]	Subnet mask of the network segment	e.g. 255.255.192.0 255.255.255.0 (default)	rw ¹
[network] > [ipdefaultgateway]	IP address of the network gateway	e.g. 192.200.63.1 0.0.0.0 (default)	rw ¹
[network] > [macaddress]	MAC address of the Ethernet interface	e.g. 00:02:01:0E:10:7C	ro ²
[configuration] > [connection-timeout]	Set timeout for interruption of the fieldbus connection (value in milliseconds)	20: 20 ms ... 31000: 31000 ms ... 60000: 60000 ms	rw ¹
[configuration] > [byteswap]	Arrangement of the bytes in a data word	- big-endian: Big-endian format - little-endian: Little-endian format	rw ¹

¹ Read and write

² Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [fieldbussetup] > [configuration] submenu.
- ▶ Select the [fieldbussetup] > [network] submenu.
 - ▷ The menu page shows the current settings.
- ▶ Set the parameters.
- ▶ Click on  to save the changes to the device.
- ▶ If necessary, restart the device.
- ▷ The ModbusTCP interface is configured.

9.2.3.2 Configuring input filters



▶ Observe the notes on input filters: [Digital input filters](#) (→  9)

Available parameters:

Name	Description	Value range	Access
[debounce_time]	Debounce time (= value * 0.1 milliseconds)	0: 0 ms (default) ... 500: 50 ms	rw ¹

Name	Description	Value range	Access
[hold_time]	Hold time (= value * 0.1 milliseconds)	0: 0 ms (default) ... 60000: 6000 ms	rw ¹
[hold_level]	Hold level	- low: hold LOW - high: hold HIGH (default)	rw ¹
[invert]	Inversion	- signal not inverted: do not invert (default) - signal inverted: invert	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 5...8).
 - ▷ The menu page shows the current settings of the digital input filters on pin 2 and pin 4 of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes to the device.
- ▷ The filters of the digital inputs are configured.

9.2.3.3 Configuring the counter modules



- ▶ Observe the notes on counter modules: [Counter](#) (→ [11](#))



If the operating mode of a counter module is changed, the current counter values will be reset and any active events will be deleted.

For the parameters [pin2_function] and [count_direction_selection] all shown parameter values can be selected. It is not checked whether these make sense. For each counter operating mode (parameter [mode]), the table below indicates the valid value ranges (✓: valid setting; ✗: invalid setting):

Counter mode	pin2_function					count_direction_selection	
	Counter Edge Input 2	Count Direction	Reset (Main & Batch Counter)	Disable (Main & Batch Counter)	Reset SSC Latch (Main & Batch Counter)	Pin 2 Count Direction	IoT / PLC Count Direction
CTU	✗	✗	✓	✓	✓	✗	✗
CTD	✗	✗	✓	✓	✓	✗	✗
CTUD	✓	✗	✗	✗	✗	✗	✗
CTDIR	✗	✓	✓	✓	✓	✓	✓

Available parameters:

Name	Description	Value range	Access
[mode]	Operating mode of the counter module	- CTU (up counter): up counter (default) - CTD (down counter): down counter - CTUD (up counter / down counter): up and down counter - CTDIR (direction counter): up and down counter with selectable counting direction	rw ¹

Name	Description	Value range	Access
[pin2_function]	Pin 2 function of the port (→ Observe note!)	- N/C: no function (default) - Counter edge input 2: counting pulse (rising edge) - Count direction: counting direction - Reset (main & batch counter): reset main counter and batch counter - Disable (main & batch counter): disable main counter and batch counter - Reset SSC Latch (Main & Batch Counter): reset switching signal	rw ¹
[count_direction_selection]	Control instance for selecting the counting direction (→ Observe note!)	- Pin 2 count direction: pin 2 (default) - IoT / PLC count direction: IoT Core / Fieldbus PLC	rw ¹
[main_threshold]	Main counter threshold (CT)	1 ... 4294967295 (default)	rw ¹
[batch_threshold]	Batch counter threshold (CTb)	1 ... 65535 (default)	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] > [counter] (n: 5...8).
 - ▷ The menu page shows the current settings of the port's counter module.
- ▶ Set the parameters.
- ▶ Click on  to save the changes.
- ▷ The counter modules are configured.

9.2.3.4 Configuring the switching signal channels



- ▶ Observe the notes on switching signal channels: [Switching signal channels \(→ 14\)](#)

Available parameters (Main SSC):

Name	Description	Value range	Access
[mode]	Main SSC - switching mode of the switching channel	- Deactivated: switching channel deactivated (default) - Single Point: Single point mode. - Latch: latch mode - Two Point: Two point mode: - Window: window mode	rw ¹
[logic]	Main SSC - switching logic of the switching channel	- Active High: high active (default) - Active Low: low active	rw ¹
[sp1]	Main SSC - switch point 1	0: 0 ... 4294967295: 4294967295 (default)	rw ¹
[sp2]	Main SSC - switch point 2	0: 0 ... 4294967294: 4294967294 (default)	rw ¹

Name	Description	Value range	Access
[single_point_edge]	Main SSC - Defines whether the switching channel reacts to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Main SSC - switch delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Main SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[hysteresis]	Main SSC - hysteresis	0: 0 (default) ... 4294967295: 4294967295	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Available parameters (batch SSC):

Name	Description	Value range	Access
[mode]	Batch SSC - switching mode of the switching channel	- Deactivated: switching channel deactivated (default) - Single Point: single point mode. - Latch: latch mode - Two Point: two point mode - Window: window mode	rw ¹
[logic]	Batch SSC - switching logic of the switching channel	- Active High: high active (default) - Active Low: low active	rw ¹
[sp1]	Batch SSC - switch point 1	0: 0 ... 65535: 65535 (default)	rw ¹
[sp2]	Batch SSC - switch point 2	0: 0 ... 65534: 65534 (default)	rw ¹
[single_point_edge]	Batch SSC - Defines whether the switching channel should react to increasing or decreasing counter values	- Rising Counter Value: rising edge (default) - Falling Counter Value: falling edge	rw ¹
[switch_delay]	Batch SSC - switching delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[reset_delay]	Batch SSC - reset delay (value in ms)	0: 0 ms (default) ... 65535: 65535 ms	rw ¹
[hysteresis]	Batch SSC - hysteresis	0: 0 (default) ... 65535: 65535	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current settings of the switching channels of the main counter ([main]) and the batch counter ([batch]) of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes.

▷ The switching signal channels are configured.

9.2.3.5 Configuring the digital outputs

Available parameters:

Parameter	Description	Value range	Access
[current_limit]	Max. output current of the digital output (value in mA)	• 0: 0 A ... • 2000: 2000 mA (default) ... • 3600: 3600 mA	rw ¹
[output_select]	Selection of control instance of digital output	• PLC: higher-level PLC • Counter 1 SSC Main: Counter 1 switching channel - main counter • Counter 1 SSC Batch: Counter 1 switching channel - batch counter • Counter 2 SSC Main: Counter 2 switching channel - main counter • Counter 2 SSC Batch: Counter 2 switching channel - batch counter • Counter 3 SSC Main: Counter 3 switching channel - main counter • Counter 3 SSC Batch: Counter 3 switching channel - batch counter • Counter 4 SSC Main: Counter 4 switching channel - main counter • Counter 4 SSC Batch: Counter 4 switching channel - batch counter	rw ¹
[output_state_com_lost]	Fallback value if fieldbus connection is lost	• State off: OFF • State on: ON • Keep last: keep last valid value	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 1...4).
 - ▷ The menu page shows the current settings of the digital output channels on pin 2 and pin 4 of the port.
- ▶ Set the parameters.
- ▶ Click on  to save the changes.
- ▷ The digital outputs are configured.

9.2.3.6 Reading device information

Available information:

Name	Description	Value range	Access
[productcode]	Article number	AL4343	ro ¹
[vendor]	Vendor	ifm electronic	ro ¹
[devicefamily]	Device family	Ethernet modules	ro ¹
[serialnumber]	Serial number (12 digits)	e.g. 000174210161	ro ¹
[hwrevision]	Hardware revision	E.g. AA	ro ¹
[swrevision]	Firmware version	E.g. AL4x4x_fw_md_1.4.0.142	ro ¹

Name	Description	Value range	Access
[bootloaderrevision]	Bootloader version	E.g. AL4xxx_bl_1.4.0.39	ro ¹
[fieldbustype]	Fieldbus	ModbusTCP	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [deviceinfo] submenu.
- ▷ The menu page shows device information.

9.2.3.7 Reading the firmware version

Available information:

Name	Description	Value range	Access
[version]	Firmware version	AL4x4x_fw_md_1.4.0.142	ro ¹
[type]	Type	• firmware: Firmware type	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [firmware] submenu.
- ▷ The menu page shows the available information.

9.2.3.8 Setting the application tag

Available parameters:

Name	Description	Value range	Access
[applicationtag]	Device designation in monitoring software	E.g. "factory 2 plant 1"	rw ¹

¹ Read and write



32 bytes are available on the device for storing the `applicationtag` parameter. If the memory range is exceeded, the device will abort the write process (diagnostic code 400).

- ▶ When writing the `applicationtag` parameter, observe the different memory requirements of the individual UTF-8 characters (characters 0-127: 1 byte per character; character >127: more than 1 byte per character).

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Parameter] menu is active.
- ▶ Select the [devicetag] submenu.
 - ▷ The menu page shows the current settings.
- ▶ Enter the application tag.
- ▶ Click on  to save the changes to the device.
- ▷ The new application tag is set.

9.2.4 Accessing the process data

The [Processdata] menu page provides access to the process data of the device.

Requirements:

- ✓ IoT Core Visualizer has been started.
- ▶ Select the [Processdata] menu.
- ▷ The menu page shows the substructures of the device description that contains the process data.
- ▷ The current process values are displayed.

The screenshot shows the IoT Core Visualizer interface for the device '00-02-01-A5-32-0F - online'. The 'Processdata' menu is selected. The interface displays a tree view of the device structure. The 'io' element is expanded, showing 'port[1]' and 'pin2'. The 'pin2' element is selected, displaying its 'digital_output' as 'Low' and 'qualifier' as 'Output okay'. The page includes a 'Polling' section with a 'Refresh all' button and a 'Type' column showing 'enum' and 'integer' values. The 'digital_output' is an enum with values 'Low' and 'High'. The 'qualifier' is an integer.

- ▶ Optional: In the header, activate the [Polling] option and set the polling interval.
 - ▷ The process values will be refreshed with the set interval.
- ▶ Optional: Click on ↻ next to an element to manually refresh the process value.

9.2.4.1 Reading digital input data

Available information:

Name	Description	Value range	Access
[digital_input]	Process value digital input (after filtering)	- Low: LOW - High: HIGH	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] (n: 5...8).
- ▷ The menu page shows the digital input data on pin 2 and pin 4 of the port.

9.2.4.2 Reading counter values

Available information:

Name	Description	Value range	Access
[maincounter_value]	Current main counter value	0...4294967295	ro ¹
[batchcounter_value]	Current batch counter value	0...65535	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] > [counter] (n: 5...8).
- ▷ The menu page shows current counter values of the counter module.

9.2.4.3 Controlling counter modules

Available control signals:

Name	Description	Values	Access
[reset]	Reset counter module (reset counter and threshold values to default values)	- inactive: no action (default) - active: reset	rw ¹
[disable]	Disable counter module	- inactive: enable counter (default) - active: disable counter	rw ¹
[direction] ²	Set counting direction for main counter and batch counter	- up: up (default) - down: down	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² only effective if operating mode of counter module = CTDIR

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select submenu [io] > [port[n]] > [counter] (n: 5...8).
 - ▷ The menu page shows the available services.
- ▶ Set the control signals.
- ▶ Click on  to send the control signals to the device.
- ▷ The control signals are executed.

9.2.4.4 Writing the digital outputs

Available data:

Name	Description	Value range	Access
[digital_output]	Signal level of digital output channel	- Low: LOW level - High: HIGH level	rw ¹
[qualifier]	Status of digital output	- Output error: error - Output okay: no error	ro ²

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

² Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] (n: 1...4).
 - ▷ The menu page shows the options for controlling the digital outputs on pin 2 and pin 4 of the port.
- Set the value of the digital outputs.
- Click on  to save the changes.
- ▷ The set value is provided at the digital output.
- Check whether the status of the digital output is error-free.

9.2.4.5 Reading the switching signal signals

Available data:

Name	Description	Value range	Access
[state]	State of the switching signal	- False: OFF - True: ON	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] > [ssc] (n: 5...8).
 - ▷ The menu page shows the current states of the switching signals of the main counter (main) and the batch counter (batch) of the port.

9.2.4.6 Controlling the switching signal channels

Available data:

Name	Description	Value range	Access
[reset_latch]	Reset the switching signal (only effective if switch point mode = Latch)	- Inactive > Active: Reset switching signal (INACTIVE) - otherw.: no action	rw ¹

¹ Read and write; parameter can only be changed if no connection to fieldbus controller is established

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- Select submenu [io] > [port[n]] > [ssc] (n: 5...8).

- ▷ The menu page shows the control signals for the switching channels of the main counter (main) and the batch counter (batch) of the port.
- ▶ Set the status of the switching signals.
- ▶ Click on  to save the changes.

9.2.4.7 Reading status and diagnostic information



The measuring accuracy of the current and voltage values of the device supply US is $\pm 10\%$.

Available information:

Name	Description	Value range	Access
[temperature]	Device temperature (value in °C)	E.g. 52: 52 °C	ro ¹
[voltage_us]	Present voltage value of device supply US (value in mV)	E.g. 25236: 25236 mV	ro ¹
[current_us]	Present current value of device supply US (value in mA)	E.g. 82: 82 mA	ro ¹
[supervisionstatus_us]	Status of device supply US	• OK: no error • Fault: error	ro ¹
[voltage_ua]	Voltage value of device supply UA (value in mV)	E.g. 25236: 25236 mV	ro ¹
[current_ua_upper]	Upper current value of device supply UA (value in mA)	E.g. 2: 2 mA	ro ¹
[current_ua_lower]	Lower current value of device supply UA (value in mA)	E.g. 82: 82 mA	ro ¹
[supervisionstatus_ua]	Status of device supply UA	• OK: no error • Fault: error	ro ¹
[uptime]	Time since the last start of the device (value in minutes)	• 0x0000: 0 min ... • 0xFFFF: 65535 min	ro ¹

¹ Read only

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ The [Processdata] menu is active.
- ▶ Select the [processdatamaster] submenu.
- ▷ The menu page shows status and diagnostic information.

9.2.5 Update firmware

The [Update] menu page allows you to update the firmware of the device:

Requirements:

- ✓ IoT Core Visualizer has been started.
- ✓ New firmware has been downloaded. documentation.ifm.com
- ▶ Select the [Update] menu.
- ▷ Menu page shows information about the current firmware version.

The screenshot shows the 'Update' menu in the IoT Core Visualizer. The top bar is orange and displays '00-02-01-A5-32-0F - online' and 'Visualizer v2.25.257'. Below the bar is a navigation menu with 'Elements', 'Parameter', 'Processdata', and 'Update' (highlighted). The main content area is titled 'Firmware' and shows the current firmware version '00-02-01-A5-32-0F/firmware'. It lists the following details:

Firmware		Container	
Version:	AL4x0x_fw_pn_1.4.0.154	Chunk size:	4096
Type:	firmware	Max size:	4128768
		Size:	0

Below the table, there is a 'Load software file' button and a text input field labeled 'choose software package'. At the bottom, there is an 'Update' button.

- ▶ Click on [Load software file] and select the new firmware file (*.bin).
- ▶ Click on [Update] to start the update process.
- ▷ The firmware of the device is updated.
- ▷ The progress of the update process is displayed.
- ▷ After successful update: The device reboots automatically.

9.3 ModbusTCP

9.3.1 Integrating a device into a Modbus TCP project

The device offers the functionality of a Modbus TCP server (independent mode). The user can integrate the device into a Modbus TCP project via the profile of a generic Modbus TCP slave.

The device can be configured via the Modbus registers.

9.3.1.1 Example: Integrating a device into a CODESYS project



► Familiarise yourself with the Modbus Configurator function in the CODESYS help.

Task: Integrate the device into a CODESYS project.

Available hardware:

- SmartPLC AC14 DL (Modbus TCP Master)
- Device AL4343 (Modbus TCP Slave)

Solution:


Create a Modbus TCP master

Requirements:

- ✓ CODESYS project with AC14 DL was created.
- In the device tree: Right click on the [X8 (Ethernet)] node.
 - ▷ The context menu appears.
- Select the menu item [Add device...].
 - ▷ A dialogue window appears.
- Select the device profile [Modbus_TCP_Master].
- Click on [Add device].
- ▷ CODESYS adds the Modbus TCP master as a sub-node of the interface [X8 (Ethernet)] to the project.
- ▷ SmartPLC AC14 DL can be configured as TCP Master mode.

Add the device as a Modbus TCP slave

- In the device tree: Right click on the node [X8 (Ethernet)] > [Modbus_TCP_Master].
 - ▷ The context menu appears.
- Select the menu item [Add device...].
 - ▷ A dialogue window appears.
- Select the device profile [Modbus_TCP_Slave].
- Enter AL4343 as the name.
- Click on [Add device].
- ▷ CODESYS adds the device to the project as a sub-node of [Modbus TCP Master].
- ▷ The device can be configured as a Modbus TCP slave.

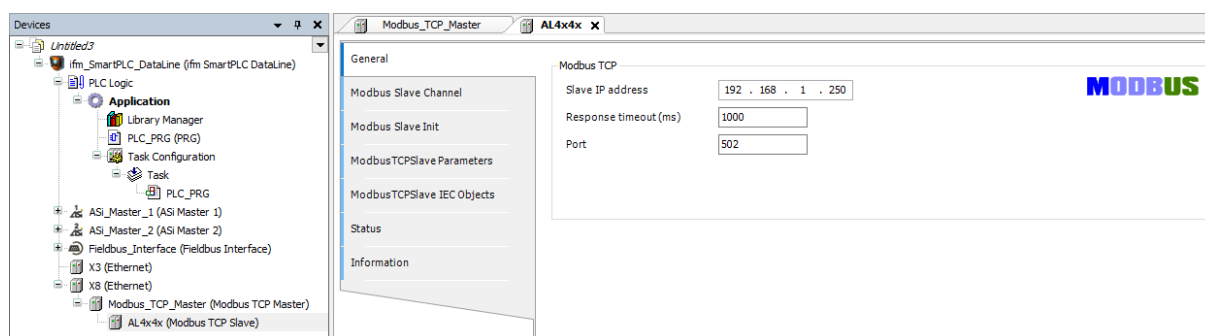

9.3.2 Device-specific notes

9.3.2.1 Rules for accessing the Modbus register

The following rules apply for access to the Modbus registers:

- To read or write Modbus registers, only use the valid Function Codes (→ [Supported function codes](#) 53).

9.3.2.2 Supported function codes

The device supports the following function codes for accessing the Modbus registers:

Function code	Name	Description
FC2 (0x02)	Read Input Discretes	Read individual digital inputs
FC3 (0x03)	Read Multiple Registers	Read several contiguous registers
FC4 (0x04)	Read input register	Read input register
FC6 (0x06)	Write Single Register	Writing a single register
FC16 (0x10)	Write Multiple Registers	Writing several contiguous registers
FC23 (0x17)	Read / Write Multiple Registers	Read / write several contiguous registers
FC43 (0x2B)	Read Device Identification	Reading device information



Detailed information about the function codes: → [Modbus TCP- specification](#)

9.3.2.3 Exception codes

A Modbus TCP request has the following structure:

Function Code	Request Data
---------------	--------------

A Modbus TCP response has the following structure:

Function Code	Response Data
---------------	---------------

When a request is processed without errors, the response message contains the following information:

- Function code (1 byte): Function code of the request message
- Response data (n bytes): Requested data

If an error occurs during the processing of a request, the response message contains the following information:

- Function code (1 byte): Error Code (= Request Function Code + 0x80)
- Response data (1 byte): Exception codes

The following exception codes are available:

Exception code	Name	Description
0x1	ILLEGAL FUNCTION	Invalid Function Code (Modbus function not implemented)
0x2	ILLEGAL DATA ADDRESS	Invalid data address (invalid address or length)
0x3	ILLEGAL DATA VALUE	Invalid data value (invalid parameters; wrong number of registers)
0x4	SERVER DEVICE FAILURE	Unrecoverable error in the Modbus server during processing

9.3.3 Configuring the device

Register areas for the basic settings of the device:

- Set the byte order in the data registers: [Byte Swap \(500\)](#) (→ [□ 69](#))
- Set the max. connection interruption time: [Connection Timeout \(510\)](#) (→ [□ 70](#))
- Set the order of the process data in registers 0, 400, 401, 409, 410, 411, 1000 and 1010: [DI DO Channel Mapping \(550\)](#) (→ [□ 71](#))

9.3.4 Configuring digital inputs

Register range for the configuration of the digital input channels: Port Configuration - Digital Inputs (100 - 163)

Available parameters for each digital input channel:

- Inversion
- Hold level
- Debounce time
- Hold time

9.3.5 Configuring the counter modules and switching channels



► Observe the notes on counter modules: [Counter](#) (→ [□ 11](#))

Register range for the configuration of the counter module: [Counter Configuration \(200 - 235\)](#) (→ [□ 63](#))

Available parameters per counter module:

- Operating mode of the counter module
- Pin 2 function of the port
- Instance for selecting the counting direction
- Threshold CT of the main counter
- Threshold CTb of the batch counter
- Set counter value of the main counter
- Set the counter value of the batch counter



► Observe the notes on switching signal channels: [Switching signal channels](#) (→ [□ 14](#))

Register range for the configuration of the switching channels: [SSC Configuration \(710 - 785\)](#) (→ [□ 74](#))

Available parameters per switching channel:

- Main SSC - switching mode

- Main SSC - switching logic
- Main SSC - reaction to increasing / decreasing counter edges
- Main SCC - switch point SP1
- Main SCC - switch point SP2
- Main SCC - switch delay
- Main SCC - reset delay
- Main SCC - hysteresis
- Batch SCC - switching mode
- Batch SCC - switching logic
- Batch SCC - reaction to increasing / decreasing counter edges
- Batch SCC - switch point SP1
- Batch SCC - switch point SP2
- Batch SCC - reset delay
- Batch SCC - reset delay
- Batch SCC - hysteresis



► Only change the parameters [Main SP1], [Main SP2], [Main Hysteresis], [Main counter threshold] and [Force Main Counter] with the function code 0x10 (Write Multiple Registers).

9.3.6 Configuring the digital outputs

Register range for the configuration of the digital output channels: [Digital Output Configuration \(1100 - 1123\)](#) (→ [81](#))

Available parameters per output channel:

- Control instance for digital output channel
- Fallback value when connection is interrupted
- Max. output current value

9.3.7 Controlling the device

System commands can be executed on the device.

Register area for accessing the system commands: [System Command \(600\)](#) (→ [72](#))

Available system commands:

- Restart the device.
- Resetting the device

9.3.8 Controlling the counter modules and switching channels

Register range for controlling the counter modules: Counter Control (300 - 355)

Available control signals per counter module:

- Disable counter module
- Set the direction
- Reset overflow/underflow event of the main counter
- Reset overflow/underflow event of the batch counter
- Counter and overflow/underflow events Reset counter events

Register area for compact access to the control signals of the counter modules: Block Configuration (400 - 408)

Available control signals per counter module:

- Invert input signal (pin 2 / pin 4)
- Set the level of the input signal (pin 2 / pin 4)
- Disable counter module
- Set the direction
- Reset overflow/underflow event of the main counter
- Reset overflow/underflow event of the batch counter
- Counter and overflow/underflow events Reset counter events

Register range for controlling the switching channels in "Latch mode": [SSC Reset Latch \(900 - 907\)](#) ([→ □ 77](#))

Available control signals per switching channel:

- Reset the switching channel of the main counter (latch)
- Reset the switching channel of the batch counter (latch)

9.3.9 Reading process data

Registers 0...34 provide access to the unit's process data: Input data (0 - 34)

The register range 0..2 contains the following process data:

- Digital inputs of all ports
- Overflow and underflow events of the main counter and batch counter of all ports

The register area 3...34 contains the following process data for each port separately:

- Counter values of the Main Counter and Batch Counter
- Overflow and underflow events of the main counter and batch counter

9.3.10 Reading diagnostic data

The registers 2000...2007 provide access to the diagnostic data of the device: [Diagnostic Data \(2000 - 2007\)](#) ([→ □ 83](#))

Available diagnostic data:

- Status of the US supply voltage
- Status of the UA supply voltage - ports 1&2
- Status of the UA supply voltage - ports 3&4
- Time since last device start
- Connection interruption counter
- Present voltage value of the US supply voltage
- Present current value of the US supply voltage
- Present voltage value of the UA supply voltage
- Present current value of the UA supply voltage - ports 1&2
- Present current value of the UA supply voltage - ports 3&4

9.3.11 Reading identification information

The user can read identification information of the device with the function code FC43.

The machine supports the following categories of the Read Device ID Code function:

- Basic Device Identification (0x01):

Object ID	Name	Data type	Value range
0x00	Vendor name	ASCII string	ifm electronic
0x01	Product Code	ASCII string	AL4343
0x02	Major Minor Revision	ASCII string	e.g. 1,001

- Regular Device Identification (0x02):

Object ID	Name	Data type	Value range
0x00	Vendor name	ASCII string	ifm electronic
0x01	Product Code	ASCII string	AL4343
0x02	Major Minor Revision	ASCII string	e.g. 1,001
0x03	Vendor Url	ASCII string	www.ifm.com
0x04	Product Name	ASCII string	ETH Module PFL MB 8DO8DI IP69K
0x05	Model Name	ASCII string	AL4343
0x06	User Application Name	ASCII string	Ethernet Module 8DO8DI

10 Maintenance, repair and disposal

The operation of the device is maintenance-free.

- ▶ Dispose of the device in an environmentally friendly way in accordance with the applicable national regulations when it is no longer used.

10.1 Cleaning

- ▶ Disconnect the device from the voltage supply.
- ▶ Clean the device from dirt using a soft, chemically untreated and dry cloth.
- ▶ In case of severe soiling, use a damp cloth.



- ▶ Do not use any caustic cleaning agents for cleaning!

10.2 Update firmware

The system software of the device can be updated using the following options:

- IoT-Core Visualizer: [Update firmware](#) (→ [51](#))

11 Appendix

11.1 ModbusTCP

11.1.1 Register

11.1.1.1 Input data (0 - 18)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	res.	res.	res.	res.	res.	res.	res.	res.	DI Ch07	DI Ch06	DI Ch05	DI Ch04	DI Ch03	DI Ch02	DI Ch01	DI Ch00
1	res.	res.	res.	res.	SSC MC4 OF	SSC MC3 OF	SSC MC2 OF	SSC MC1 OV	res.	res.	res.	res.	SSC MC4 UF	SSC MC3 UF	SSC MC2 UF	SSC MC1 UF
2	res.	res.	res.	res.	SSC BC4 OF	SSC BC3 OF	SSC BC2 OF	SSC BC1 OF	res.	res.	res.	res.	SSC BC4 UF	SSC BC3 UF	SSC BC2 UF	SSC BC1 UF
3...6	SSC counter 1: Mapping: Counter Data and Status (→ ⓘ 60)															
7...10	SSC counter 2: Mapping: Counter Data and Status (→ ⓘ 60)															
11...14	SSC counter 3: Mapping: Counter Data and Status (→ ⓘ 60)															
15...18	SSC counter 4: Mapping: Counter Data and Status (→ ⓘ 60)															

Legend:

- | | | | |
|--------------|--|------------|---|
| • DI Chx | Signal level of the digital input channel Chx (x: 01...08) after filtering | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • SSC MCx OF | SSC Main Counter x Overflow: Overflow event at the SSC main counter x (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Overflow event |
| • SSC MCx UF | SSC Main Counter x Underflow: Underflow event at the main counter x (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Underflow event |
| • SSC BCx OF | SSC Batch Counter x Overflow: Overflow event at the SSC batch counter x (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Overflow event |
| • SSC BCx UF | SSC Batch Counter x Underflow: Underflow event at the SSC batch counter x (x: 1...4) | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: no event • 0x1: Underflow event |

Mapping: Counter Data and Status

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	SSC Main Counter Value (Word 0)															
n+1	SSC Main Counter Value (Word 1)															
n+2	SSC Batch Counter Value															
n+3	res.	res.	res.	res.	res.	res.	SSC MC OF	SSC MC UF	res.	res.	res.	res.	res.	res.	SSC BC OF	SSC BC UF

Legend:

- SSC Main Counter Value current counter value of the SSC main counter 2 WORD / ro • 0x0000 0000: 0
...
• 0xFFFF FFFE: 4294967294
- SCC Batch Counter Value current counter value of the SSC batch counter 1 WORD / ro • 0x0000: 0
...
• 0xFFFE: 65534
- SSC MC OF SSC Main Counter Overflow: Overflow event at the SSC main counter 1 BIT / ro • 0x0: no event
• 0x1: Overflow event
- SSC MC UF SSC Main Counter Underflow: Underflow event at the SSC main counter 1 BIT / ro • 0x0: no event
• 0x1: Underflow event
- SSC BC OF SSC Batch Counter SSC Overflow: Overflow event at the SSC batch counter 1 BIT / ro • 0x0: no event
• 0x1: Overflow event
- SSC BC UF SSC Batch Counter Overflow: Underflow event at the SCC batch counter 1 BIT / ro • 0x0: no event
• 0x1: Underflow event

11.1.1.2 Digital Input Configuration (100 - 131)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
100...103	DI Ch00 Configuration															
104...107	DI Ch01 Configuration															
108...111	DI Ch02 Configuration															
112...115	DI Ch03 Configuration															
116...119	DI Ch04 Configuration															
120...123	DI Ch05 Configuration															
124...127	DI Ch06 Configuration															
128...131	DI Ch07 Configuration															

Legend:

- DI Chx Configuration Configuration of the digital input channel Chx (x: 01...08) 4 WORD / rw Per digital input channel: [Mapping: Filter Settings \(→ □ 62\)](#)

Mapping: Filter Settings

Word (offset)	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	reserved								res.	res.	res.	res.	res.	res.	res.	In- vert
n+1	reserved								res.	res.	res.	res.	res.	res.	res.	Hold Level
n+2	Debounce Time															
n+3	Hold Time															

Legend:

- | | | | |
|-----------------|--|-------------|---|
| • Invert | signal inversion | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: do not invert (default) • 0x1: invert |
| • Hold Level | Signal level to be maintained | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH (default) |
| • Debounce Time | Debounce time (value in *0.1 milliseconds) | 1 WORD / rw | <ul style="list-style-type: none"> • 0x0000: 0 ms (default) • ... • 0x01F4: 50 ms |
| • Hold Time | Hold time (value in *0.1 milliseconds) | 1 WORD / rw | <ul style="list-style-type: none"> • 0x0000: 0 ms (default) • ... • 0xEA60: 600 ms |

11.1.1.3 Counter Configuration (200 - 235)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
200...208	Counter 1: Counter Configuration (→ Mapping: Counter Configuration  64)															
209...217	Counter 2: Counter Configuration (→ Mapping: Counter Configuration  64)															
218...226	Counter 3: Counter Configuration (→ Mapping: Counter Configuration  64)															
227...235	Counter 4: Counter Configuration (→ Mapping: Counter Configuration  64)															

Mapping: Counter Configuration

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	Counter Mode															
n+1	Pin 2 Function															
n+2	Counter Direction Select															
n+3	Main Threshold (Word 0)															
n+4	Main Threshold (Word 1)															
n+5	Batch Threshold															
n+6	Force Main Counter (Word 0)															
n+7	Force Main Counter (Word 1)															
n+8	Force Batch Counter															

Legend:

- Counter Mode

Operating mode of the counter module

1 WORD / rw

- 0x0000: CTU - up counter (default)
 - 0x0001: CTD – down counter
 - 0x0002: CTUD – up and down counter
 - 0x0003: CTDIR – up or down counter
- Pin 2 Function

Pin 2 function of the port

1 WORD / rw

- 0x0000: N/C - no function (default)
 - 0x0001: counter edge input 2 – counting input
 - 0x0002: count direction – select counting direction
 - 0x0003: reset main + batch counter - reset counter module
 - 0x0004: Disable main + batch counter – disable counter module
- Counter Direction Select

Instance for selecting the counting direction

1 WORD / rw

- 0x0000: pin 2 (default)
 - 0x0001: PLC
- Main Threshold

Threshold CT of the main counter
 MainThreshold = 0x01234567
 • MainThreshold[0] = 0x0123
 • MainThreshold[1] = 0x4567

2 WORD / rw

- 0x0000 0001: 1
 - ...
 - 0xFFFF FFFF: 4294967295 (default)
- Batch Threshold

Threshold CTb of the batch counter

1 WORD / rw

- 0x0001: 1
 - ...
 - 0xFFFF: 65535 (default)
- Force Main Counter

Set counter value of the main counter
 ForceMainCounter = 0x01234567
 • ForceMainCounter[0] = 0x0123
 • ForceMainCounter[1] = 0x4567

2 WORD / rw

- 0x0000 0000: 0 (default)
 - ...
 - 0xFFFF FFFE: 4294967294
- Force Batch Counter

Set counter value of the batch counter

1 WORD / rw

- 0x0000: 0 (default)
 - ...
 - 0xFFFFE: 65534

11.1.1.4 Counter Control (300 - 327)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
300...306	Counter1: Output Counter (→ Mapping: Counter Control ▢ 66)															
307...313	Counter 2: Output Counter (→ Mapping: Counter Control ▢ 66)															
314...320	Counter 3: Output Counter (→ Mapping: Counter Control ▢ 66)															
321...327	Counter 4: Output Counter (→ Mapping: Counter Control ▢ 66)															

Mapping: Counter Control

[illegible]

Legend:

- | | | | |
|-------------|---|-------|--|
| • DIS | Disable Counter: disable main counter + batch counter | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: disable main and batch counter |
| • DIR | Counter Direction: Set counting direction (valid only for counter mode CTDIR) | 1 BIT | <ul style="list-style-type: none"> • 0x0: up • 0x1: down |
| • RST MC OV | Reset Main Counter Overflow: Reset counter event overflow of the main counter | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: Rest overflow event |
| • RST MC UV | Reset Main Counter Underflow: Reset counter event underflow of the main counter | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: Reset underflow event |
| • RST BC OV | Reset Batch Counter Overflow: Reset counter event overflow of the batch counter | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: Rest overflow event |
| • RST BC UV | Reset Batch Counter Underflow: Reset counter event underflow of the batch counter | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: Reset underflow event |
| • RST CT | Reset Counter Module: Reset main counter and batch counter to initial value | 1 BIT | <ul style="list-style-type: none"> • 0x0: no action • 0x1: reset main + batch counter and counter events to overflow/underflow |

11.1.1.5 Block Configuration (400 - 413)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
400	reserved								DI Ch0 7 INV	DI Ch0 6 INV	DI Ch0 5 INV	DI Ch04 INV	DI Ch03 INV	DI Ch02 INV	DI Ch01 INV	DI Ch00 INV
401	reserved								DI Ch0 7 HL	DI Ch0 6 HL	DI Ch0 5 HL	DI Ch04 HL	DI Ch03 HL	DI Ch02 HL	DI Ch01 HL	DI Ch00 HL
402	reserved								res.	res.	res.	res.	CT4 DIS	CT3 DIS	CT2 DIS	CT1 DIS
403	reserved								res.	res.	res.	res.	CT4 DIR	CT3 DIR	CT2 DIR	CT1 DIR
404	reserved								res.	res.	res.	res.	CT4 RST MC OV	CT3 RST MC OV	CT2 RST MC OV	CT1 RST MC OV
405	reserved								res.	res.	res.	res.	CT4 RST MC UV	CT3 RST MC UV	CT2 RST MC UV	CT1 RST MC UV
406	reserved								res.	res.	res.	res.	CT4 RST BC OV	CT3 RST BC OV	CT2 RST BC OV	CT1 RST BC OV
407	reserved								res.	res.	res.	res.	CT4 RST BC UV	CT3 RST BC UV	CT2 RST BC UV	CT1 RST BC UV
408	reserved								res.	res.	res.	res.	CT4 RST	CT3 RST	CT2 RST	CT1 RST
409	DO Ch07 COML		DO Ch06 COML		DO Ch05 COML		DO Ch04 COML		DO Ch03 COML		DO Ch02 COML		DO Ch01 COML		DO Ch00 COML	
410	DO Ch03 OutSel				DO Ch02 OutSel				DO Ch01 OutSel				DO Ch00 OutSel			
411	DO Ch07 OutSel				DO Ch06 OutSel				DO Ch05 OutSel				DO Ch04 OutSel			
412	reserved								res.	res.	res.	res.	SSC 4 ML RST	SSC 3 ML RST	SSC 2 ML RST	SSC 1 ML RST
413	reserved								res.	res.	res.	res.	SSC 4 BL RST	SSC 3 BL RST	SSC 2 BL RST	SSC 1 BL RST

Legend:

- DI1 INV Pin 4: signal inversion 1 BIT • 0x0: do not invert (default)
• 0x1: invert
- DI2 INV Pin 2: signal inversion 1 BIT • 0x0: do not invert (default)
• 0x1: invert
- DI1 HL Pin 4: signal level to be maintained 1 BIT • 0x0: LOW
• 0x1: HIGH (default)
- DI2 HL Pin 2: signal level to be maintained 1 BIT • 0x0: LOW
• 0x1: HIGH (default)
- DIS Disable Counter: disable main counter + batch counter 1 BIT • 0x0: no action (default)
• 0x1: disable main and batch counter
- DIR Counter Direction Set counting direction (valid only for counter mode CTDIR) 1 BIT • 0x0: up (default)
• 0x1: down

• RST MC OV	Reset Main Counter Overflow: Reset counter event overflow of the main counter	1 BIT	• 0x0: no action (default) • 0x1: Rest overflow event
• RST MC UV	Reset Main Counter Underflow: Reset counter event underflow of the main counter	1 BIT	• 0x0: no action (default) • 0x1: reset underflow event
• RST BC OV	Reset Batch Counter Overflow: Reset counter event overflow of the batch counter	1 BIT	• 0x0: no action (default) • 0x1: rest overflow event
• RST BC UV	Reset Batch Counter Underflow: reset counter event underflow of the batch counter	1 BIT	• 0x0: no action (default) • 0x1: reset underflow event
• RST CT	Reset main counter and batch counter to initial value	1 BIT	• 0x0: no action (default) • 0x1: reset main + batch counter and counter events to overflow/underflow
• DO Chxx COML			•
• DO Chxx OutSel			•
• SSCx ML RST			•
• SSCy BL RST			•

11.1.1.6 Byte Swap (500)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
500	Byte Swap															

Legend:

- Byte Swap
- Arrangement of the bytes in the data tables
- 1
WORD /
rw
- 0x0000: Big endian (default)
 - 0xFFFF: Little endian

11.1.1.7 Connection Timeout (510)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
510	Connection Timeout															

Legend:

- Connection Timeout Max. value for connection timeouts
(value in ms)
- 1 WORD / • 20: 20 ms
rw ...
 • 30000: 30000 ms (default)
 ...
 • 60000: 60000 ms

11.1.1.8 DI DO Channel Mapping (550)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
550	reserved								res.	res.	res.	res.	res.	res.	res.	DI- DOCM

Legend:

- DIDOCM DI/DO Channel Mapping: Order of the process data in the registers 0, 400, 401, 409, 410, 411, 1000 und 1010 1 BIT
 - 0x0: pin-based (default)
 - 0x1: port-based

Mapping: pin-based

Digital input channels:

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	res.	res.	res.	res.	res.	res.	res.	res.	DI Ch08	DI Ch06	DI Ch04	DI Ch02	DI Ch07	DI Ch05	DI Ch03	DI Ch01

Digital outputs

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	res.	res.	res.	res.	res.	res.	res.	res.	DO Ch08	DO Ch06	DO Ch04	DO Ch02	DO Ch07	DO Ch05	DO Ch03	DO Ch01

Mapping: port-based

Digital input channels:

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	res.	res.	res.	res.	res.	res.	res.	res.	DI Ch08	DI Ch07	DI Ch06	DI Ch05	DI Ch04	DI Ch03	DI Ch02	DI Ch01

Digital output channels:

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	res.	res.	res.	res.	res.	res.	res.	res.	DO Ch08	DO Ch07	DO Ch06	DO Ch05	DO Ch04	DO Ch03	DO Ch02	DO Ch01

11.1.1.9 System Command (600)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
600	Command ID															

Legend:

- Command ID Identifier of the command
- 1 • 0x0040: Restart the device.
- WORD / • 0x0050: Resetting the device
- wo

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
700	res.	res.	res.	res.	Batc h SSC 4	Batc h SSC 3	Batc h SSC 2	Batc h SSC 1	res.	res.	res.	res.	Main SSC 4	Main SSC 3	Main SSC 2	Main SSC 1

- | | | | |
|---------------|--|------------|---|
| • Main SSC x | Status of the main counter switching channel x | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
| • Batch SSC y | Status of the batch counter switching channel y of the batch counter | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |

11.1.1.11 SSC Configuration (710 - 785)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
710...728	Configuration SSC 1															
729...747	Configuration SSC 2															
748...766	Configuration SSC 3															
767...785	Configuration SSC 4															

Legend:

- Configuration SSC x Configuration of the switching channel x (x: 1...4) 19 BYTE / rw Pro SSC : Mapping: SSC Configuration (→ 75)

Mapping: SSC Configuration

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	SSC Main Mode															
n+1	SSC Main Logic															
n+2	SSC Main Single Point Edge															
n+3	SSC Main SP1 (Word 0)															
n+4	SSC Main SP1 (Word 1)															
n+5	SSC Main SP2 (Word 0)															
n+6	SSC Main SP2 (Word 1)															
n+7	SSC Main Switch Delay															
n+8	SSC Main Reset Delay															
n+9	SSC Main Hysteresis (Word 0)															
n+10	SSC Main Hysteresis (Word 1)															
n+11	SSC Batch Mode															
n+12	SSC Batch Logic															
n+13	SSC Batch Single Point Edge															
n+14	SSC Batch SP1															
n+15	SSC Batch SP2															
n+16	SSC Batch Switch Delay															
n+17	SSC Batch Reset Delay															
n+18	SSC Batch Hysteresis															

Legend:

- **SSC Main Mode** SSC main counter - switching mode of the switching channel 1 WORD / rw • 0x0000: Deactivated (default)
• 0x0001: Single-point mode
• 0x0002: Latch mode
• 0x0003: Two-point mode
• 0x0004: Window mode
- **SSC Main Logic** SSC main counter - switching logic of the switching channel 1 WORD / rw • 0x0000: High Active (default)
• 0x0001: Low Active
- **SSC Main Single Point Edge** SSC main counter - reaction to increasing of decreasing counter values 1 WORD / rw • 0x0000: Rising counter value (default)
• 0x0001: falling counter value
- **SSC Main SP1** SSC main counter - switching point 1 2 WORD / rw • 0x0000 0000: 0
...
• 0xFFFF FFFF: 4294967295 (default)
- **SSC Main SP2** SSC main counter - switch point 2 2 WORD / rw • 0x0000 0000: 0
...
• 0xFFFF FFFE: 4294967294 (default)
- **SSC Main Switch Delay** SSC main counter – switch delay (Wert in ms) 1 WORD / rw • 0x0000: 0 ms (default)
...
• 0xFFFF: 65535 ms
- **SSC Main Reset Delay** SSC main counter – reset delay (value in ms) 1 WORD / rw • 0x0000: 0 ms (default)
...
• 0xFFFF: 65535 ms
- **SSC Main Hysteresis** SSC main counter – hysteresis 2 WORD / rw • 0x0000 0000: 0 (default)
...
• 0xFFFF FFFF: 4294967295

• SSC Batch Mode	SSC batch counter - switching mode of the switching channel	1 WORD / rw	• 0x0000: Deactivated (default) • 0x0001: Single-point mode • 0x0002: Latch mode • 0x0003: Two-point mode • 0x0004: Window mode
• SSC Batch Logic	SSC batch counter - switching logic of the switching channel	1 WORD / rw	• 0x0000: High Active (default) • 0x0001: Low Active
• SSC Batch Single Point Edge	SSC batch counter - reaction to increasing or decreasing counter values	1 WORD / rw	• 0x0000: Rising counter value (default) • 0x0001: falling counter value
• SSC Batch SP1	SSC batch counter - switch point 1	1 WORD / rw	• 0x0000: 0 ... • 0xFFFF: 65535 (default)
• SSC Batch SP2	SSC batch counter - switch point 2	1 WORD / rw	• 0x0000: 0 ... • 0xFFFE: 65534 (default)
• SSC Batch Switch Delay	SSC main counter – switch delay (Wert in ms)	1 WORD / rw	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• SSC Batch Reset Delay	SSC batch counter – reset delay (value in ms)	1 WORD / rw	• 0x0000: 0 ms (default) ... • 0xFFFF: 65535 ms
• SSC Batch Hysteresis	SSC batch counter – hysteresis	1 WORD / rw	• 0x0000: 0 (default) ... • 0xFFFF: 65535

11.1.1.12 SSC Reset Latch (900 - 907)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
900...901	Reset Latch SSC 1: Mapping: SSC Reset Latch (→ □ 78)															
902...903	Reset Latch SSC 2: Mapping: SSC Reset Latch (→ □ 78)															
904...905	Reset Latch SSC 3: Mapping: SSC Reset Latch (→ □ 78)															
906...907	Reset Latch SSC 4: Mapping: SSC Reset Latch (→ □ 78)															

Legend:

- Reset Latch SSC x Reset the switching channel SSC x (x: 1...4); only available when SSC is in latch mode 2 BYTE / rw Pro SSC: [Mapping: SSC Reset Latch \(→ □ 78\)](#)

Mapping: SSC Reset Latch

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	reserved								res.	res.	res.	res.	res.	res.	res.	RST SSC MA LA
n+1	reserved								res.	res.	res.	res.	res.	res.	res.	RST SSC BA LA

Legend:

- | | | | |
|-----------------|---|------------|--|
| • RST SSC MA LA | Reset SSC Main Latch: Reset switching channel batch counter (only effective if parameter [SSC Main Mode] = [Latch]) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0 → 0x1: reset switching channel main counter • otherwise: no action |
| • RST SSC BA LA | Reset SSC Batch Latch: Reset switching channel batch counter (only effective if parameter [SSC Batch Mode] = [Latch]) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0 → 0x1: reset switching channel batch counter • otherwise: no action |

11.1.1.13 Digital Output (1000)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1000	reserved								DO Ch08	DO Ch07	DO Ch06	DO Ch05	DO Ch04	DO Ch03	DO Ch02	DO Ch01

Legend:

- | | | | |
|----------|---|------------|---|
| • DO Chx | Signal level of the digital output channel Chx (x: 01...08) | 1 BIT / rw | <ul style="list-style-type: none"> • 0x0: LOW • 0x1: HIGH |
|----------|---|------------|---|

11.1.1.14 Digital Output Qualifier (1010)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1010	reserved								QDO Ch08	QDO Ch07	QDO Ch06	QDO Ch05	QDO Ch04	QDO Ch03	QDO Ch02	QDO Ch01

Legend:

- QDO Chx Qualifier DO: Validity of the value of the digital output channel Chx (x: 01...08) 1 BIT / ro
- 0x0: valid value
- 0x1: invalid value

11.1.1.15 Digital Output Configuration (1100 - 1123)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1100... 1102	DO Ch01 Configuration															
1103... 1105	DO Ch02 Configuration															
1106... 1108	DO Ch03 Configuration															
1109... 1111	DO Ch04 Configuration															
1112... 1114	DO Ch05 Configuration															
1115... 1117	DO Ch06 Configuration															
1118... 1120	DO Ch07 Configuration															
1121... 1123	DO Ch08 Configuration															

Legend:

- DO Chx Configuration Configuration of the digital output channel Chx (x: 01...08) 3 WORD / rw Per digital output channel: [Mapping: Output Configuration \(→ □ 82\)](#)

Mapping: Output Configuration

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
n	Output Select															
n+1	Output State Comm Lost															
n+2	Current Limit															

Legend:

- Output Select** Control instance for the digital output channel 1 WORD / rw
 - 0x0000: PLC (default)
 - 0x0001: Counter 1 SSC Main
 - 0x0002: Counter 1 SSC Batch
 - 0x0003: Counter 2 SSC Main
 - 0x0004: Counter 2 SSC Batch
 - 0x0005: Counter 3 SSC Main
 - 0x0006: Counter 3 SSC Batch
 - 0x0007: Counter 4 SSC Main
 - 0x0008: Counter 4 SSC Batch
- Output State Comm lost** Fallback value of the digital output channel in case the connection is interrupted 1 WORD / rw
 - 0x0000: LOW (default)
 - 0x0001: HIGH
- Current Limit** Max. output current of the digital output channel (value in mA) 1 WORD / rw
 - 0x0000: 0 mA
 - ...
 - 0x07D0: 2000 mA (default)
 - ...
 - 0x0E10: 3600 mA

11.1.1.16 Diagnostic Data (2000 - 2007)

Register	Bit															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
2000	reserved								res.	res.	res.	res.	res.	PSE UA Port 3&4	PSE UA Port 1&2	PSE US
2001	Uptime															
2002	Disconnection Counter															
2003	US Voltage															
2004	US Current															
2005	UA Voltage															
2006	UA Port 1&2 Current															
2007	UA Port 3&4 Current															

Legend:

- | | | | |
|-------------------------|--|-------------|---|
| • PSE US | Power Status Error US: status of the US supply voltage | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: No error • 0x1: Error |
| • PSE UA Port 1&2 | Power Status Error UA Port 1&2: status of the supply voltage at ports 1&2 | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: No error • 0x1: Error |
| • PSE UA Port 3&4 | Power Status Error UA Port 3&4: status of the supply voltage at ports 3&4 | 1 BIT / ro | <ul style="list-style-type: none"> • 0x0: No error • 0x1: Error |
| • Uptime | Time since the last start of the device (value in minutes) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 min • ... • 0xFFFF: 65535 min |
| • Disconnection Counter | The counter for connection interruptions (by user or by connection time-out) since the last start of the device; The counter is reset when the device is restarted | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 interruptions • ... • 0xFFFF: 65535 interruptions |
| • US Voltage | Present voltage value of the US supply voltage (value in mV) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 mV • ... • 0x9C40: 40000 mV |
| • US Current | Present current intensity value of the US supply voltage (value in mA) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 mA • ... • 0x0E10: 3600 mA |
| • UA Voltage | Present voltage value of the UA supply voltage (value in mV) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 mV • ... • 0x9C40: 40000 mV |
| • UA Port 1&2 Current | Present current intensity value of the UA supply voltage - ports 1&2 (value in mA) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 mA • ... • 0x0E10: 3600 mA |
| • UA Port 3&4 Current | Present current intensity value of the UA supply voltage - ports 3&4 (value in mA) | 1 WORD / ro | <ul style="list-style-type: none"> • 0x0000: 0 mA • ... • 0x0E10: 3600 mA |